

SONGMICS ULTB543B01

SONGMICS 5.2-Gallon (20L) Stainless Steel Step Trash Can User Manual

Model: ULTB543B01 | Brand: SONGMICS

INTRODUCTION

Thank you for choosing the SONGMICS 5.2-Gallon (20L) Stainless Steel Step Trash Can. This manual provides essential information for the proper setup, operation, and maintenance of your new trash can. Please read these instructions carefully before use and retain them for future reference.

PRODUCT OVERVIEW

The SONGMICS ULTB543B01 trash can is designed for convenience and durability, featuring a compact size suitable for various spaces and a sleek stainless steel finish.

- **Compact Design:** Ideal 5.2-gallon (20L) capacity, perfect for smaller households or specific rooms like kitchens, bathrooms, or offices.
- **Durable Construction:** Made with a stainless steel body, ensuring sturdiness, rust resistance, and easy cleaning.
- **Soft-Close Lid:** The lid closes silently and softly, preventing noise and extending product life.
- **Stay-Open Function:** The lid can be manually lifted to a 90° angle to remain open for extended use, simplifying tasks like food preparation or waste disposal.
- **Removable Inner Bucket:** Features a large opening and integrated handles for easy removal, cleaning, and trash bag replacement.
- **Easy Mobility:** Equipped with a convenient back handle for effortless relocation.
- **Non-Slip Base:** Includes non-slip pads on the base to ensure stability and prevent tipping.
- **Included Accessories:** Comes with 15 liner bags (code: KRB30A) for immediate use.

SETUP

1. **Unpack the Product:** Carefully remove all components from the packaging. Ensure all parts are present: the outer stainless steel bin, the inner plastic bucket, and the included trash bags.
2. **Insert Inner Bucket:** Place the black inner plastic bucket into the stainless steel outer bin. Ensure it sits securely at

the bottom.

3. **Attach Trash Bag:** Drape a trash bag (such as the included SONGMICS KRB30A liner bags or standard 5.2-gallon/20L bags) over the rim of the inner bucket. Tuck the edges of the bag into the designated slots or under the rim to secure it. The inner bucket features a hole to help secure the bag in place, preventing it from slipping off.
4. **Position the Trash Can:** Place the trash can in your desired location. The compact design and wall-friendly opening mechanism allow it to be placed close to walls without the lid hitting them when opened.

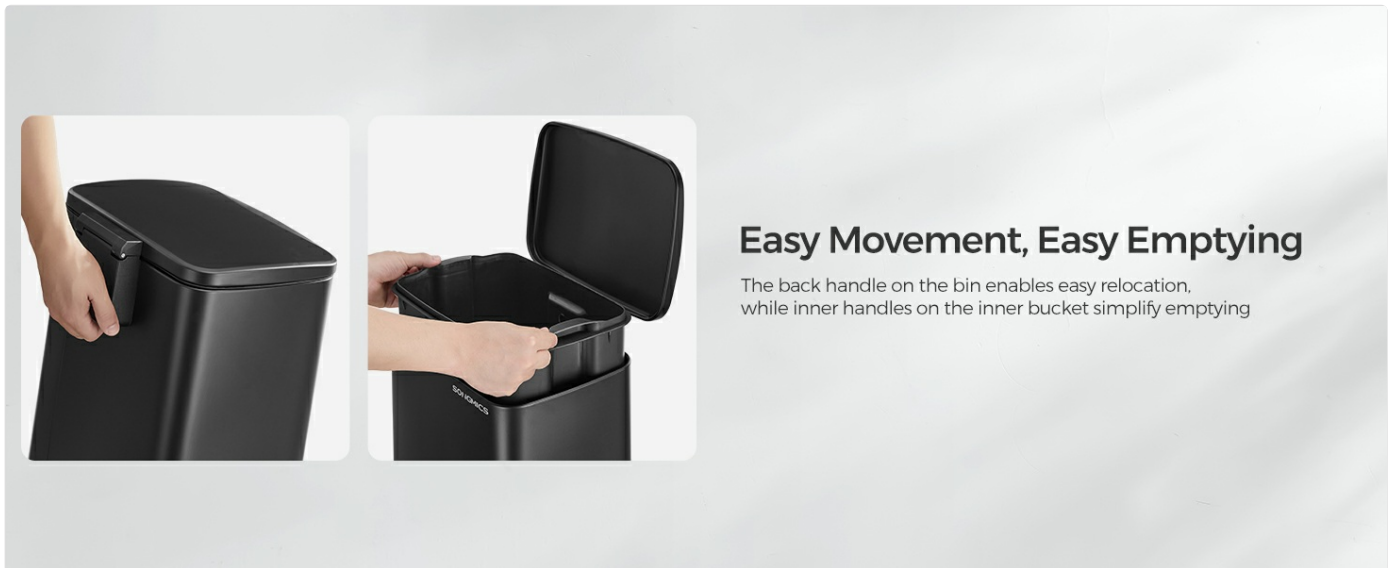



Image: Securing a trash bag in the inner bucket. The inner bucket has a hole to help secure the bag.

OPERATING INSTRUCTIONS

- **Opening the Lid (Foot Pedal):** Gently press down on the foot pedal located at the base of the trash can. The lid will open smoothly. Release the pedal to allow the lid to close softly.
- **Opening the Lid (Manual & Stay-Open Function):** To keep the lid open for longer periods, manually lift the lid to a 90° angle. It will click into a catch point and remain open. To close, gently push the lid down manually.
- **Disposing of Waste:** Place waste into the inner bucket. Ensure the lid is closed after use to contain odors and maintain hygiene.

Stays Open

Keep the lid open by lifting it to 90°

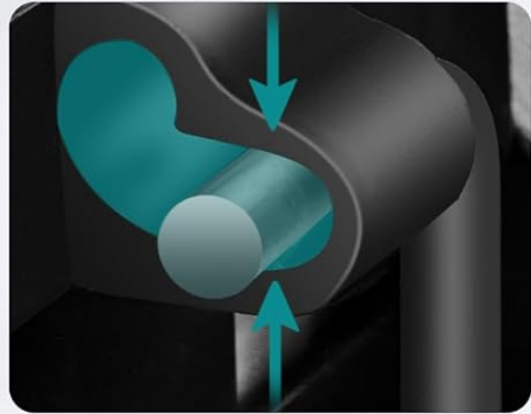

To enable "Stay Open",
manually open the lid to a catch point



To disable "Stay Open",
manually close the lid

Image: Illustration of the lid's 90-degree stay-open feature.



Wall-Friendly Opening

The lid is designed to avoid hitting or scratching the wall when stepped on to open

Image: The soft-close lid mechanism ensures quiet operation.

MAINTENANCE

- **Cleaning the Outer Bin:** Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners or scouring pads, which can scratch the surface. Dry thoroughly with a soft cloth to prevent water spots.
- **Cleaning the Inner Bucket:** Periodically remove the inner bucket and wash it with warm, soapy water. Rinse thoroughly and allow it to dry completely before placing it back into the outer bin.
- **Replacing Trash Bags:** When the trash bag is full, remove the inner bucket, tie the bag securely, and dispose of it. Replace with a new liner bag.
- **Foot Pedal Mechanism:** The foot pedal mechanism is designed for durability. Avoid excessive force when operating the pedal. If it becomes stiff, ensure no debris is obstructing its movement.



Image: The inner bucket with handles allows for easy removal and emptying.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lid does not close softly.	Obstruction in the soft-close mechanism or lid hinge.	Check for any debris or objects blocking the lid's movement. Ensure the lid is not forced closed.
Foot pedal is stiff or unresponsive.	Debris under the pedal or mechanism.	Inspect the pedal area for any obstructions. Clean if necessary.
Trash bag slips down into the bin.	Incorrect bag size or improper securing.	Ensure you are using 5.2-gallon (20L) bags. Secure the bag properly by tucking it into the inner bucket's rim or designated slots.
Unpleasant odors persist.	Inner bucket needs cleaning or lid is not fully closed.	Clean the inner bucket thoroughly. Ensure the lid closes completely after each use. Consider using odor-absorbing products if needed.

SPECIFICATIONS

Model Number:	ULTB543B01
Brand:	SONGMICS
Capacity:	5.2 Gallons (20 Liters)
Color:	Black
Material:	Stainless Steel, PP Plastic
Opening Mechanism:	Foot Pedal, Soft-Close Lid
Shape:	Rectangular
Product Dimensions (L x W x H):	13.4" x 12.5" x 16.4" (34.1 cm x 31.9 cm x 41.8 cm)
Item Weight:	6.2 Pounds (2.8 kg)
Included Components:	1 x Trash Can, 15 x Liner Bags (KRB30A)

Fits Small Spaces



Image: Detailed dimensions of the trash can and its inner bucket.

SAFETY INFORMATION

- Keep the product away from open flames or high heat sources.
- Do not allow children to play with the trash can or its components.
- Avoid placing heavy objects on the lid to prevent damage to the soft-close mechanism.

- Ensure the trash can is placed on a stable, level surface to prevent tipping.
- Do not use harsh chemicals or abrasive materials for cleaning, as this may damage the finish.

WARRANTY AND SUPPORT

SONGMICS products are designed for quality and durability. For any questions, concerns, or warranty claims, please contact SONGMICS customer support through the retailer's platform or the official SONGMICS website. Please have your model number (ULTB543B01) and purchase information ready.

