

[manuals.plus](#) /› [JOYIN](#) /› **JOYIN 32-Piece Kids Tool Set and 4-in-1 Electronic Tool Set Instruction Manual****JOYIN B0DM9B5GS7**

## JOYIN 32-Piece Kids Tool Set and 4-in-1 Electronic Tool Set Instruction Manual

Model: B0DM9B5GS7

### 1. PRODUCT OVERVIEW

The JOYIN 32-Piece Kids Tool Set and 4-in-1 Electronic Tool Set is designed to provide children with an engaging and educational pretend play experience. This comprehensive set includes a variety of hand tools, a construction backpack, a helmet, safety goggles, and electronic power tools such as a drill, jigsaw, reciprocating saw, and flashlight. It encourages imaginative role-play, helps develop fine motor skills, and introduces basic concepts of construction and repair in a safe, child-friendly manner.

### 2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before allowing children to use this product. Adult supervision is recommended at all times.

- This toy set is intended for pretend play only and is not suitable for real construction or repair tasks.
- Ensure all small parts are securely attached and accounted for to prevent choking hazards, especially for children under 3 years old.
- Do not use electronic tools near water or in wet conditions.
- Always ensure batteries are inserted correctly and removed when the toy is not in use for extended periods.
- The tools are designed with rounded edges and child-safe materials, but children should be instructed on proper handling to avoid accidental injury.



Image: Emphasizing safety awareness during play. The toy tools are designed without sharp points or edges for safe use by children.

### 3. PACKAGE CONTENTS

Your JOYIN Tool Set includes the following items:

- 1 x Tool Backpack
- 1 x Electronic Power Drill Toy (Orange)
- 1 x Replaceable Chuck for Power Drill
- 1 x Replaceable Saw for Power Drill
- 3 x Types of Replaceable Bits for Power Drill
- 1 x Construction Helmet
- 1 x Safety Goggles
- Various Hand Tools (e.g., hammer, pliers, wrenches, screwdriver, tape measure, C-clamp, utility knife)
- Assorted Play Parts (e.g., nuts, bolts, wood-like pieces)
- 1 x 4-in-1 Electronic Tool Base (Red)
- Interchangeable Attachments for 4-in-1 Tool: Jigsaw, Reciprocating Saw, Flashlight, Electric Drill



Image: Overview of the entire 32-piece tool set, showcasing all included components.



Image: A different perspective of the tool set, including the '32 pcs' label, confirming the quantity of items.

## 4. SETUP INSTRUCTIONS

### 4.1 Electronic Toy Drill (Orange) Battery Installation

The electronic toy drill requires 2 AA batteries (not included).

1. Locate the battery compartment on the handle of the electronic drill.
2. Using a small screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

### 4.2 Attaching Drill Bits to Electronic Toy Drill (Orange)

1. Select the desired drill bit or chuck.
2. Insert the base of the bit into the front opening of the drill until it clicks securely into place.
3. To remove, gently pull the bit straight out.

**Cultivate Kids**  
**Awareness Of Safety**

**No Sharp Point/sharp Edge, Safe For Kids To Play**

Image: Detailed view of the orange electronic drill, illustrating battery placement and interchangeable bits.

#### 4.3 4-in-1 Electronic Tool Set (Red) Assembly

The red electronic tool set features a single base unit with interchangeable heads for different functions.

1. Select the desired tool head (jigsaw, reciprocating saw, flashlight, or drill).
2. Align the head with the base unit and slide it into place until it locks securely.
3. To change the head, press the release button (if present) and slide the current head off, then attach a new one.
4. The flashlight and drill attachments may require separate battery installation (2 AA batteries each, not included) in their respective compartments.



Image: The red 4-in-1 tool set with its various interchangeable components.



Image: Visual guide for assembling the jigsaw attachment and its power switch.



Image: Visual guide for assembling the reciprocating saw and flashlight attachments, including battery installation for the flashlight.

## 5. OPERATING INSTRUCTIONS

### 5.1 Using the Electronic Toy Drill (Orange)

- **Power On/Off:** Press the trigger on the handle to activate the drill. Release to stop.
- **Direction Switch:** Use the switch located near the trigger to change the rotation direction (clockwise for tightening, counter-clockwise for loosening).
- **Interchangeable Bits:** Attach the desired drill bit, chuck, or saw for different pretend tasks.

### 5.2 Using the Tape Measure

- Gently pull the yellow tape from the casing to extend it.
- To retract, press the button on the side of the casing or manually guide the tape back in.



Image: Detailed view of the rolling tape measure, made with fabric material for safety.

### 5.3 Using the 4-in-1 Electronic Tools (Red)

- **Jigsaw:** Attach the jigsaw head. Press the power button to activate the pretend cutting motion.
- **Reciprocating Saw:** Attach the reciprocating saw head. Press the power button for pretend sawing action.
- **Flashlight:** Attach the flashlight head. Press the power button to turn the light on/off.
- **Electric Drill:** Attach the drill head. Press the power button to activate the pretend drilling motion.



Image: A child demonstrating play with the red electronic tools, including the reciprocating saw, flashlight, jigsaw, and electric drill.

## 6. CARE AND MAINTENANCE

- **Cleaning:** Wipe all tools with a damp cloth and mild soap if necessary. Do not immerse electronic tools in water.
- **Storage:** Store the tools in the provided backpack or a dry, cool place away from direct sunlight when not in use.
- **Battery Removal:** Always remove batteries from electronic tools if they will not be used for an extended period to prevent leakage and damage.
- **Inspection:** Periodically inspect all parts for damage or wear. Discontinue use if any part is broken or compromised.

## 7. TROUBLESHOOTING

- **Electronic Tool Not Working:**
  - Check if batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.

- Ensure the tool head is securely attached to the base unit (for 4-in-1 tools).

- **Parts Not Fitting:**

- Ensure you are using the correct parts for the intended assembly.
- Do not force parts together. If a part does not fit easily, re-check the instructions.

## 8. PRODUCT SPECIFICATIONS

- **Model Number:** B0DM9B5GS7
- **Brand:** JOYIN
- **Number of Pieces:** 32 (including backpack and electronic tools)
- **Electronic Tool Power:** 2 x AA batteries per electronic tool (not included)
- **Recommended Age:** 3+ years

## 9. WARRANTY AND CUSTOMER SUPPORT

JOYIN is committed to ensuring customer satisfaction. If you have any questions, concerns, or require assistance with your product, please contact JOYIN customer support through the retailer's platform or the official JOYIN website. Please have your model number (B0DM9B5GS7) available when contacting support.

### Related Documents - B0DM9B5GS7

	<p><a href="#"><u>Trampoline Sprinkler Installation and Usage Guide</u></a></p> <p>Instructions for installing and using a trampoline sprinkler for outdoor summer fun. Learn how to connect the sprinkler to your water source and attach it to your trampoline.</p>
---	---