

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [RGV](#) /

> [RGV Touch Electric Kettle 1.7L User Manual](#)

RGV 111420

RGV Touch Electric Kettle 1.7L User Manual

Model: 111420

INTRODUCTION

Thank you for choosing the RGV Touch Electric Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.
- This appliance is for household use only.
- Do not fill below the MIN level or above the MAX level indicated inside the kettle.

PRODUCT OVERVIEW

Familiarize yourself with the components of your RGV Touch Electric Kettle.



Image: RGV Touch Electric Kettle with its lid open, revealing the stainless steel interior and clear water level markings. The touch control panel is visible on the front.

1. Lid
2. Spout with filter
3. Handle
4. Water level indicator (internal)
5. Touch control panel
6. Power base with cord storage
7. Stainless steel interior







Image: Front view of the RGV Touch Electric Kettle, highlighting its sleek white exterior and the integrated black touch control panel.

SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.
2. **First Use Cleaning:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. Filling the Kettle

- Press the lid release button to open the lid.
- Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX mark (1.7 Liters).
- Close the lid firmly until it clicks into place.

2. Powering On/Off

- Place the kettle securely on its power base.
- The touch control panel will illuminate.
- Press the power button (**U**) on the touch panel to turn the kettle on or off.

3. Selecting Temperature Presets

The RGV Touch Electric Kettle offers several pre-set temperature options for various beverages:

- After powering on, select your desired temperature by tapping the corresponding icon or temperature setting on the touch panel. Available temperatures range from 40°C to 100°C.
- The kettle will automatically heat the water to the selected temperature and then switch off.

4. Using Precise Temperature Control

For specific needs, you can precisely set the water temperature between 40°C and 100°C.

- After powering on, use the temperature adjustment buttons (e.g., '+' and '-' or specific temperature icons) to set the exact desired temperature.
- Confirm your selection, and the kettle will begin heating.

5. Keep Warm Function

The keep warm function maintains the water at your selected temperature for an extended period.

- After selecting a temperature and starting the heating process, activate the 'Keep Warm' function (if available as a separate button or integrated into temperature selection).

- The kettle will maintain the water at the target temperature until manually switched off or removed from the base for a prolonged period.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your kettle.

1. Exterior Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Ensure the power base and electrical connections remain dry.

2. Interior Cleaning (Descaling)

Mineral deposits (limescale) can build up over time, affecting performance. Descale your kettle regularly, especially in hard water areas.

- Fill the kettle with a mixture of white vinegar and water (1:2 ratio) or a commercial descaling solution according to product instructions.
- Bring the mixture to a boil and let it stand for at least 30 minutes, or longer if scale is heavy.
- Discard the solution and rinse the interior thoroughly with fresh water several times.
- For stubborn deposits, gently scrub with a non-abrasive brush.

3. Filter Cleaning

- The spout filter can be removed for cleaning. Gently pull it out.
- Rinse the filter under running water and brush away any deposits.
- Reinsert the filter securely after cleaning.

Care Instructions: Hand wash only for the kettle interior. Do not immerse the kettle or power base in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; Kettle not properly seated on base; No power at outlet; Kettle has boiled dry.	Check power plug; Ensure kettle is correctly placed on base; Check household fuse/breaker; Allow kettle to cool, then refill and restart.
Water tastes strange or has particles.	First use residues; Limescale buildup.	Perform first use cleaning (boil and discard water 2-3 times); Descale the kettle as per cleaning instructions.
Kettle switches off before boiling/reaching target temperature.	Limescale buildup; Faulty sensor.	Descale the kettle; If problem persists, contact customer support.
Lid does not close properly.	Obstruction; Damaged lid.	Check for any foreign objects preventing closure; Contact customer support if damaged.

SPECIFICATIONS

Brand: RGV

Model Number: 111420

Color: White

Dimensions (L x W x H): 21 x 16 x 27 cm

Capacity: 1.7 Liters

Power: 2200 Watts

Material: Stainless Steel (interior)

Special Feature: Temperature Control (40°C - 100°C), Keep Warm Function

Item Weight: 1.7 Kilograms

Recommended Use: Water Heating

WARRANTY AND SUPPORT

This RGV product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, service, or spare parts inquiries, please contact your local RGV authorized service center or the retailer where the product was purchased. Keep your proof of purchase for warranty claims.