

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Doro](#) /

› [Doro 8200 Plus 4G Smartphone User Manual](#)

## Doro 8200 Plus

# Doro 8200 Plus 4G Smartphone User Manual

Model: Doro 8200 Plus

## INTRODUCTION

Welcome to the Doro 8200 Plus 4G Smartphone user manual. This guide provides essential information for setting up, operating, and maintaining your new device. Please read this manual thoroughly to ensure proper use and to maximize your smartphone's features.

The Doro 8200 Plus is designed for ease of use, featuring an intuitive interface, large icons, and a dedicated assistance button for enhanced safety and connectivity.

## PACKAGE CONTENTS

Upon unboxing your Doro 8200 Plus, verify that all the following items are included:

- Doro 8200 Plus Smartphone
- Charging Dock
- USB-A to USB-C Cable
- Protective Case
- Quick Start Guide (may be separate)



Image: The Doro 8200 Plus smartphone, its charging dock, a USB-A to USB-C cable, and a protective case are displayed as the typical package contents.

## DEVICE OVERVIEW

Familiarize yourself with the physical components of your Doro 8200 Plus smartphone.



Image: The Doro 8200 Plus smartphone is shown from the front, resting in its charging dock. A black protective case is positioned beside it.

## Key Components:

- **Front Camera:** For video calls and selfies.
- **Display:** 6.1-inch touchscreen for interaction.
- **Volume Buttons:** Adjust media and call volume.
- **Power Button:** Turn the device on/off, lock/unlock screen.
- **USB-C Port:** For charging and data transfer.
- **Triple Camera System:** Located on the rear (16MP main, 2MP portrait, 2MP macro).
- **Assistance Button:** Dedicated button on the rear for emergency contacts.
- **Speaker/Microphone:** For audio output and input.

# SETUP

## 1. Inserting SIM and Micro SD Cards

Your Doro 8200 Plus uses Nano SIM cards. It also supports a Micro SD card for expanded storage up to 128 GB.

1. Power off the phone before inserting or removing cards.
2. Locate the SIM/SD card tray on the side of the device.
3. Use the provided SIM ejector tool to open the tray.
4. Place the Nano SIM card(s) and/or Micro SD card into the tray with the gold contacts facing down, ensuring they are correctly oriented.
5. Carefully reinsert the tray into the phone.

## 2. Initial Charging

Before first use, it is recommended to fully charge your Doro 8200 Plus.

- Connect the USB-C cable to the phone's charging port or place the phone in the charging dock.
- Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer.
- The battery indicator on the screen will show charging progress.

## 3. Powering On and Initial Configuration

1. Press and hold the Power button until the Doro logo appears.
2. Follow the on-screen instructions to select your language, connect to Wi-Fi, and set up your Google account.
3. During setup, you can choose between the **Doro Simplified Interface** or the **Classic Android Interface**.

## POSSIBILITÉ DE CHOISIR ENTRE L'INTERFACE SIMPLIFIÉE DORO ET L'INTERFACE ANDROID



Image: Two Doro 8200 Plus smartphones are displayed side-by-side, illustrating the difference between the Doro simplified user interface (left) with large, clear icons and the standard Android interface (right).



Image: A Doro 8200 Plus screen displays the simplified interface. Surrounding graphics highlight features like 64GB internal memory, adjustable icon sizes (small to maximum), and Clearsound compatibility for hearing aids. The package contents (charging dock and cover) are also depicted.

## OPERATING YOUR DORO 8200 PLUS

### Basic Navigation

- **Touchscreen:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Button:** Returns to the home screen.
- **Back Button:** Returns to the previous screen.
- **Recent Apps Button:** Shows recently used applications.

### Making Calls and Sending Messages

- **Calls:** Tap the "Call" icon, enter the number, or select a contact.

- **Messages:** Tap the "Messages" icon, select a contact or enter a number, then type your message.

## Using the Camera

The Doro 8200 Plus features a triple camera system (16MP main, 2MP portrait, 2MP macro) and a 5MP front camera.

1. Open the "Camera" application.
2. Select your desired mode (Photo, Video, Portrait, Macro).
3. Tap the shutter button to capture an image or start/stop recording.
4. The camera also supports QR code reading.

## Response by Doro Assistance Button

The dedicated assistance button on the rear of the device is a key safety feature.

# DORO 8200 PLUS UN COMPAGNON IDÉAL AU QUOTIDIEN !

Avec un son optimisé, le **Doro 8200 PLUS** offre un **réel confort d'utilisation** au quotidien. Vous resterez facilement **connectés** avec **vos proches** en choisissant l'interface qui vous correspond le mieux, **Android classique** ou **interface simplifiée Doro**



Image: The rear of the Doro 8200 Plus smartphone is shown, with a clear indication of the assistance button. An accompanying graphic illustrates the GPS location feature, emphasizing its role in emergency situations.

- When pressed, the button alerts pre-configured "responders" in the Response by Doro application.

- It sends your GPS location to these contacts.
- If a responder accepts the alert, a voice call is initiated to you.
- Ensure your emergency contacts are set up correctly in the Response by Doro app.

## Google Assistant and Applications

- **Google Assistant:** Access by saying "Hey Google" or tapping the microphone icon on the search bar.
- **Pre-installed Apps:** Includes Gmail, Maps, YouTube, and more.
- **Google Play Store:** Download and install additional applications.

## Connectivity

- **Wi-Fi:** Connect to wireless networks for internet access. Go to Settings > Network & internet > Wi-Fi.
- **Bluetooth:** Pair with wireless headphones, speakers, or other devices. Go to Settings > Connected devices > Bluetooth.
- **NFC (Near Field Communication):** For quick pairing and contactless payments. Enable in Settings > Connected devices > Connection preferences > NFC.
- **Wi-Fi Hotspot:** Share your phone's mobile data connection with other devices. Go to Settings > Network & internet > Hotspot & tethering > Wi-Fi hotspot.

## Adjusting Settings

- **Display:** Adjust brightness, font size, and display mode in Settings > Display.
- **Sound:** Customize ringtones, notification sounds, and volume levels in Settings > Sound & vibration.
- **Facial Recognition:** Set up facial unlock for convenient security in Settings > Security > Face unlock.

## MAINTENANCE

### Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid abrasive materials or harsh chemicals.

### Water Resistance (IP54)

The Doro 8200 Plus is rated IP54, meaning it is protected against dust ingress and splashing water from any direction. It is not designed for submersion in water. Avoid exposing the device to strong jets of water or prolonged contact with moisture.

### Battery Care

- Avoid extreme temperatures, as they can affect battery life.
- Do not leave the phone charging for extended periods after it is fully charged.
- Use only Doro-approved chargers and cables.

## Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to Settings > System > System update.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your Doro 8200 Plus.

Problem	Solution
Phone does not turn on.	Ensure the battery is charged. Connect to a charger for at least 30 minutes, then try powering on again.
Battery drains quickly.	Reduce screen brightness, close unused apps, disable Wi-Fi/Bluetooth when not in use. Check battery usage in Settings > Battery.
Cannot connect to Wi-Fi.	Ensure Wi-Fi is enabled. Restart your phone and router. Verify the Wi-Fi password.
Assistance button not working.	Check if emergency contacts are correctly configured in the Response by Doro app. Ensure the phone has network coverage and GPS is enabled.
Screen is unresponsive.	Restart the device by holding the Power button for about 10 seconds. If the issue persists, contact support.

## SPECIFICATIONS

Feature	Detail
Model Name	Doro 8200 Plus
Operating System	Android 11.0
Screen Size	6.1 inches
Resolution	1560 x 720
Internal Storage	64 GB (expandable up to 128 GB with Micro SD)
Rear Camera	Triple Camera: 16 MP (Main), 2 MP (Portrait), 2 MP (Macro)
Front Camera	5 MP
Connectivity	4G, Wi-Fi, Bluetooth, NFC

Feature	Detail
Water Resistance	IP54
Battery Type	Lithium-ion
SIM Card Type	Nano SIM

## SAFETY INFORMATION

Read these safety guidelines before using your Doro 8200 Plus to prevent injury or damage to your device.

- Do not use the phone while driving.
- Avoid exposing the device to extreme temperatures, direct sunlight, or excessive moisture.
- Do not attempt to disassemble or repair the device yourself. This voids the warranty and may cause damage.
- Use only approved accessories.
- Keep the device away from medical implants like pacemakers.
- Dispose of the device and its battery responsibly according to local regulations.

## WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the warranty card included in your package or visit the official Doro website.

Online resources may include FAQs, additional guides, and contact information for customer service.

© 2025 Doro. All rights reserved.

## Related Documents - 8200 Plus

<p>Doro 8200</p> <p>English</p>  <p>doro</p>	<p><a href="#"><u>Doro 8200 User Manual: Setup, Features, and Safety</u></a></p> <p>Comprehensive user manual for the Doro 8200 smartphone. Learn how to set up your device, navigate its features, understand safety instructions, and more. Includes information on calls, contacts, applications, and warranty.</p>
<p>Doro Aurora A30</p> <p>English</p>  <p>doro</p>	<p><a href="#"><u>Doro Aurora A30 User Manual</u></a></p> <p>Comprehensive user manual for the Doro Aurora A30 smartphone, covering setup, features, settings, and safety instructions. Learn how to use your Doro Aurora A30 with this detailed guide.</p>
<p>Doro Aurora A31</p> <p>English</p>  <p>doro</p>	<p><a href="#"><u>Doro Aurora A31 User Manual</u></a></p> <p>Comprehensive user manual for the Doro Aurora A31 smartphone, covering setup, features, settings, and safety information.</p>
<p>Doro Aurora A10</p> <p>English</p>  <p>doro</p>	<p><a href="#"><u>Doro Aurora A10 Handleiding: Eenvoudige Smartphone Gebruiksinstructies</u></a></p> <p>Gedetailleerde handleiding voor de Doro Aurora A10 smartphone, met uitleg over installatie, functies, instellingen en veiligheid. Ontdek hoe u het meeste uit uw Doro telefoon haalt.</p>
<p>Doro Aurora A10</p> <p>English</p>  <p>doro</p>	<p><a href="#"><u>Doro Aurora A10 User Manual</u></a></p> <p>This user manual provides comprehensive instructions and information for the Doro Aurora A10 smartphone, covering setup, features, and maintenance.</p>
<p>Doro Aurora A10</p> <p>French</p>  <p>doro</p>	<p><a href="#"><u>Doro Aurora A10 User Manual</u></a></p> <p>User manual for the Doro Aurora A10 smartphone, providing setup instructions, feature explanations, and safety guidelines.</p>