

 
Candy CSOW 4746TWMB5-S

Candy Smart Pro Inverter Washer Dryer Slim 7+4 Kg User Manual

Model: CSOW 4746TWMB5-S

1. PRODUCT OVERVIEW

The Candy Smart Pro Inverter Washer Dryer is a versatile appliance designed for efficient washing and drying of laundry. Featuring a slim design and advanced inverter motor technology, it offers quick cycles and smart connectivity for enhanced user experience. This manual provides essential information for safe and effective use of your appliance.

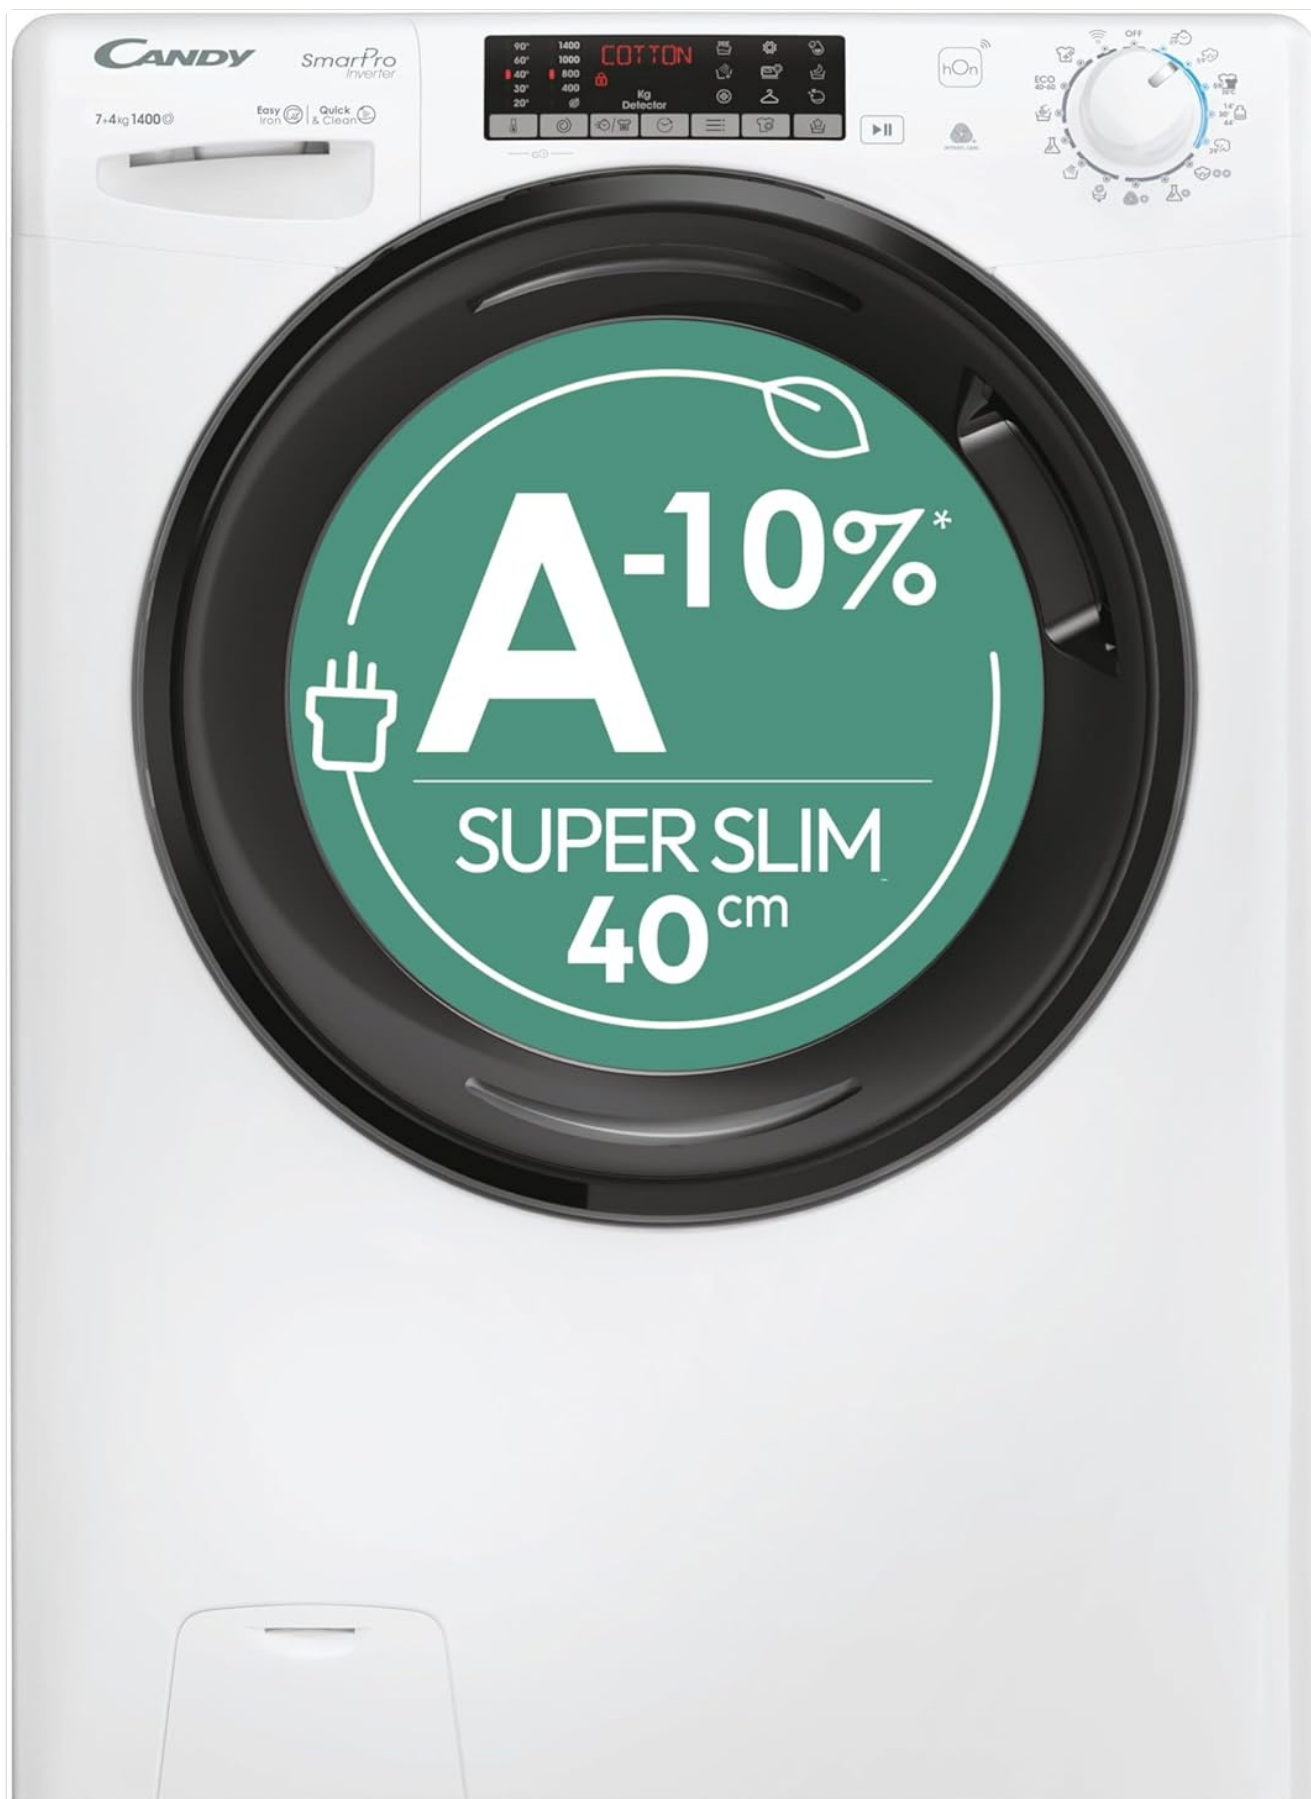

*10% più efficiente rispetto allo standard minimo associato alla classe energetica A per il solo ciclo di lavaggio

Figure 1.1: Front view of the Candy Smart Pro Inverter Washer Dryer, highlighting its energy efficiency class A and slim design.

2. SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washer dryer. Please follow these steps carefully.

2.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport screws located at the rear of the appliance. Keep these screws for future transport.



Figure 2.1: Rear view of the appliance, showing the location of transport screws and connections.

2.2 Placement

Place the appliance on a firm, level floor. Ensure there is adequate space around the unit for ventilation and access.

- The slim design allows for space-saving installation.
- Ensure the appliance is stable and does not wobble.



Sempre
connessa ai
tuoi bisogni



Scopri funzionalità intelligenti, nuovi
programmi e ottimizza i tuoi consumi

Figure 2.2: The compact dimensions of the washer dryer, highlighting its space-saving capabilities (40 cm depth).



Figure 2.3: Side view of the appliance, illustrating its slim profile.

2.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap.
- Ensure the drain hose is properly positioned in a drain or sink.
- Plug the appliance into a grounded electrical outlet. Refer to the specifications for voltage requirements.

3. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Candy Smart Pro Inverter Washer Dryer.

3.1 Control Panel Overview

The control panel features a program selector dial, touch controls, and a digital display for easy program selection and monitoring.



Figure 3.1: Close-up of the control panel, showing the program dial with various quick cycle options like 14, 30, and 44 minutes.



Figure 3.2: Front view of the appliance with the door open, ready for loading laundry.

3.2 Program Selection

Turn the program selector dial to choose the desired washing or drying program. The appliance offers a range of cycles, including:

- **Rapid Cycles:** Ideal for quick washes (e.g., 14, 30, 44 minutes).
- **Eco 40-60:** Energy-efficient program for cottons and mixed fabrics.
- **Steam Program:** Reduces wrinkles and removes odors.
- Specific programs for different fabric types (e.g., Cotton, Synthetics).



Figure 3.3: Illustration of the 39-minute steam treatment, designed to reduce wrinkles and refresh garments.

3.3 Detergent Dispenser

Add detergent and fabric softener to the appropriate compartments in the dispenser drawer before starting a cycle.

3.4 hOn App Connectivity

Connect your appliance to the hOn app for additional features, program customization, and remote control.

- **Snap&Wash Function:** Take a photo of your laundry to get the most suitable program.
- Access to additional programs and statistics.



Figure 3.4: A user interacting with the hOn app on a smartphone, demonstrating smart connectivity features.

4. MAINTENANCE AND CARE

Regular maintenance ensures the efficiency and extends the lifespan of your appliance.

4.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup.

4.2 Cleaning the Filter

The filter should be cleaned regularly to ensure proper drainage and prevent blockages.

4.3 Drum Cleaning

Run a maintenance wash cycle with a suitable cleaning agent to keep the drum fresh and hygienic.

5. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and their solutions before contacting service.

Problem	Possible Cause	Solution
Appliance does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is securely latched; select a program and press start.
Excessive noise during operation	Transport screws not removed; appliance not level; unbalanced load.	Remove transport screws; adjust leveling feet; redistribute laundry inside the drum.
Poor drying results	Overloaded drum; incorrect drying program; filter clogged.	Reduce load size; select appropriate drying program; clean the filter.

6. SPECIFICATIONS

Detailed technical specifications for the Candy Smart Pro Inverter Washer Dryer.

Model: CSOW 4746TWMB5-S

Manufacturer Model Number: 31020017

Brand: Candy

Washing Capacity: 7 Kg

Drying Capacity: 4 Kg

Dimensions (DxWxH): 45 x 60 x 89 cm (Slim Design)

Weight: 61 kg

Energy Class (Washing Cycle): A (New Energy Label)

Spin Speed: Up to 1400 RPM

Motor Type: Speed Drive Inverter Motor

Drum Material: Stainless Steel

Control Type: Touch

Special Features: Quick&Clean Technology, Snap&Wash Function, Steam Program, hOn App Connectivity.


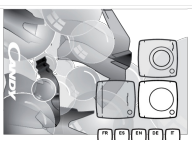 
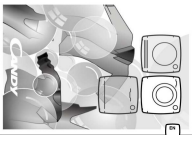 
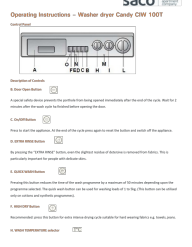 
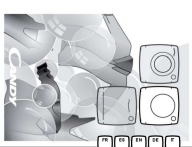 
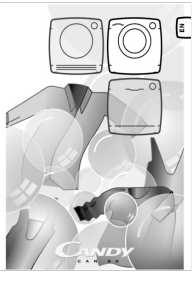 


Figure 6.1: Illustration of the innovative Inverter Motor, highlighting its reliability and efficiency.

7. WARRANTY AND SUPPORT

Your Candy Smart Pro Inverter Washer Dryer is covered by a manufacturer's warranty. For specific details regarding warranty terms and conditions, please refer to the documentation provided with your appliance or visit the official Candy website.

- **Returns:** Products can typically be returned within 14 days of receipt if you change your mind.
- **Defective/Damaged Products:** Consult the return policy for defective or damaged products.
- For technical assistance or service requests, please contact Candy customer support.

	<p>Candy Bianca Washing Machine User Manual and Guide</p> <p>Comprehensive user manual for the Candy Bianca washing machine, covering installation, operation, maintenance, troubleshooting, and program details for optimal use and care.</p>
	<p>Manuale d'Uso Asciugatrice Candy - Guida Completa</p> <p>Scopri come utilizzare al meglio la tua asciugatrice Candy con questa guida completa. Include istruzioni di sicurezza, installazione, programmi, manutenzione e consigli per la risoluzione dei problemi.</p>
	<p>Candy Washing Machine User Manual</p> <p>Comprehensive user manual for Candy washing machines, covering installation, operation, maintenance, troubleshooting, and safety guidelines.</p>
	<p>Candy CIW 100T Washer Dryer: Operating Instructions and Guide</p> <p>Detailed operating instructions for the Candy CIW 100T washer dryer, covering control panel functions, wash programs, and drying cycles for optimal use. Learn how to operate your appliance efficiently.</p>
	<p>Candy Asciugatrice: Manuale d'Uso e Guida alla Sicurezza</p> <p>Manuale completo per l'asciugatrice Candy, con istruzioni dettagliate su installazione, uso sicuro, programmi, manutenzione e risoluzione problemi. Scopri come ottenere le migliori prestazioni.</p>
	<p>Candy Washing Machine User Manual</p> <p>This user manual provides comprehensive instructions for operating, installing, maintaining, and troubleshooting your Candy washing machine. It covers safety guidelines, program selection, smart features, and technical specifications for models like CSW 2D.</p>