

PHILIPS XW7263/11

Philips 7000 AquaTrio Cordless Vacuum Cleaner XW7263/11 User Manual

Model: XW7263/11

1. INTRODUCTION

The Philips 7000 AquaTrio Cordless Vacuum Cleaner XW7263/11 is a versatile 3-in-1 cleaning solution designed for efficient floor care. It combines wet cleaning, dry vacuuming, and handheld functionality to address various cleaning needs. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your appliance.



Image 1.1: Overview of the Philips 7000 AquaTrio Cordless Vacuum Cleaner and included accessories.

2. SAFETY INFORMATION

Before using the appliance, carefully read this user manual and save it for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury.

- Do not use the appliance outdoors or on wet surfaces.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Only use the Philips cleaning solution provided or recommended by Philips. Using other solutions may cause excessive foaming or damage to the appliance.

3. SETUP

3.1 Assembly

Unpack all components and ensure all parts are present. Assemble the main body of the vacuum cleaner by connecting the handle to the motor unit and then to the desired cleaning head (wet or dry). Ensure all connections click securely into place.

3.2 Charging the Battery

Before first use, fully charge the lithium-ion battery. Connect the charger to the charging port on the appliance and plug it into a power outlet. The battery indicator will show charging status. A full charge provides approximately 25-30 minutes of runtime, depending on the mode of use.

3.3 Preparing for Wet Cleaning

For wet cleaning, attach the AquaTrio wet cleaning head. Fill the clean water tank with water and add the recommended amount of Philips Floor Cleaning Solution (XV1792/01). Do not overfill. Ensure the dirty water tank is empty and properly installed.



Image 3.1: The Philips Floor Cleaning Solution is designed for effective and hygienic cleaning.

4. OPERATING

4.1 Powering On and Mode Selection

Press the power button to turn on the appliance. The device features multiple cleaning modes. Select the appropriate mode for your cleaning task using the controls on the handle.

- **Wet & Dry Cleaning Mode:** Ideal for hard floors, simultaneously vacuums dry debris and mops wet spills. The AquaSpin 2500 brush technology and PowerCyclone Aqua system ensure effective cleaning and separation of clean and dirty water.
- **Dry Vacuuming Mode:** Use the dry vacuuming head for carpets and soft floors. This mode provides deep cleaning without moisture.
- **Handheld Mode:** Detach the main unit and attach accessories for cleaning furniture, upholstery, and hard-to-reach areas.



Image 4.1: The Philips 7000 AquaTrio offers three versatile cleaning modes: Wet&Dry, Dry, and Handheld.

4.2 Cleaning Tips

- **LED Lights:** Both wet and dry cleaning heads are equipped with LED lights to illuminate hidden dust, dirt, spills, hair, and crumbs, ensuring thorough cleaning.
- **Maneuverability:** The appliance offers 90 to 180-degree flexibility, allowing easy access under low furniture and close to baseboards.
- **Hard Floors:** The ultra-soft microfiber brushes are gentle on all hard floor types, including laminate, wood, vinyl, epoxy, marble, stone, and tile, preventing scratches.



Image 4.2: Integrated LED lights help reveal unseen wet and dry dirt for a more complete clean.

5. MAINTENANCE

5.1 Automatic Self-Cleaning

After each wet cleaning session, place the appliance on its charging base and activate the automatic self-cleaning function. The device will clean itself and its brushes within approximately 4 minutes, ensuring hygienic operation for the next use.



Image 5.1: The appliance features hygienic automatic self-cleaning after each use.

5.2 Emptying and Cleaning Tanks

- **Dirty Water Tank:** Regularly empty and rinse the dirty water tank after each use to prevent odors and maintain hygiene.
- **Clean Water Tank:** Empty any remaining solution from the clean water tank if the appliance will not be used for an extended period.

5.3 Brush and Filter Maintenance

- **Brushes:** Periodically inspect the AquaSpin brushes for tangled hair or debris. Remove and clean them as needed. Replacement brushes (XV1793/01) are available for optimal performance.
- **Filters:** The appliance features a 4-stage filtration system and a 5-stage cyclonic filtration system with a HEPA filter. Clean or replace filters according to the instructions provided in the full manual to maintain suction power and air quality.



Image 5.2: Replacing the ultra-soft microfiber brush (XV1793/01) ensures continued effective cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Philips 7000 AquaTrio, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is not charged or not properly inserted.	Ensure the battery is fully charged and correctly inserted into the appliance.
Poor suction performance.	Filters are clogged, dirty water tank is full, or brushes are obstructed.	Clean or replace filters. Empty the dirty water tank. Remove any obstructions from the brushes.
Excessive foam during wet cleaning.	Incorrect cleaning solution used or too much solution added.	Only use Philips Floor Cleaning Solution (XV1792/01) and adhere to the recommended dosage.
E5 error code displayed.	Indicates a specific internal error (refer to full manual for details).	Turn off the appliance, remove the battery, wait a few minutes, then reinsert and restart. If the error persists, contact Philips customer support.
Water streaks or excessive wetness on floor.	Dirty water tank full, brushes need cleaning, or appliance moved too quickly.	Empty dirty water tank. Clean brushes. Move the appliance at a steady, moderate pace to allow proper water suction.

For more detailed troubleshooting or issues not listed here, please consult the full product manual or contact Philips customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	PHILIPS
Model Number	XW7263/11
Color	Green
Product Dimensions	76.5 x 30.6 x 39.3 cm
Weight	4.6 Kilograms
Clean Water Tank Capacity	670 Milliliters
Voltage	21.6 Volt
Number of Speeds	3

Feature	Detail
Runtime	Up to 30 minutes (approx. 25 minutes in wet cleaning mode)
Special Features	AquaSpin 2500 brush technology, 4-stage filtration system, 5-stage cyclonic filtration system, LED lights
Filter Type	HEPA Filter
Surface Recommendation	All floors
Power Source	Lithium-ion battery

8. WARRANTY AND SUPPORT

This Philips appliance is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For product support, spare parts, or to register your product, please visit the official Philips website or contact Philips customer service in your region. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: www.philips.com/support