

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [YOOREAL](#) /

› YOOREAL Digital Kitchen Timer RL-HM206 User Manual

## YOOREAL RL-HM206

# YOOREAL Digital Kitchen Timer RL-HM206 User Manual

Model: RL-HM206

[Introduction](#)   [Product Overview](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the YOOREAL Digital Kitchen Timer RL-HM206. This multi-function timer is designed to assist you with precise time management for various activities, including cooking, studying, fitness, and more. It features four independent countdown timers, a clock display, adjustable alarm volume, and convenient placement options. Please read this manual thoroughly to ensure proper use and optimal performance of your device.



The YOOREAL Digital Kitchen Timer in a kitchen environment, demonstrating its use during cooking activities.

## 2. PRODUCT OVERVIEW

### Key Features:

- **Four Independent Countdown Timers:** Set up to four separate timers (T1, T2, T3, T4) simultaneously, each programmable for up to 99 hours and 59 minutes.
- **Adjustable Alarm Volume:** Choose between high, low, or silent alarm modes to suit your

environment.

- **Clock Mode:** Functions as a standard clock with 12-hour or 24-hour display options when not in timer mode.
- **Memory Function:** Each timer retains its last setting for convenient repeated use.
- **Multiple Placement Options:** Features a magnetic back for attachment to metal surfaces and a built-in stand for tabletop use.
- **Large Display:** Clear, easy-to-read digital display.

### Package Contents:

- YOOREAL Digital Kitchen Timer RL-HM206
- User Manual (this document)

**Note:** 2 x AAA batteries are required and not included in the package.



Front view of the YOOREAL Digital Kitchen Timer, highlighting the display and control buttons for T1, T2, T3, T4, HR, MIN, SEC, START/STOP, and CLEAR.



Detailed diagram illustrating the functions of the timer's buttons (HR, MIN, SEC, T1-T4, START/STOP, CLEAR) and the side switch for alarm volume adjustment.

### 3. SETUP

#### 3.1 Battery Installation

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

The timer will power on automatically once batteries are installed. If the display does not light up, check battery polarity or replace with new batteries.



Rear view of the timer, indicating the battery compartment and overall dimensions. Batteries are not included.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Setting the Clock

1. In clock mode (when no timer is active), press and hold the **CLEAR (12/24)** button for 3 seconds to enter time setting mode. The hour digits will flash.
2. Press **HR** to adjust the hour.
3. Press **MIN** to adjust the minute.
4. Press **SEC** to adjust the second.
5. Press **CLEAR (12/24)** again to switch between 12-hour and 24-hour format.
6. Press **START/STOP** to confirm the time and exit setting mode.



The timer displaying the current time in clock mode, indicating its use as a time management tool.

## 4.2 Using Countdown Timers (T1, T2, T3, T4)

The timer features four independent countdown channels. Each channel can be set and operated separately.

1. **Select a Timer Channel:** Press the desired timer button (**T1**, **T2**, **T3**, or **T4**) to select it. The display will show the selected timer channel.
2. **Set the Time:**
  - Press **HR** to set the hours (up to 99 hours).
  - Press **MIN** to set the minutes (up to 59 minutes).
  - Press **SEC** to set the seconds (up to 59 seconds).
  - Hold down the buttons for faster adjustment.
3. **Start the Countdown:** Press **START/STOP** to begin the countdown. The timer icon will appear.
4. **Pause/Resume:** Press **START/STOP** again to pause the countdown. Press it once more to resume.
5. **Clear the Timer:** To clear the current timer setting, press **CLEAR** while the timer is paused or stopped.
6. **Alarm:** When the countdown reaches zero, the alarm will sound according to the selected volume

setting. Press any button to stop the alarm.

7. **Memory Function:** Each timer channel remembers its last set time. To recall the last setting, select the timer channel and press **CLEAR** once.



The timer displaying a countdown for T1, illustrating its multi-functionality.

### 4.3 Using Count-up Timer (Stopwatch)

The timer can also function as a stopwatch.


1. Ensure all four countdown timers (T1-T4) are cleared (displaying 00:00:00).
2. Press **START/STOP** to begin counting up from 00:00:00.
3. Press **START/STOP** again to pause the count-up.
4. Press **CLEAR** to reset the count-up timer to 00:00:00.

### 4.4 Adjusting Alarm Volume & Silent Mode

The timer offers three alarm settings: High, Low, and Off (Silent Mode).

1. Locate the volume switch on the side of the timer.
2. Slide the switch to select your desired alarm volume:
  - **High:** Loud alarm for noisy environments.

- **Low:** Softer alarm for general use.
- **Off (Silent Mode):** No audible alarm. The display will flash when a timer reaches zero.

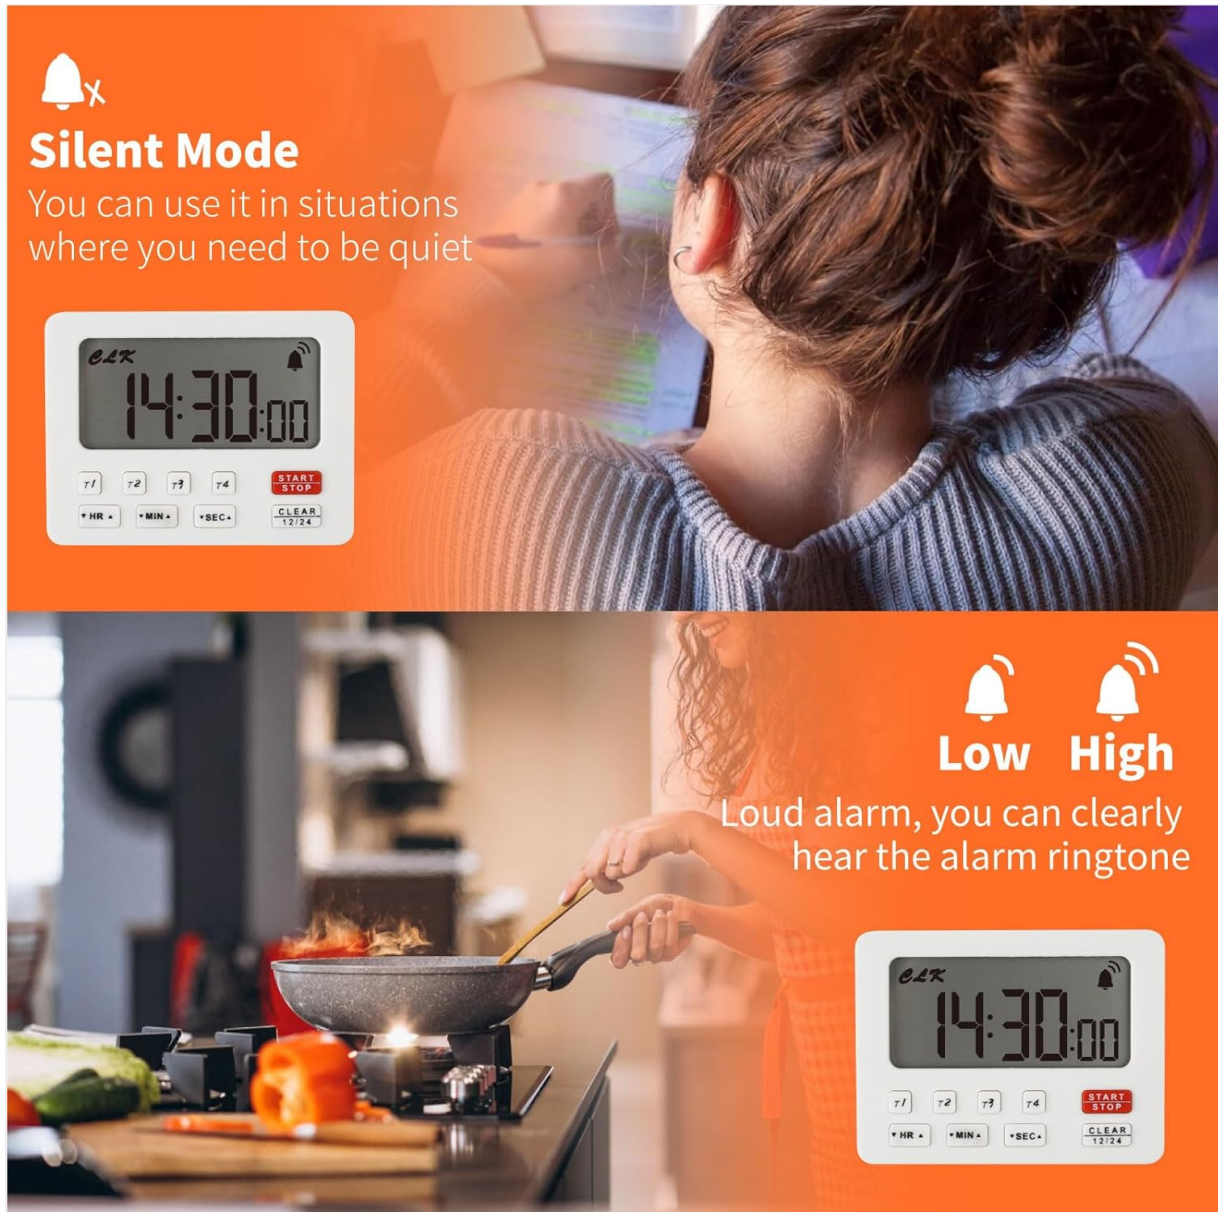

The timer illustrating the silent mode (top) and loud alarm options (bottom) for different user preferences and environments.

## 4.5 Placement Options

The timer can be placed in several ways:

- **Magnetic Attachment:** The back of the timer has two strong magnets, allowing it to be securely attached to metallic surfaces like refrigerators or oven doors.
- **Built-in Stand:** A foldable stand on the back allows the timer to be placed upright on a countertop or desk for easy viewing.
- **Hanging Hole:** A small hole is provided for hanging the timer on a hook.

Add 2 small magnet designs and hanging designs on the back. It can be attached to the refrigerator or hung on a hook.



The timer magnetically attached to a refrigerator, demonstrating its convenient placement feature.

## 5. MAINTENANCE

---

### 5.1 Cleaning

- Wipe the timer with a soft, damp cloth.
- Do not use abrasive cleaners or immerse the timer in water.

### 5.2 Battery Replacement

- When the display becomes dim or the timer functions erratically, it's time to replace the batteries.
- Follow the battery installation steps in Section 3.1.
- Dispose of old batteries responsibly according to local regulations.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries; incorrect battery polarity.	Replace batteries with new AAA batteries. Ensure correct polarity.
Alarm is not sounding.	Alarm volume set to "Off" (Silent Mode).	Check the volume switch on the side of the timer and set it to "Low" or "High".
Timer not starting/stopping.	Incorrect button press; timer already running/paused.	Ensure you are pressing the <b>START/STOP</b> button. If paused, press again to resume. If stopped, press to start.
Timer settings are not saving.	This model has a memory function for the last set time on each channel. If cleared, it resets.	After setting a timer, it will remember that setting until cleared or new time is set.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	RL-HM206
Brand	YOOREAL
Material	Acrylonitrile Butadiene Styrene (ABS)
Dimensions (L x W x H)	88mm x 23.9mm x 64mm (3.46" x 0.94" x 2.52")
Weight	79 Grams
Power Source	2 x AAA Batteries (not included)
Max Countdown Time	99 Hours, 59 Minutes, 59 Seconds
Timer Channels	4 Independent Channels (T1, T2, T3, T4)
Alarm Settings	High, Low, Off (Silent Mode)
Clock Display	12H / 24H selectable



Compare parameters	YOOREAL Timer	Other Timers
Countdown	4 sets of timing	1 or 2 sets of timing
Alarm mode	Low/High/Off	Low/High
Clock	✓	✗
Positive timing	✓	✗

A comparison table highlighting the features of the YOOREAL timer, including 4 sets of timing, low/high/off alarm mode, clock function, and positive timing.

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

YOOREAL provides a **2-year after-sales service** for this product. During this period, if any quality problems arise with the product, YOOREAL offers a free replacement service.

### 8.2 Customer Support

For any questions, concerns, or support needs, please contact our customer service team via the Amazon Platform. Our professional online services are available 7 days a week, 24 hours a day. The YOOREAL Care Team is always ready to assist you.

Even if the standard Amazon return window has closed, we are committed to resolving any issues you may encounter with your product.

