

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE Food Dehydrator Instruction Manual](#)

FOHERE FD-1024

FOHERE Stainless Steel Food Dehydrator Instruction Manual

Model: FD-1024

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your FOHERE Stainless Steel Food Dehydrator. This appliance is designed to dehydrate various foods such as fruits, vegetables, meat, and herbs, preserving their nutrients and extending their shelf life. It features a powerful 420W fan for even air circulation, adjustable temperature and timer settings, and a modular design for flexible use. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW



Image: FOHERE Food Dehydrator. This image displays the FOHERE Food Dehydrator fully assembled, showcasing its five transparent, stackable trays. Each tray is filled with various sliced items such as apples, blueberries, tomatoes, limes, and oranges, demonstrating the appliance's capacity for different food types. The base of the dehydrator is made of brushed stainless steel and features a black LED control panel with touch buttons for power, temperature, timer, and start/pause functions. The FOHERE logo is visible on the front of the base.

Main Components:

- **Base Unit:** Contains the heating element, fan, and control panel.
- **Drying Trays (5):** Transparent, stackable trays for holding food items.
- **Lid:** Transparent cover for the top tray.
- **Control Panel:** LED display with touch buttons for Power, Temperature, Timer, and Start/Pause.

SETUP

1. **Unpacking:** Carefully remove the dehydrator and all its components from the packaging. Retain packaging for

future storage or transport if needed.

2. **Initial Cleaning:** Before first use, wash the drying trays and lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the base unit with a damp cloth. Do not immerse the base unit in water.
3. **Assembly:**
 - Place the base unit on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the unit.
 - Stack the desired number of drying trays onto the base unit. The trays are designed to fit securely.
 - Place the lid on top of the uppermost tray.
4. **Power Connection:** Plug the power cord into a standard electrical outlet. The unit will enter standby mode.

OPERATING INSTRUCTIONS

1. Preparing Food for Dehydration:

- Wash and prepare your food items (e.g., slice fruits, vegetables, meat). Ensure slices are uniform in thickness for even drying.
- Arrange food in a single layer on the drying trays, ensuring air can circulate freely around each piece. Do not overlap food.

2. Adjusting Tray Height (Modular Design):

The dehydrator features a modular design allowing you to adjust the height between trays. This is useful for accommodating different food sizes. Two different heights (1.5 cm - 2.5 cm) are adjustable between individual trays. Simply rotate the trays to align the desired height settings.

3. Using the Control Panel:

- **Power Button ():** Press to turn the unit on or off.
- **Temperature Button (⌚):** Press to select temperature adjustment mode. The LED display will show the current temperature.
- **Up/Down Buttons (▲ / ▼):** Use these buttons to increase or decrease the temperature (range: 30°C to 70°C) or time.
- **Timer Button ():** Press to select timer adjustment mode. The LED display will show the remaining time.
- **Start/Pause Button ():** Press to start or pause the dehydration process.

4. Setting Temperature and Time:

1. Press the Power button to turn on the dehydrator.
2. Press the Temperature button. Use the Up/Down buttons to set your desired temperature between 30°C and 70°C.
3. Press the Timer button. Use the Up/Down buttons to set your desired drying time between 0.5 and 48 hours.
4. Press the Start/Pause button to begin the dehydration process. The display will show the remaining time.

5. During Operation:

The dehydrator operates quietly, making it suitable for use even at night. Periodically check the food for desired dryness. Drying times vary based on food type, thickness, and moisture content.

6. After Dehydration:

Once the drying cycle is complete or food is adequately dehydrated, press the Power button to turn off the unit and unplug it from the wall outlet. Allow the unit and food to cool before handling.

MAINTENANCE

Cleaning:

- Always unplug the dehydrator and allow it to cool completely before cleaning.
- The drying trays and lid are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. Rinse thoroughly and dry.
- Wipe the base unit with a damp cloth. Do not immerse the base unit in water or any other liquid.
- Do not use abrasive cleaners or scouring pads on any part of the dehydrator.

Storage:

- Ensure all parts are clean and dry before storing.
- The dehydrator is equipped with anti-slip mats for stability and a power cord storage area for neat organization.
- The height of the dehydrator can be flexibly adjusted by removing trays, allowing for compact storage.
- Store the appliance in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dehydrator does not turn on.	Not plugged in; power outlet malfunction; unit not powered on.	Ensure the power cord is securely plugged into a working outlet. Press the Power button on the control panel.
Food not drying evenly.	Food slices are too thick or uneven; trays overloaded; insufficient air circulation.	Ensure food is sliced uniformly. Do not overload trays; arrange food in a single layer. Rotate trays periodically if needed.
Dehydrator stops unexpectedly.	Timer has expired; power interruption; overheating protection activated.	Check the timer setting. Ensure continuous power supply. If unit overheats, unplug and let it cool down before restarting.
Unusual noise during operation.	Fan obstruction; unit not on a stable surface.	Ensure no foreign objects are obstructing the fan. Place the unit on a flat, stable surface.

SPECIFICATIONS

Feature	Detail
Brand	FOHERE
Model Number	FD-1024
Material	Stainless Steel

Feature	Detail
Color	Black
Power/Wattage	420 Watts
Voltage	240 Volts
Product Dimensions (L x W x H)	21 x 21 x 29 cm (8.27 x 8.27 x 11.42 inches)
Weight	1.9 kg (4.19 lbs)
Temperature Range	30°C to 70°C
Timer Range	0.5 to 48 hours
Number of Trays	5
Automatic Shut-off	Yes
Certifications	CE Certified, BPA-Free

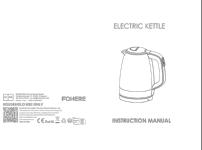
WARRANTY AND SUPPORT

This FOHERE Food Dehydrator is CE certified and BPA-free, ensuring product safety and quality. For any questions, technical support, or warranty claims, please contact the manufacturer or your point of purchase. Please refer to your purchase documentation for specific warranty terms and contact information.

For further assistance, you may visit the official FOHERE website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty purposes.

© 2024 FOHERE. All rights reserved.

Related Documents - FD-1024

 INSTRUCTION MANUAL FOHERE SL-519N Electric Slicer Machine <small>Model: SL-519N</small> <small>Electric Slicer and Mandoline</small>	<p>FOHERE SL-519N Electric Slicer Machine: Instruction Manual & Safety Guide</p> <p>Comprehensive instruction manual for the FOHERE SL-519N Electric Slicer Machine. Learn about safe operation, maintenance, troubleshooting, and usage suggestions for home use.</p>
 FOHERE Yogurt Maker <small>Model: SNJ-159B</small> <small>Electric Yogurt Maker</small>	<p>FOHERE SNJ-159B Yogurt Maker User Manual and Guide</p> <p>Comprehensive user manual for the FOHERE SNJ-159B Yogurt Maker. Includes setup instructions, operation guide, basic yogurt recipes, advanced uses for cheese, fermented rice, and natto, troubleshooting tips, maintenance advice, and product specifications.</p>
 ELECTRIC KETTLE FOHERE <small>Model: FD-1024</small> <small>Electric Kettle</small>	<p>Foheré Electric Kettle Instruction Manual - Safety, Usage, and Maintenance Guide</p> <p>This comprehensive instruction manual for the Foheré electric kettle provides essential safety guidelines, operating instructions, temperature settings, and cleaning and maintenance procedures. Learn how to safely use and care for your appliance.</p>

 FOHERE USER MANUAL MEAT GRINDER MG-2950R HOUSEHOLD USE ONLY FOA	<p>FOHERE Meat Grinder MG-2950R User Manual</p> <p>User manual for the FOHERE Meat Grinder MG-2950R, providing essential safety instructions, operation guides, cleaning procedures, and troubleshooting tips for household use.</p>
 FOHERE Use and Care Instructions HK-C016 HOUSEHOLD USE ONLY FOA	<p>FOHERE HK-C016 Cookware: Use, Care, and Safety Instructions</p> <p>Detailed guide for FOHERE HK-C016 cookware, covering usage, maintenance, cleaning (hand wash & dishwasher), energy saving, and safety precautions. Includes product contents and manufacturer information.</p>
 FOHERE HUMIDIFIER GO-2811 HOUSEHOLD USE ONLY FOA	<p>FOHERE GO-2811 Humidifier User Manual: Setup, Operation, and Troubleshooting</p> <p>Comprehensive user manual for the FOHERE GO-2811 humidifier. Learn about specifications, safety, setup, operation, cleaning, and troubleshooting for optimal performance.</p>