



Manuals.plus /

› Nictemaw /

› Nictemaw Portable Washing Machine Model 5584_1 Instruction Manual

Nictemaw 5584_1

Nictemaw Portable Washing Machine

Model: 5584_1

User Instruction Manual

INTRODUCTION

Thank you for choosing the Nictemaw Portable Washing Machine. This fully automatic, compact washer is designed for convenience and efficiency in small living spaces such as apartments, dorms, RVs, and homes. With a 17.8 lbs (2.4 Cu.ft) capacity, 10 wash programs, and 8 water levels, it offers versatile laundry solutions. This manual provides essential information for safe installation, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Always ensure the washing machine is placed on a stable, level surface to prevent vibration and movement during operation.
- Connect the appliance only to a grounded electrical outlet with the correct voltage.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation. Utilize the Child Lock function for added safety.
- Do not wash items that are soiled with flammable or explosive substances.
- Ensure the water inlet and drain hoses are securely connected to prevent leaks.
- Never reach into the drum while the machine is operating.
- Unplug the appliance from the power outlet before cleaning or performing any maintenance.

PRODUCT OVERVIEW

The Nictemaw Portable Washing Machine (Model 5584_1) features a durable stainless steel honeycomb inner drum and a user-friendly control panel with an LED display. Its compact design (18.5" x 18.7" x 33") makes it ideal for various living situations.

Key Features:

- **Large Capacity:** 17.8 lbs (2.4 Cu.ft) stainless steel inner drum.
- **Fully Automatic:** Integrated drain pump and extended drain hose.
- **Versatile Washing Options:** 10 wash programs and 8 water level selections.
- **Advanced Functions:** 24-hour delay start, drum cleaning, and child lock.
- **Stability:** Automatic Unbalance Detection (AUD) system and adjustable leveling feet.
- **Portability:** Lightweight with two side handles for easy mobility.

17.8LBS Large Capacity

Wash all clothes at once, meet the family's needs



Put in clothes → One-button Start → Full-Auto Laundry

 16 T-shirt	 5 Coat
 5 Jacket	 10 Jeans
 2 Blanket	 22 Underwear



Image: The Nictemaw Portable Washing Machine in grey, showing its compact size and top-loading design. Clothes are visible inside the drum, and the control panel is highlighted.

SETUP

1. Unpacking and Placement

- Carefully remove all packaging materials and internal packing.
- Place the washing machine on a firm, level surface. Use the adjustable feet to ensure stability and minimize vibration.
- The compact design (18.5"D x 18.7"W x 33"H) allows placement in various locations such as kitchens,

bathrooms, or utility areas.



Image: A visual representation of the washing machine's dimensions (18.5" x 18.7" x 33") and examples of suitable locations such as RVs, apartments, dorms, and homes.

2. Water Connection

The washing machine connects to a standard sink faucet using the provided adapters. **Note: This machine is designed for cold water connection only.**

1. Remove the aerator from your sink faucet.
2. Attach the appropriate faucet adapter (included) to your faucet. Ensure a tight, leak-free seal.
3. Connect the water inlet hose to the adapter on the faucet and to the water inlet port on the back of the washing machine.



Image: The portable washing machine's drain hose is shown extending into a sink, illustrating the built-in drain pump feature and the included faucet adapters.

3. Drain Hose Setup

The machine features a built-in drain pump and an extended drain hose for flexible drainage options.

- Position the drain hose securely into a sink, laundry tub, or standpipe. Ensure the hose is not kinked or blocked.
- The drain hose should be positioned to allow gravity to assist drainage, typically above the water level in the machine but below the top edge of the sink/tub.

4. Power Connection

- Plug the power cord into a grounded 110V-60Hz electrical outlet.
- Ensure the power cord is not pinched or placed under heavy objects.

OPERATING INSTRUCTIONS

The control panel provides easy access to all washing functions.



Image: A close-up of the washing machine's control panel, detailing the 10 wash programs, 8 water levels, and various function buttons including Power, Start/Pause, Water Level, and Program.

1. Loading Laundry

- Open the top lid and place clothes loosely into the stainless steel drum. Do not overload the machine; the maximum capacity is 17.8 lbs.
- For best results, distribute clothes evenly to prevent imbalance.

2. Adding Detergent

Add high-efficiency (HE) powdered laundry detergent directly into the drum with the clothes. While the manual recommends HE powder, some users successfully use liquid detergents or pods. Adjust detergent amount based on load size and soil level.

3. Selecting a Program

Press the 'Power' button to turn on the machine. Use the 'Program' button to cycle through the 10 available wash programs:

- Soak
- Normal
- Quick Wash

- Heavy Duty
- Blanket
- Wash
- Rinse
- Spin
- Wash & Rinse
- Rinse & Spin
- Air Dry

The LED display will show the selected program and remaining time.

4. Adjusting Water Level

Press the 'Water Level' button to select one of the 8 available water levels, corresponding to your load size.

5. Special Functions

- **24-Hour Delay Function:** Set a delayed start time for your wash cycle.
- **Drum Cleaning:** A dedicated program to clean the inner drum.
- **Child Lock:** Activates to prevent accidental changes to settings during operation.

Safety Child Lock
Avoid accidental use to protect your kids

Image: The washing machine's control panel showing the child lock function, with a child and adult in the background, emphasizing safety.

6. Starting the Wash Cycle

Once your selections are made, press the 'Start/Pause' button to begin the wash cycle. The machine will automatically fill with water, wash, rinse, and spin according to the selected program.

MAINTENANCE

1. Cleaning the Removable Filter

The machine is equipped with a removable filter to catch lint and debris. Regularly clean this filter to maintain optimal performance and prevent blockages.

- Locate the filter inside the drum (refer to product images for exact location).
- Carefully remove the filter and clean any accumulated lint or debris under running water.
- Reinsert the filter securely before the next wash cycle.

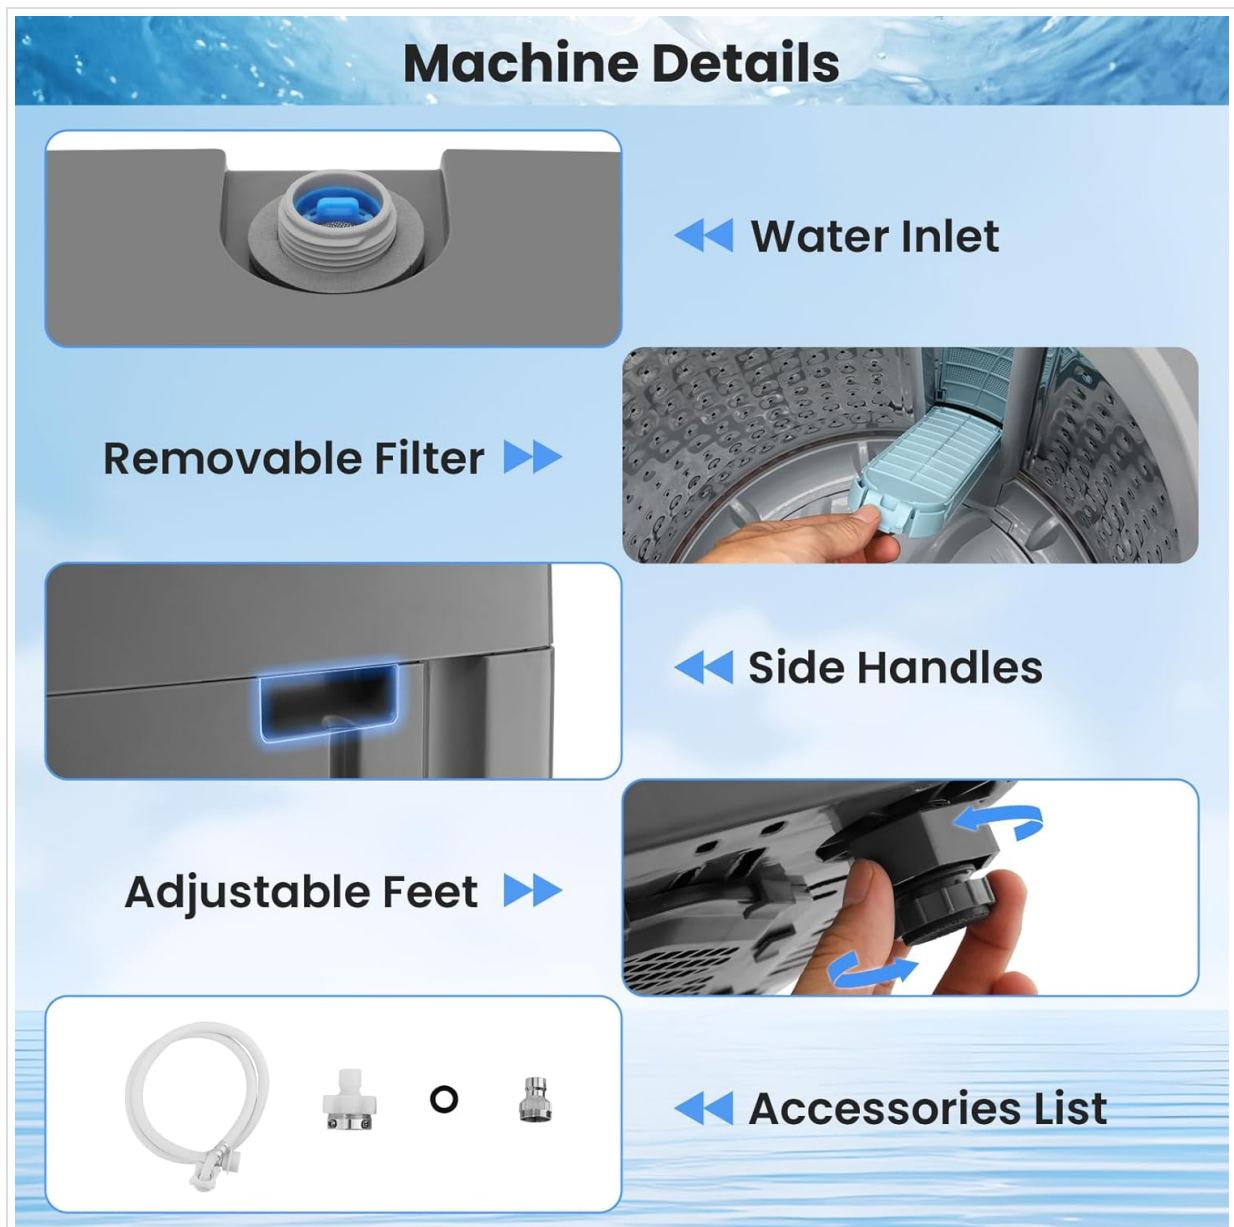


Image: A diagram highlighting various machine details, including the water inlet, removable filter, side handles, adjustable feet, and accessories list.

2. General Cleaning

- Wipe down the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- Run the 'Drum Cleaning' program periodically to prevent odor and residue buildup in the drum.

3. Winterization/Storage

If storing the machine in an unheated area or for an extended period:

- Drain all water from the machine and hoses to prevent freezing.
- Disconnect water hoses and store them properly.
- Unplug the power cord and store it safely.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	No power; lid not closed; 'Start/Pause' not pressed.	Check power connection; ensure lid is fully closed; press 'Start/Pause'.
Excessive vibration/noise	Uneven load; machine not level; shipping bolts not removed (if applicable).	Redistribute laundry; adjust leveling feet; ensure shipping bolts are removed.
Water leakage	Loose hose connections; damaged hoses; clogged drain.	Tighten all hose connections; inspect hoses for damage; clear drain.
Water not draining	Drain hose kinked/blocked; drain pump malfunction.	Check and clear drain hose; clean filter; contact support if issue persists.
Clothes not clean	Overloading; insufficient detergent; incorrect program.	Reduce load size; use appropriate detergent amount; select suitable wash program.

SPECIFICATIONS

- **Brand:** Nictemaw
- **Model Number:** 5584_1
- **Product Dimensions:** 18"D x 18"W x 33"H
- **Capacity:** 17.8 Pounds (2.4 Cu.ft)
- **Material:** Stainless Steel Drum
- **Color:** Grey
- **Operation Mode:** Fully Automatic
- **Number of Programs:** 10
- **Water Levels:** 8
- **Special Features:** Adjustable Leveling Legs, Child Lock, Delay Start, High Efficiency, Vibration Reduction, Built-in Drain Pump
- **Controls Type:** Push Button
- **Display:** LED
- **Included Components:** Drain Hose

WARRANTY AND SUPPORT

This Nictemaw Portable Washing Machine comes with **one-year warranty**. For product assistance or any questions regarding your compact washing machine, please send us a message via Amazon. We are committed to responding as soon as possible to address your concerns.