

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fockety](#) /

› [Fockety MP3 MP4 Player User Manual - 1.8-inch Color Screen, 128GB Expandable Memory](#)

Fockety Fockety8smuh0ixfe-14

Fockety MP3 MP4 Player User Manual

Model: Fockety8smuh0ixfe-14

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Fockety MP3 MP4 Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.

Super thin 1.8 inch color screen
HIFI lossless sound quality



The Fockety MP3 MP4 Player features a super thin design and a 1.8-inch color screen, delivering HIFI lossless sound quality.

Key Features:

- **Bluetooth 5.0 Connectivity:** Equipped with an updated Bluetooth 5.0 chip for stable connection and easy pairing with Bluetooth headphones or speakers. Note: Cannot pair with computer or phone Bluetooth.
- **Multifunctional Device:** Supports MP3 music playback, voice recording, e-books (TXT format), photo viewing, and video playback (AMV format). Features an independent volume control for ease of use.
- **High-Speed USB 2.0:** Functions as a card reader or file storage. Easily transfer music files or folders by dragging and dropping when connected to a computer.
- **HIFI Lossless Sound:** Enjoy crisp and rich audio through the powerful built-in speaker. Compatible with various formats including MP3, WMA, APE, FLAC, WAV, and OGG.
- **Expandable Memory:** Supports a small memory card up to 128GB (not included), allowing storage for over 10,000 songs and numerous e-books.

SETUP

1. Unboxing and Components

Carefully unpack your MP3 MP4 Player. Ensure all components are present:

- Fockety MP3 MP4 Player
- USB Data Cable
- Earphones
- User Manual



The MP3 MP4 Player comes with essential accessories for immediate use.

2. Charging the Device

1. Connect the small end of the USB data cable to the player's USB port.

2. Connect the larger end of the USB data cable to a USB power adapter (not included) or a computer's USB port.
3. The device will indicate charging status on the screen. A full charge typically takes 1 to 2 hours.

3. Inserting a Memory Card

The device supports a small memory card (TF card) up to 128GB for expanded storage. The memory card is not included.

1. Locate the TF-CARD slot on the side or back of the player.
2. Gently insert the memory card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, gently push the card inward until it springs out.



The back of the player indicates the TF-CARD slot for expandable memory.

4. Powering On/Off

1. To power on, slide the ON/OFF switch to the 'ON' position.
2. To power off, slide the ON/OFF switch to the 'OFF' position.



The ON/OFF switch is located on the bottom edge of the device, next to the headphone jack and USB port.

OPERATING INSTRUCTIONS

1. Basic Navigation

The player features a set of physical buttons for navigation and control:

- **M (Menu) Button:** Access the main menu or return to the previous menu.
- **Play/Pause Button (Center):** Start or pause playback.
- **Previous/Next Buttons:** Navigate through lists or skip tracks/chapters.
- **Volume Up (+) / Volume Down (-) Buttons:** Adjust the volume level.
- **Return Button (U-turn arrow):** Go back to the previous screen or menu.



The main menu provides access to all functions of the player.

2. Playing Music

1. From the main menu, select 'Music'.
2. Browse your music library by artist, album, genre, or all songs.
3. Select a song and press the Play/Pause button to begin playback.
4. Use the Previous/Next buttons to skip tracks and the Volume buttons to adjust audio levels.

3. Playing Videos

The player supports AMV video format. Videos in other formats may need to be converted before playback.

1. From the main menu, select 'Video'.
2. Choose the video file you wish to play.
3. Press the Play/Pause button to start the video.

Powerful box speaker

Can provide a truly immersive sound experience

Compatible with MP3, WMA, APE, FLAC, WAV, OGG and other formats



The player supports various media types, including video playback.

4. Using Bluetooth

1. From the main menu, navigate to 'Settings' and then 'Bluetooth'.
2. Turn Bluetooth 'On'.
3. The player will scan for available Bluetooth devices.
4. Select your Bluetooth headphones or speaker from the list to pair.



Independent volume control design
Provide you with a more humanized
experience

The player offers independent volume control for a personalized audio experience, especially when using Bluetooth headphones.

5. FM Radio

1. Connect wired earphones to the player; they act as the antenna for the FM radio.
2. From the main menu, select 'Radio'.
3. Use the navigation buttons to scan for stations or manually tune to a frequency.

6. Voice Recorder

1. From the main menu, select 'REC' (Record).
2. Press the Play/Pause button to start recording.
3. Press it again to stop and save the recording.

7. E-book Reader

The player supports TXT format e-books.

1. From the main menu, select 'Ebook'.
2. Choose your desired TXT file to open and read.

MAINTENANCE

1. Cleaning

- Use a soft, dry, lint-free cloth to clean the device's screen and body.
- Avoid using liquid cleaners, aerosols, or harsh chemicals, as they may damage the surface or internal components.

2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use for extended periods.
- Do not expose the device to extreme temperatures.

3. Software Updates

Periodically check the manufacturer's website for any available firmware updates to ensure optimal performance and access to new features.

TROUBLESHOOTING

If you encounter issues with your Fockety MP3 MP4 Player, please refer to the following common solutions:

- **Device will not power on:** Ensure the battery is charged. Connect the player to a power source using the USB cable and try again. Check the ON/OFF switch is in the 'ON' position.
- **Cannot connect to Bluetooth:** Ensure Bluetooth is enabled on both the player and the target device (headphones/speaker). Make sure the target device is in pairing mode. Remember, the player cannot pair with computer or phone Bluetooth.
- **Music/Video files not playing:** Verify that the files are in a supported format (MP3, WMA, APE, FLAC, WAV, OGG for music; AMV for video). Ensure the files are properly transferred to the device or memory card.
- **No sound:** Check the volume level. Ensure earphones are properly connected or Bluetooth audio device is paired and connected.
- **Screen is unresponsive or frozen:** Try restarting the device by sliding the ON/OFF switch to 'OFF' and then 'ON' again.
- **Memory card not detected:** Ensure the memory card is inserted correctly and fully. Try reinserting the card or using a different compatible memory card.

For further assistance, please refer to the 'Support' section.

SPECIFICATIONS

Model	Fockety8smuh0ixfe-14
Display	1.8-inch Color Screen

Bluetooth Version	5.0
Battery Type	180mAh Lithium-ion Battery
Charging Time	1-2 hours
Music Playback Time	Up to 10 hours (lossless music)
Expandable Memory	Supports up to 128GB small memory card (not included)
Supported Music Formats	MP3, WMA, OGG, APE, FLAC, WAV
Supported Video Formats	AMV (converted video)
Supported Image Formats	JPG, JPEG, BMP/GIF
Supported E-book Format	TXT
Material	ABS
Product Weight	76 g
Package Dimensions	17 x 8 x 2 cm

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty. Please retain your proof of purchase for any warranty claims. For specific warranty terms and conditions, refer to the documentation provided at the time of purchase or contact your retailer.

CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need further support regarding your Fockety MP3 MP4 Player, please contact your point of purchase or refer to the official Fockety website for contact information.

