



[Manuals.plus](#) /

› [FanttikRide](#) /

› FanttikRide T9 Apex Electric Scooter User Manual

## FanttikRide T9Apex

# FanttikRide T9 Apex Electric Scooter User Manual

Model: T9 Apex

## PRODUCT OVERVIEW

---

The FanttikRide T9 Apex Electric Scooter is designed for kids aged 4.3-5.6 ft, featuring a 200W motor, LED colorful lights with a Bluetooth music speaker, and adjustable speed settings. It offers a fun and safe riding experience with its robust design and intuitive controls.



Figure 1: FanttikRide T9 Apex Electric Scooter (Black model shown)

## SETUP AND ASSEMBLY

---

The FanttikRide T9 Apex Electric Scooter requires minimal assembly. The main components are pre-assembled, and only the handlebar needs to be attached.

## Unboxing and Initial Inspection

- Carefully remove all components from the packaging.
- Verify that all parts are present: scooter body, handlebar, charger, and user manual.
- Inspect for any visible damage from shipping.

## Handlebar Attachment

1. Unfold the scooter body until it locks into place.
2. Insert the handlebar stem into the main shaft.
3. Align the screw holes on the handlebar stem with those on the shaft.
4. Use the provided Allen wrench to secure the handlebar with the single screw. Ensure it is tightened firmly.



Figure 2: Handlebar attachment point. Ensure the screw is tightened securely.

## Initial Charging

Before first use, fully charge the scooter's battery. The scooter comes with a dedicated charger.

- Locate the charging port on the handlebar stem.
- Connect the charger to the scooter and then plug it into a standard wall outlet.
- The charger indicator light will show charging status (e.g., red for charging, green for fully charged).
- A full charge typically takes a few hours. It is recommended to fully charge the battery after each ride to maintain battery health.

## OPERATING INSTRUCTIONS

---

### Controls Overview

- **Power Button:** Located on the handlebar. Press and hold to turn the scooter on/off. Short press to cycle through speed modes.
- **Throttle:** Thumb-activated lever on the handlebar. Engages the motor for acceleration.
- **Light Button:** Located near the power button. Controls the LED lights on the deck.
- **Bell:** Manual bell for alerting others.

- **LED Display:** Shows current speed mode (E, N, S) and battery life.

## LED DISPLAY & 3 SAFE SPEEDS

**7 MPH**  
Max Speed  
**E(Economical)**

**10 MPH**  
Max Speed  
**N(Normal)**

**12 MPH**  
Max Speed  
**S(Sport)**



Figure 3: Close-up of the handlebar controls and LED display.

### Speed Modes

The scooter offers three user-selectable speed modes:

- **E (Economical) Mode:** Max speed of 7 MPH. Ideal for beginners or longer rides to conserve battery.

- **N (Normal) Mode:** Max speed of 10 MPH. A balanced mode for general riding.
- **S (Sport) Mode:** Max speed of 12 MPH. For experienced riders seeking maximum performance.

## Braking System

The T9 Apex features a triple brake system for enhanced safety:

- **Hand Brake (Electric Brake):** Located on the handlebar. Provides smooth, controlled deceleration.
- **Rear Fender Fast Brake:** Activated by pressing down on the rear fender with your foot. Offers quick stopping power.

# DOUBLE BRAKE SYSTEM

Hand Brake  
(Electric Brake)



Figure 4: Illustration of the hand brake and rear fender brake.

## Kick-Start Activation

For safety, the motor will only engage after the scooter reaches a minimum speed. To activate the electric motor:

1. Turn on the scooter using the power button.
2. Push off with your foot to gain initial momentum (approximately 3 MPH).
3. Once moving, press the thumb throttle to engage the electric motor.

## Adjustable Height Handlebar

The handlebar height can be adjusted to accommodate riders of different heights. This ensures a comfortable and safe riding posture.

- Locate the height adjustment clamp on the handlebar stem.
- Open the clamp and press the release button/pin.
- Adjust the handlebar to one of the three available height settings (34 in, 36.5 in, 39 in).
- Ensure the pin locks securely into the desired height hole.
- Close the clamp firmly to lock the handlebar in place.

## LED Lights and Bluetooth Speaker

The scooter features flashing rainbow LED lights on the deck and a built-in Bluetooth music speaker for an enhanced riding experience.

- **LED Lights:** Press the light button on the handlebar to cycle through 6 different light modes. These lights improve visibility and add a fun aesthetic, especially at night.
- **Bluetooth Speaker:** Easily connect your smartphone to the scooter via Bluetooth. The speaker is located on the underside of the deck. Play your favorite music directly through the scooter's speaker.

# RIDE ON THE RAINBOW

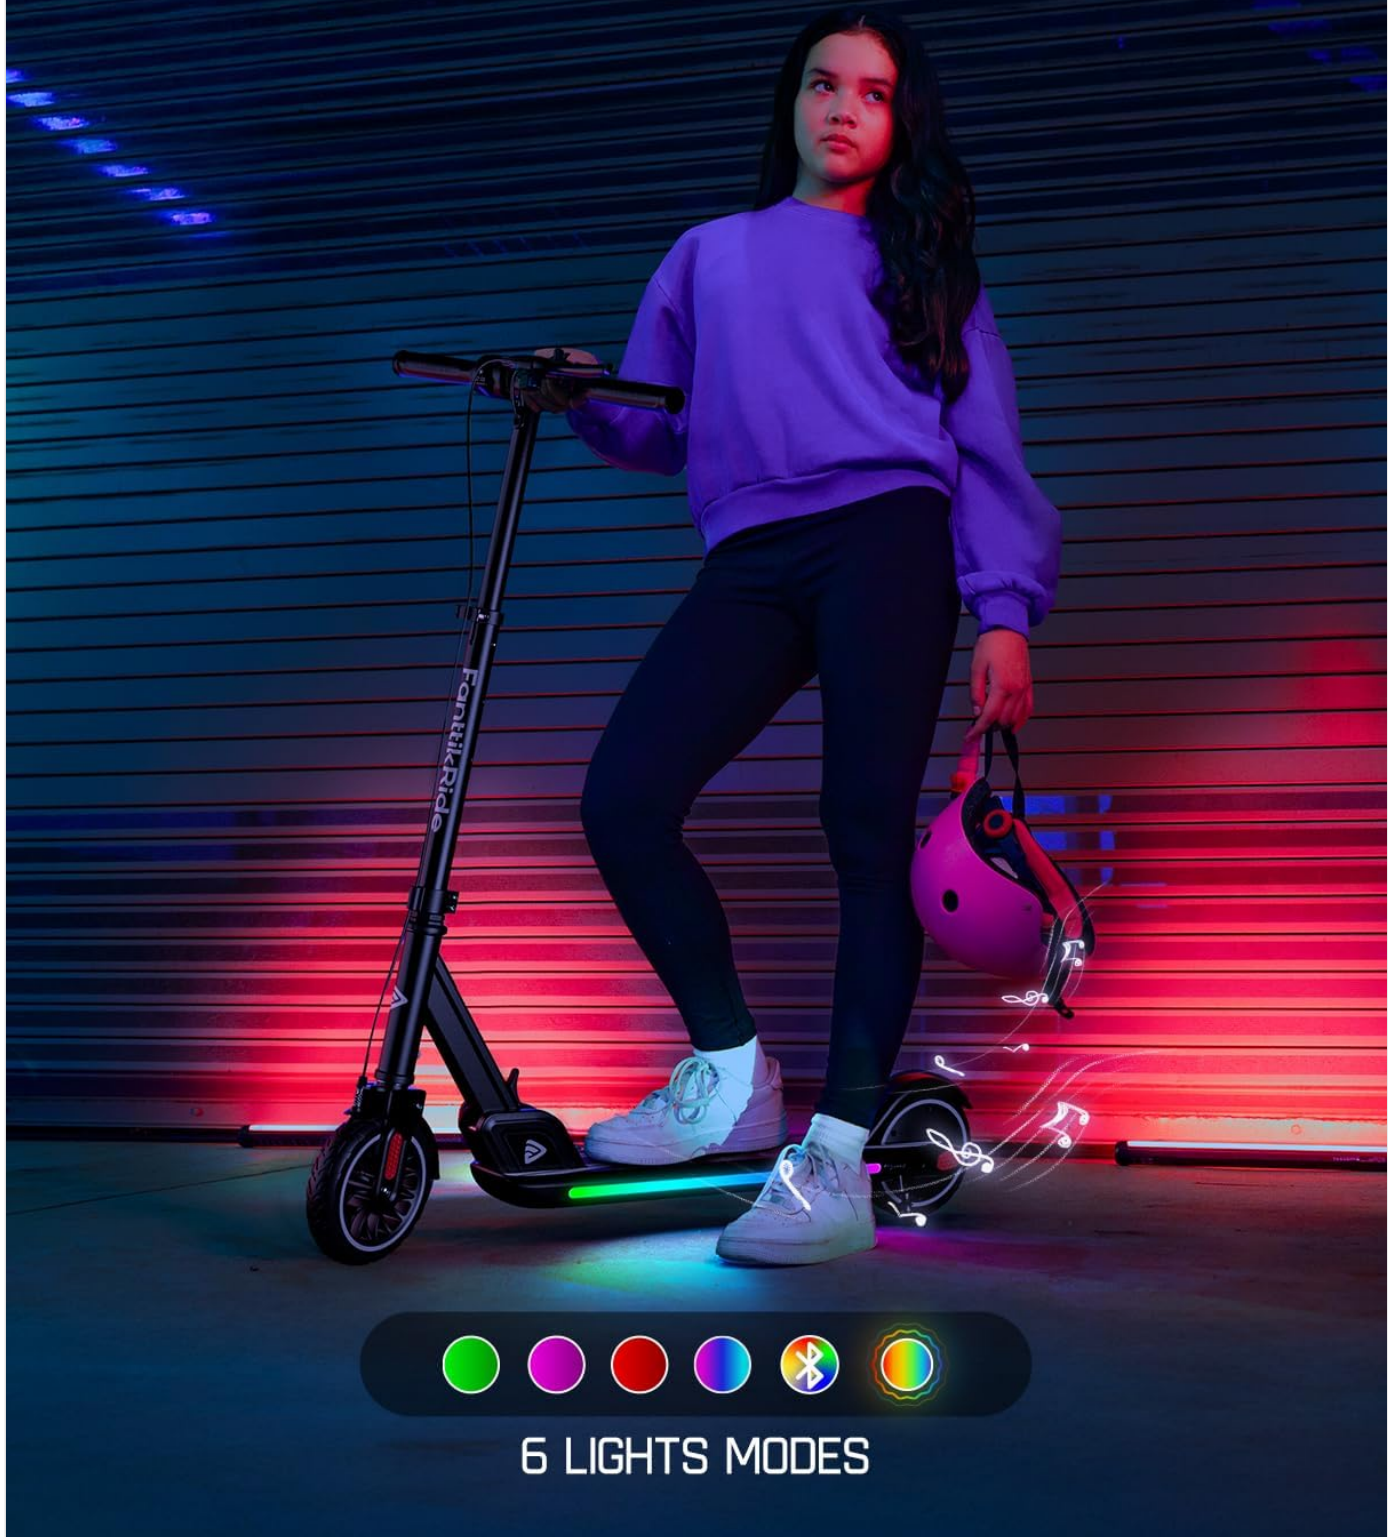


Figure 5: The scooter's deck with colorful LED lights activated.

## Portability and Storage

The T9 Apex is designed for easy portability and storage.

- **Folding Mechanism:** Locate the folding lever at the base of the handlebar stem. Release the lever and fold the handlebar down towards the deck until it locks into a compact position.
- **Carrying:** Once folded, the scooter can be easily carried by the stem. Its lightweight aluminum frame (18 lbs net weight) makes it convenient for transport.

- **Kickstand:** A convenient kickstand allows the scooter to stand upright when not in use.



Figure 6: The scooter in its folded, portable state.

## MAINTENANCE

- **Battery Care:** Always fully charge the battery after each use to prolong its lifespan. Avoid completely draining the battery.

- **Cleaning:** Wipe down the scooter with a damp cloth after use to remove dirt and debris. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

## SPECIFICATIONS

---

Feature	Specification
Brand	FanttikRide
Model Name	T9 Apex
Motor Power	200W
Max Speed	12 MPH (Sport Mode)
Max Distance Range	Up to 7 Miles (depending on rider weight and speed mode)
Battery	25.2V, 3.2Ah Lithium Battery
Playtime	Up to 40-60 minutes
Weight Limit	70 Kilograms (approx. 154 lbs)
Net Weight	18 lbs
Product Dimensions	36"L x 15.4"W x 36.1"H
Adjustable Handlebar Heights	34 in, 36.5 in, 39 in
Wheel Size	7 Inches
Brake Style	Electric/Regenerative (Hand Brake) and Rear Fender Brake
Special Features	Foldable, LED Colorful Lights, Bluetooth Music Speaker, Digital Display

## OFFICIAL PRODUCT VIDEO

---

Watch the official product video for a comprehensive overview of the FanttikRide T9 Apex Electric Scooter's features and operation.

Your browser does not support the video tag.

Video 1: FanttikRide T9 Apex Electric Scooter for Kids (Official Seller Video). This video demonstrates the scooter's key features, including its lights, speed modes, and overall design.

## WARRANTY AND SUPPORT

---

The FanttikRide T9 Apex Electric Scooter comes with a Limited Warranty. For specific warranty terms and conditions, please refer to the documentation included with your product or contact FanttikRide customer support. For any questions, technical assistance, or warranty claims, please visit the official FanttikRide website or contact their customer service department. Contact information can typically be found in the product packaging or on the brand's official online store.

