

hofstein H3866498

HOFSTEIN Koyoto Floor Lamp User Manual

Model: H3866498

[Safety Instructions](#)

[Package Contents](#)

[Setup & Assembly](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read these instructions carefully before assembly and use. Keep this manual for future reference.

- **Electrical Safety:** Always disconnect the lamp from the power supply before cleaning, maintenance, or bulb replacement. Ensure the power outlet voltage matches the lamp's requirements (230V).
- **Installation:** This lamp is designed for indoor use only (IP20). Do not expose to moisture or extreme temperatures. Ensure the lamp is placed on a stable, level surface to prevent tipping.
- **Bulb Type:** Use only E14 bulbs with a maximum wattage of 25W per light. Do not exceed the recommended wattage.
- **Handling:** Glass shades are fragile. Handle with care during assembly and cleaning.
- **Children and Pets:** Keep the lamp out of reach of children and pets to prevent accidents.
- **Damage:** Do not operate the lamp if the cord, plug, or any part of the lamp is damaged. Contact customer support for assistance.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with assembly.



Image 2.1: Exploded view of the HOFSTEIN Koyoto Floor Lamp components. This image shows the circular base, multiple pole sections, four E14 lamp holders with attached arms, two amber glass shades, two smoked glass shades, and the power cord with integrated foot switch.

- Lamp Base (1x)
- Lower Pole Section with Power Cord and Foot Switch (1x)
- Middle Pole Section (1x)
- Upper Pole Section with Lamp Holders (1x)
- Amber Glass Shades (2x)
- Smoked Glass Shades (2x)
- Assembly Hardware (screws, washers, etc. - typically pre-attached or in a small bag)
- User Manual (this document)

Note: Light bulbs are not included and must be purchased separately.

3. SETUP & ASSEMBLY

Follow these steps to assemble your HOFSTEIN Koyoto Floor Lamp.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.

2. **Attach Base:** Secure the lower pole section (with the power cord) to the lamp base using the provided screw and washer from underneath the base. Tighten firmly.
3. **Connect Pole Sections:** Screw the middle pole section onto the lower pole section. Then, screw the upper pole section (with lamp holders) onto the middle pole section. Ensure all connections are tight and secure.
4. **Install Bulbs:** Carefully screw E14 bulbs (max 25W each, not included) into each of the four lamp holders. Do not overtighten.
5. **Attach Glass Shades:** Gently place the glass shades over the lamp holders. The lamp includes two amber and two smoked glass shades. You can arrange them in any desired order. Ensure they are seated securely.
6. **Position Lamp:** Place the assembled lamp on a stable, level surface in your desired location. Ensure the power cord is not pinched or obstructed.
7. **Connect to Power:** Plug the power cord into a suitable 230V wall outlet.



Image 3.1: Dimensional diagram of the HOFSTEIN Koyoto Floor Lamp. The lamp has a total height of 160 cm, a base diameter of 30 cm, and a maximum width of 31 cm at the shades. Each glass shade has a diameter of 15 cm. The power cable length is 187 cm, with the foot switch located approximately 63 cm from the lamp base.



Image 3.2: Detail of a glass shade attachment. This image illustrates how the spherical glass shade connects to the lamp's central pole via a black metal fixture, ensuring a secure fit.

4. OPERATING INSTRUCTIONS

The HOFSTEIN Koyoto Floor Lamp is operated using a simple foot switch.

- **Turning On:** Once plugged into a power outlet, press the foot switch located on the power cord to turn the lamp on.
- **Turning Off:** Press the foot switch again to turn the lamp off.
- **Dimming:** This lamp is not dimmable. It operates at a single brightness level.



Image 4.1: The HOFSTEIN Koyoto Floor Lamp in operation, displaying its four illuminated glass shades (two amber, two smoked) on a black metal pole.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:**

- Always disconnect the lamp from the power supply before cleaning.
- Wipe the metal parts with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- For glass shades, gently wipe with a soft, damp cloth. Dry immediately with a clean, dry cloth to prevent water spots.

- **Bulb Replacement:**

- Ensure the lamp is unplugged and the bulbs have cooled completely before attempting to replace them.
- Carefully unscrew the old E14 bulb.
- Screw in a new E14 bulb (max 25W).

- **Inspection:** Periodically check the power cord and plug for any signs of damage. Ensure all connections

remain tight.

6. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Lamp does not turn on.	<ul style="list-style-type: none">o Lamp not plugged in.o Power outlet not working.o Bulb(s) faulty or loose.o Foot switch faulty.	<ul style="list-style-type: none">o Ensure the plug is fully inserted into a working outlet.o Test the outlet with another appliance.o Check if bulbs are screwed in tightly. Replace faulty bulbs.o Contact customer support if the switch is suspected to be faulty.
Lamp flickers.	<ul style="list-style-type: none">o Loose bulb connection.o Faulty bulb.	<ul style="list-style-type: none">o Tighten the bulb(s).o Replace the flickering bulb.
Lamp is unstable.	<ul style="list-style-type: none">o Not on a level surface.o Pole sections not tightened.	<ul style="list-style-type: none">o Move the lamp to a flat, stable surface.o Ensure all pole sections are securely screwed together.

If the problem persists after trying these solutions, please contact HOFSTEIN customer support.

7. SPECIFICATIONS

Model Number:	H3866498
Brand:	HOFSTEIN
Type:	Floor Lamp
Dimensions (Height x Max Diameter):	160 cm x 31 cm
Base Diameter:	30 cm
Shade Diameter:	15 cm
Cable Length:	187 cm
Material:	Metal, Glass
Shade Color:	Amber, Smoked
Number of Lights:	4
Bulb Socket Type:	E14
Max Wattage per Bulb:	25W
Bulbs Included:	No
Dimmable:	No
Power Supply:	230V

IP Rating:	IP20 (Indoor Use Only)
Switch Type:	Foot Switch

8. WARRANTY & SUPPORT

HOFSTEIN products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official HOFSTEIN website.

For technical support, replacement parts, or any questions not covered in this manual, please contact HOFSTEIN customer service:

- **Website:** [Visit the HOFSTEIN Store on Amazon](#)
- **Email/Phone:** Refer to the contact information provided on the official HOFSTEIN website or your purchase documentation.

Please have your model number (H3866498) and purchase date ready when contacting support.