

[Manuals.plus](#) /

› [WAFLOO](#) /

› WAFLOO Water Flosser Travel Mini Cordless Portable (Model Y826) Instruction Manual

WAFLOO Y826

WAFLOO Water Flosser Travel Mini Cordless Portable (Model Y826) Instruction Manual

Your guide to optimal oral hygiene on the go.

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this product. Keep this manual for future reference.

- **Caution:** Do not use while sleeping or if you have a medical condition that makes you prone to falling.
- Keep away from children.
- Do not submerge the charging port in water.
- Always unplug and allow the device to cool before charging.
- Start from the lower pressure setting. Gently press the nozzle against the tooth surface to avoid excessive distance.
- Be sure to drain the water and air dry after each use to prevent bacterial growth.
- Suggest using purified water with the dental irrigator.
- Do not direct the water flow towards the tongue, ears, nose, or other sensitive areas.
- Suggest replacing the nozzle every three months.

2. PACKAGE CONTENTS

Verify that all items are included in your package:

- 1 x WAFLOO Water Flosser Unit
- 2 x Standard Nozzles
- 1 x Orthodontic Nozzle
- 1 x Tongue Cleaner Nozzle
- 1 x USB-C Charging Cable
- 1 x Travel Pouch
- 1 x User Manual

Eliminate 99.9% of Teeth Stains

Recommended by
Professional Dentists



**Interdental
Cleaning**



**Braces
Cleaning**



**Teeth
Cleaning**



**Fresh
Breath**



Image: WAFLOO Water Flosser package contents, showing the main unit, four different nozzles, a USB-C charging cable, and a black travel pouch.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge the water flosser. The device features a USB-C charging port for convenience.

1. Connect the provided USB-C cable to the charging port on the device.
2. Plug the other end into a compatible USB power adapter (not included) or a computer USB port.
3. Charging typically takes about 3 hours. The battery indicator lights will show charging progress.
4. A full charge provides up to 30 days of use.



Image: The WAFLOO Water Flosser next to a USB-C cable and a travel bag, highlighting its portability and charging method.

3.2 Attaching a Nozzle

1. Select the desired nozzle (Standard, Orthodontic, or Tongue Cleaner).
2. Insert the nozzle into the opening at the top of the flosser until it clicks into place.
3. To remove, press the nozzle release button and pull the nozzle out.

3 Interchangeable Nozzle Types

360° Full-Mouth Clean
Total of 4 Nozzles Included



2 Classic Tips

For everyday deep cleaning



1 Orthodontic Tip

Targets braces & food debris



1 Tongue Cleaner

Removes tongue coating & bacteria



**BPA
FREE**

Image: A close-up of the three interchangeable nozzle types: two classic tips for everyday cleaning, one orthodontic tip for braces, and one tongue cleaner.

3.3 Filling the Water Tank

1. Pull down the detachable water tank from the main unit.
2. Open the wide-mouth cap on the tank.
3. Fill the tank with lukewarm purified water. The tank has a 180ml capacity.

4. Close the cap securely and push the tank back into place until it locks.



Image: Step-by-step visual guide on how to set up and use the WAFLOO Water Flosser, including inserting the tip, filling the tank, selecting a mode, and storing the tip.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Mode Selection

1. Press the power button to turn the device on.
2. Press the 'M' (Mode) button to cycle through the 5 cleaning modes:
 - **Child (30 PSI):** Gentle for kids, seniors, sensitive gums, and first-time users.
 - **Soft (60 PSI):** Designed for sensitive teeth.
 - **Normal (106 PSI):** For daily dental care.
 - **Pulse (80-120 PSI):** Dynamic pressure to massage gums.
 - **Strong (130 PSI):** Deep cleaning for a refreshed mouth.
3. The smart memory function will retain your last selected mode for the next use.
4. Press the power button again to turn the device off.

5 Most Popular Cleaning Modes



Strong – 125 psi

Deep cleaning for a truly refreshed mouth.



Normal – 106 psi

Daily dental care made easy and effective.



Soft – 60 psi

Designed for sensitive teeth and a softer touch.



Pulse – 80 to 120 psi

Dynamic pressure to massage gums and protect enamel.



Child – 30 psi

Safe and gentle for children and first-time users.



Image: Visual representation of the five cleaning modes (Child, Soft, Normal, Pulse, Strong) with their pressure levels and descriptions.

4.2 Flossing Technique

1. Lean over a sink and place the nozzle tip in your mouth.
2. Close your lips enough to prevent splashing, but allow water to flow from your mouth into the sink.
3. Aim the water stream at the gumline at a 90-degree angle.
4. Start with your back teeth and work your way to the front, pausing briefly between teeth.

5. Clean both the inside and outside surfaces of your teeth.
6. For braces, carefully clean around the brackets and wires.

Your browser does not support the video tag.

Video: Official WAFLOO product video demonstrating the use of the Water Flosser Y826, showing how to hold the device and direct the water stream for effective cleaning.

4.3 Battery Level Display

To check the battery level, long-press the 'M' (Mode) button. The mode indicator lights will illuminate to show the remaining battery:

- 5 lights = 100% battery
- 4 lights = 80% battery
- 3 lights = 60% battery
- 2 lights = 40% battery
- 1 light = 20% battery

A red light indicates low battery, signaling it's time to recharge.

5. MAINTENANCE

5.1 Cleaning the Water Tank

The detachable wide-mouth water tank is designed for easy cleaning:

1. After each use, detach the tank and empty any remaining water.
2. Rinse the tank thoroughly with clean water.
3. Allow the tank to air dry completely before reattaching or storing to prevent limescale buildup and bacterial growth.

5.2 Cleaning Nozzles

1. Rinse nozzles under running water after each use.
2. For deeper cleaning, nozzles can be soaked in a solution of 2 parts water to 1 part white vinegar for 5-10 minutes, then rinsed thoroughly.
3. Replace nozzles every three months or sooner if they show signs of wear.



Image: A set of six replacement jet tips, indicating the need for periodic replacement for optimal hygiene and performance.

5.3 Upgraded Water Filter

The WAFLOO Water Flosser includes an upgraded filter to remove impurities from the water, protecting both the device and your oral health. Ensure the filter is clean and free of debris during tank cleaning.

5.4 Storage

When not in use, store the flosser in a cool, dry place. The included travel pouch is ideal for protecting the device and keeping nozzles organized during travel.



Image: The WAFLOO Water Flosser packed in a clear travel bag, demonstrating its compact size and suitability for travel.

6. TROUBLESHOOTING

If you encounter any issues with your WAFLOO Water Flosser, please refer to the following common solutions:

- **No water flow:** Ensure the water tank is properly filled and securely attached. Check if the nozzle is correctly inserted.
- **Weak water pressure:** Recharge the battery if the indicator shows low power. Ensure the nozzle is not clogged.
- **Device not turning on:** Ensure the device is fully charged. If it still doesn't turn on, contact customer support.
- **Leaking:** Verify that the water tank cap is tightly closed and the tank is correctly seated on the main unit. Ensure the bottom cover is securely closed to prevent water damage.

Your browser does not support the video tag.

Video: Official WAFLOO product video showcasing the travel water flosser in use, demonstrating its features and portability.

7. SPECIFICATIONS

Model Number	Y826
Dimensions	6.3 x 3.31 x 3.23 inches
Weight	11.29 ounces (approx. 0.7 lbs)
Water Tank Capacity	180 ml
Battery Life	Up to 30 days on a full charge
Charging Time	Approximately 3 hours (USB-C)
Water Pressure Range	30 PSI (Child) to 130 PSI (Strong)
Pulse Frequency	1400-1800 times/min
Waterproof Rating	IPX7
Material	Acrylonitrile Butadiene Styrene (ABS)

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

The WAFLOO Water Flosser (Model Y826) comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use.

Additionally, WAFLOO offers a **free 60-day refund/replacement policy** from the date of purchase.

8.2 Customer Support

For any questions, concerns, or warranty claims, please contact WAFLOO customer support:

- **24-hour after-sales service** is available.
- **Lifetime technical support** is provided for your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question