

[Manuals.plus](#) /

› [COSTWAY](#) /

› COSTWAY Adjustable Double-Sided Children's Easel Whiteboard and Chalkboard Instruction Manual

COSTWAY TY339283PUDE

COSTWAY Adjustable Double-Sided Children's Easel Instruction Manual

Model: TY339283PUDE

PRODUCT OVERVIEW

The COSTWAY Children's Easel is a versatile, double-sided drawing board designed for young artists. It features both a whiteboard and a chalkboard, allowing for various creative activities. The easel's height is adjustable, accommodating children of different ages and sizes. Constructed from child-friendly materials, it ensures a safe and engaging experience. The drawing board can also be detached for portable use.



Image: The COSTWAY Children's Easel in use, demonstrating its double-sided functionality with two children engaged in drawing activities.

SETUP INSTRUCTIONS

Follow these steps to assemble your COSTWAY Children's Easel:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the 'Package Contents' section are present.
- 2. Assemble the Frame:** Connect the main support legs to the central frame. Ensure all connections are secure.
- 3. Adjust Height:** The easel comes with two sets of legs (short and long) to adjust the overall height. Select the appropriate leg set for your child's height. Insert the chosen legs into the designated slots on the easel frame until they click into place.
- 4. Attach Drawing Board:** Secure the double-sided drawing board to the top of the easel frame. Ensure it is firmly attached and can rotate freely.
- 5. Install Storage Tray:** Attach the storage tray to the lower part of the easel frame. This tray is designed to hold art supplies like markers, chalk, and erasers.

Höhenverstellbar

107cm

81cm



Abnehmbare Beine mit
verschiedenen Höhen

Image: The easel's height adjustment mechanism, showing how to switch between shorter and longer leg configurations for different user heights.



Image: Detailed view of the removable legs, highlighting the components used for adjusting the easel's height.

OPERATING INSTRUCTIONS

Double-Sided and Rotatable Board

The easel features a double-sided board with a whiteboard on one side and a chalkboard on the other. To switch between the two surfaces, simply rotate the board 360 degrees. Ensure the board clicks into place securely after rotation.

360° drehbar & doppelseitiges Design



Whiteboard



Wandtafel



360 Drehung



Beschreibbar



Bemalbar



Magnetisch



Abwischbar



Image: Visual guide demonstrating the 360-degree rotation of the drawing board, allowing easy access to both the whiteboard and chalkboard surfaces.

Removable Drawing Board

For portable use or to allow children to draw on a flat surface, the drawing board can be easily detached from the easel frame. Simply unclip the board from its supports and use the integrated handle for carrying. To reattach, align the board with the supports and secure it firmly.

Produkt Abmessungen



Image: The drawing board detached from the easel, being carried by a child using its convenient handle, highlighting its portability.

Using the Storage Tray and Clips

The easel includes a storage tray with compartments for organizing markers, chalk, erasers, and other art supplies. Additionally, paper clips are integrated at the top of the board to hold drawing paper in place.



Image: Detailed view of the easel's practical design elements, such as the paper clips for securing artwork, rounded corners for safety, and the integrated storage tray for art supplies.

MAINTENANCE

- **Cleaning the Whiteboard:** Use a dry-erase marker eraser or a soft, damp cloth to clean the whiteboard surface. For stubborn marks, use a whiteboard cleaner.
- **Cleaning the Chalkboard:** Use a chalkboard eraser to remove chalk. For a thorough clean, wipe with a damp cloth and allow to dry completely before next use.
- **General Cleaning:** Wipe down the plastic frame and legs with a soft, damp cloth as needed. Avoid abrasive cleaners or solvents that could damage the material.
- **Storage:** When not in use, store the easel in a dry place away from direct sunlight to prevent material degradation.
- **Inspection:** Periodically check all connections and screws to ensure they remain tight and secure for safe use.

TROUBLESHOOTING

- **Board not rotating smoothly:** Check for any obstructions around the rotation mechanism. Ensure the board is correctly seated in its supports.
- **Easel feels unstable:** Verify that all leg connections are securely fastened. Ensure the easel is placed on a flat, stable surface.
- **Marks not erasing completely:** For whiteboards, ensure you are using dry-erase markers and a proper dry-erase eraser. For chalkboards, ensure chalk is not oil-based. Use appropriate cleaning solutions if necessary.

If you encounter any issues not covered here, please contact COSTWAY customer support for assistance.

SPECIFICATIONS

Brand	COSTWAY
Model Number	TY339283PUDE
Material	PP (Plastic)
Drawing Board Dimensions (L x W)	51 cm x 40 cm
Folded Easel Dimensions (L x W x H)	56.5 cm x 33.5 cm x 82 cm
Unfolded Easel Dimensions (L x W x H)	61.5 cm x 48.5 cm x 109 cm
Gross Weight	4.5 kg
Recommended Age	3 years and up
Included Components	Color cups, short legs, long legs



Image: Detailed product dimensions for both the fully extended and more compact easel setups.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact COSTWAY customer service directly. Keep your purchase receipt and model number (TY339283PUDE) handy when contacting support.