

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HONEY JOY](#) /
- › [HONEY JOY Kids Electric Vespa Scooter User Manual](#)

## HONEY JOY HJ-2712-US

# HONEY JOY Kids Electric Vespa Scooter User Manual

Model: HJ-2712-US

## INTRODUCTION

---

Thank you for choosing the HONEY JOY Kids Electric Vespa Scooter. This manual provides important information regarding the assembly, operation, maintenance, and safety of your new electric scooter. Please read this manual thoroughly before assembly and use to ensure safe and proper operation. Keep this manual for future reference.



Image: A child demonstrating the use of the HONEY JOY Kids Electric Vespa Scooter.

## SAFETY INFORMATION

**WARNING:** To avoid serious injury, please observe the following safety guidelines:

- Adult supervision is required at all times.
- This product is suitable for children aged 18 to 36 months old. Do not allow children outside this age range to operate the scooter.
- Maximum weight capacity is 55 lbs (25 kg). Do not exceed this limit.
- Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Do not operate the scooter near stairs, hills, roadways, swimming pools, or other hazardous areas.
- Ensure the scooter is fully assembled and all fasteners are secure before each use.
- Keep hands, hair, and clothing away from moving parts.
- Only use the charger provided with the scooter.
- Do not modify the electrical system. Alterations could cause a fire, explosion, or electric shock.



**Awesome Gift  
for Boys & Girls**

  
Suitable Age  
18-36 Months

  
Safe  
Materials

  
ASTM  
INTERNATIONAL

  
Family  
Interactions

Image: Emphasizing the scooter's suitability for ages 18-36 months and its construction from safe, ASTM-compliant materials.

## PACKAGE CONTENTS

---

Please check the package carefully to ensure all items are present and undamaged:

- 1 x Kids Ride on Motorcycle (Main Body)
- 1 x Charger
- 1 x User Guide (This Manual)

## FEATURES

---

The HONEY JOY Kids Electric Vespa Scooter is designed with several features for a fun and safe riding experience:

- **Powerful Motor:** Equipped with a 30W motor and 6V battery for consistent performance.
- **Training Wheels:** Removable training wheels provide stability for beginners and can be detached as confidence grows.
- **Anti-Toppling Stopper:** A rear anti-tip device prevents tilting or tipping accidents, enhancing safety.
- **LED Headlights & Horn:** Bright LED headlights and realistic horn sounds add to the riding experience.
- **Anti-Slip Foot Pedal:** Designed for secure and easy control of the scooter.
- **Comfortable Seat:** A wide, cozy seat ensures comfort during play.
- **Durable Wheels:** Puncture-resistant PP wheels are suitable for various surfaces, including wood floors, asphalt, and concrete.
- **Dashboard Simulation:** A simulated dashboard adds to the realistic play experience.

# Extra Stability

Prevents Tilting or Tipping Accidents



Removable  
Training Wheels

Anti-Toppling  
Stopper

Image: Detail of the removable training wheels and anti-toppling stopper for enhanced stability.

# Cool Lights & Horns

Bright LED Headlights

Horn Sounds for More Fun

Image: Bright LED headlights and horn feature for interactive play.



Anti-slip Foot Pedal

# Effortless Control

Kids can learn to scoot around in no time

Image: The anti-slip foot pedal designed for easy and safe control.

# Comfort, Captivation & Convenience



**Wide  
Cozy Seat**



**Dashboard  
Simulation**



**Rear Charging  
Port**

Image: Features including the wide seat, simulated dashboard, and convenient rear charging port.

## ASSEMBLY

---

Assembly is required for this product. Please follow the instructions provided in the separate assembly guide (if included) or refer to the detailed diagrams and steps below. Ensure all parts are accounted for before beginning assembly.

1. Unpack all components and lay them out on a clean, flat surface.
2. Attach the front wheel assembly to the main body, securing it with the provided fasteners.
3. Install the handlebars, ensuring they are firmly in place and aligned.
4. Attach the seat to the designated area on the scooter.
5. If using, attach the training wheels to the rear axle. Ensure they are securely fastened.
6. Connect any necessary electrical wires as indicated in the diagrams.
7. Perform a final check to ensure all screws, bolts, and connections are tight and secure.



Image: The scooter in its complete form, illustrating the final assembled product.

## SETUP

---

### Initial Charging

Before first use, the scooter's battery must be fully charged. This typically takes 8-10 hours.

1. Locate the charging port, typically at the rear of the scooter.
2. Ensure the scooter is turned OFF before charging.
3. Plug the charger into a standard wall outlet.
4. Connect the charger's plug to the scooter's charging port.
5. The charger's indicator light will show the charging status (refer to charger manual for specific light indications).
6. Once fully charged, disconnect the charger from the scooter and then from the wall outlet.

**Important:** Do not overcharge the battery. Do not leave the battery charging for more than 12 hours.

## OPERATING INSTRUCTIONS

Operating the HONEY JOY Kids Electric Vespa Scooter is simple and intuitive:

1. **Power On:** Locate the power button (often a one-button start) and press it to turn on the scooter. The headlights may illuminate.
2. **Riding:** The scooter is controlled by a foot pedal. To move forward, press down on the anti-slip foot pedal. Release the pedal to stop.
3. **Steering:** Use the handlebars to steer the scooter left or right.
4. **Horn:** Press the horn button on the handlebars to activate the horn sound.
5. **Power Off:** When finished riding, press the power button again to turn off the scooter.

The scooter has a gentle speed limit of approximately 1.6 mph (2.5 km/h), designed for young riders to gain confidence safely.



Image: Illustrating the scooter's ability to be ridden on various indoor and outdoor surfaces.

## MAINTENANCE

---

Regular maintenance will help prolong the life of your HONEY JOY Kids Electric Vespa Scooter:

- **Cleaning:** Wipe the scooter with a soft, damp cloth. Do not use abrasive cleaners or solvents. Do not spray water directly onto the scooter.
- **Battery Care:**
  - Charge the battery fully after each use.
  - If storing for an extended period, charge the battery every 30 days to maintain its life.
  - Do not store the scooter in extreme temperatures.
- **Inspections:** Periodically check all screws, nuts, and bolts to ensure they are tight. Inspect wheels for wear and tear.
- **Storage:** Store the scooter in a dry, cool place away from direct sunlight and moisture.

## TROUBLESHOOTING

---

If you encounter issues with your scooter, please refer to the following common problems and solutions:

| Problem                     | Possible Cause  | Solution   |
|-----------------------------|---|--|
| Scooter does not move.      | Battery is low or dead.<br>Power switch is OFF.<br>Loose wire connection.             | Charge the battery fully.<br>Turn the power switch ON.<br>Check all electrical connections.      |
| Scooter moves slowly.       | Battery is low.<br>Overloaded (exceeds weight limit).<br>Riding on an uneven surface. | Recharge the battery.<br>Ensure rider weight is within limits.<br>Ride on flat, smooth surfaces. |
| Lights or horn not working. | Loose wire connection.<br>Battery is low.   | Check connections to lights/horn.<br>Charge the battery.   |

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

---

| Attribute                      | Value                                 |
|--------------------------------|---------------------------------------|
| Model Number                   | HJ-2712-US                            |
| Color                          | White (Other colors may be available) |
| Materials                      | PP, Metal                             |
| Product Dimensions (L x W x H) | 26" x 15" x 20" (66.5 x 38 x 52 cm)   |
| Seat Size (L x W)              | 10" x 6" (25 x 15 cm)                 |
| Net Weight                     | 10 lbs (4.5 kg)                       |
| Maximum Weight Capacity        | 55 lbs (25 kg)                        |

| Attribute     | Value              |
|---------------|--------------------|
| Suitable Ages | 18-36 Months Old   |
| Motor         | 6V, 30W            |
| Battery       | 6V, 4AH            |
| Speed         | 1.6 mph (2.5 km/h) |
| Charger Input | AC120V, 0.2A, 60Hz |



Image: Visual representation of the scooter's key dimensions and specifications.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact HONEY JOY customer service. Please have your model number (HJ-2712-US) and purchase date ready when contacting support.

For further assistance, visit the official HONEY JOY store on Amazon: [HONEY JOY Store](#)



© 2023 HONEY JOY. All rights reserved.