



[Manuals.plus](#) /

› [XINJISHIMIN](#) /

› Replacement Remote Control User Manual

XINJISHIMIN C124103102D01(jin14+zhijia)

XINJISHIMIN Replacement Remote Control User Manual

Model: C124103102D01(jin14+zhijia)


INTRODUCTION

This user manual provides comprehensive instructions for the XINJISHIMIN Replacement Remote Control, designed for seamless compatibility with HY300, HY300PRO, HY320mini, and HY320 Mini Projectors. Please read this manual thoroughly before use to ensure proper operation and longevity of your device.

PRODUCT OVERVIEW



Image: The replacement remote control shown alongside its included wall mounting bracket. The remote is black with clearly labeled buttons, and the bracket is white.

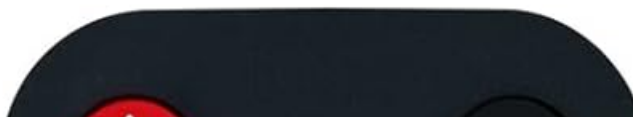



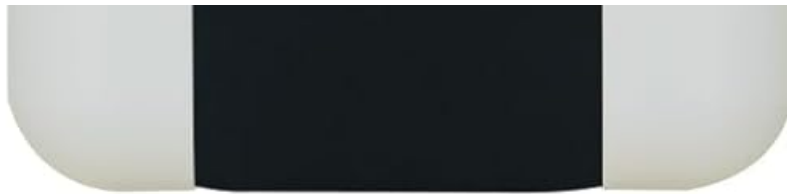


Image: The black replacement remote control is shown securely inserted into the white wall mounting bracket, demonstrating how it fits for storage or display.



Image: A conference room setting with a projector displaying a sales report. The remote control and its bracket are shown on the right, indicating its use with a projector system.





Image: The back of the remote control, highlighting the battery compartment cover with an arrow indicating how to slide it open for battery installation.

The XINJISHIMIN Replacement Remote Control is a compact, black remote designed for specific mini projector models. It features essential control buttons and comes with a white wall mounting bracket for convenient storage. The remote operates on two AAA 1.5V batteries (not included).

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA 1.5V batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.












Note: Batteries are not included with the remote control. Please use new, high-quality AAA batteries for optimal performance.

2. Initial Pairing (No Programming Needed)

This replacement remote control is designed for immediate use with compatible HY300, HY300PRO, HY320mini, and HY320 Mini Projectors. No programming or complex pairing procedures are required. Simply insert the batteries, and the remote should function directly with your projector.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control:

Button Icon/Label	Function	Description
 Power (Red Button)	Power On/Off	Press to turn the projector on or off.
 Mute	Mute/Unmute Audio	Toggles the audio output of the projector on or off.
 Input Source	Select Input Source	Cycles through available input sources (e.g., HDMI, USB, AV).
 Screen Mirroring	Activate Screen Mirroring	Initiates the screen mirroring function for compatible devices.
 Mouse Mode	Toggle Mouse Pointer	Activates or deactivates the on-screen mouse pointer for navigation.
 Directional Pad (Up/Down/Left/Right) & OK	Navigation & Selection	Use directional arrows to navigate menus and the OK button to confirm selections.
 Back/Return	Go Back	Returns to the previous screen or menu.
 Menu	Access Menu	Opens the projector's main menu or context-sensitive menu.
 Home	Go to Home Screen	Returns to the projector's main home interface.
 Volume Down (-)	Decrease Volume	Reduces the audio volume.
 Volume Up (+)	Increase Volume	Increases the audio volume.

Point the remote control directly at the projector's IR receiver for optimal response.

MAINTENANCE

Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, aerosols, or abrasive cleaning agents, as these can damage the remote's surface or internal components.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both AAA batteries at the same time.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

Storage

- Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.
- Utilize the provided wall mounting bracket for secure and convenient storage, preventing misplacement or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not responding.	<ul style="list-style-type: none">◦ Dead or incorrectly inserted batteries.◦ Obstruction between remote and projector.◦ Remote is out of range.	<ul style="list-style-type: none">◦ Replace batteries with new AAA 1.5V batteries, ensuring correct polarity.◦ Remove any objects blocking the line of sight between the remote and the projector's IR receiver.◦ Move closer to the projector.
Some buttons are not working.	<ul style="list-style-type: none">◦ Low battery power.◦ Dirt or debris under buttons.	<ul style="list-style-type: none">◦ Replace batteries.◦ Gently clean around the buttons with a soft, dry cloth.
Remote works intermittently.	<ul style="list-style-type: none">◦ Weak batteries.◦ Interference from other electronic devices.	<ul style="list-style-type: none">◦ Replace batteries.◦ Ensure no other devices are causing IR interference.

SPECIFICATIONS

Model: C124103102D01(jin14+zhijia)

Brand: XINJISHIMIN

Compatible Projectors: HY300, HY300PRO, HY320mini, HY320 Mini Projector

Power Source: 2 x AAA 1.5V Batteries (not included)

Dimensions: 7.72 x 3.35 x 1.38 inches (Package Dimensions)

Item Weight: 1.44 ounces

Special Feature: Includes Wall Mounting Bracket

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your original projector or contact the XINJISHIMIN customer service directly. As this is a replacement remote, specific warranty terms may vary. Keep your purchase receipt for any warranty claims.

For further assistance, please visit the official XINJISHIMIN support website or contact their customer service department.