

Severin MW 7982

SEVERIN MW 7982 4-in-1 Microwave Oven User Manual

Model: MW 7982

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your SEVERIN MW 7982 4-in-1 Microwave Oven. This appliance combines microwave, grill, hot air fryer, and oven functions, offering versatile cooking options. Please read this manual thoroughly before first use and keep it for future reference. The SEVERIN MW 7982 is designed for domestic use and features a 25-liter capacity, 10 power levels, and 10 automatic cooking programs. Its stainless steel design ensures durability and easy cleaning.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not operate the oven if the door or door seals are damaged. Contact qualified service personnel.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.
- Do not use this appliance for commercial purposes.
- Always ensure proper ventilation around the appliance.

3. PRODUCT COMPONENTS AND OVERVIEW

Familiarize yourself with the main parts and accessories of your SEVERIN MW 7982 microwave oven.



Figure 3.1: Front view of the SEVERIN MW 7982 microwave oven, showcasing its stainless steel finish and control panel on the right side.



Including
BACKING TRAY
AIR FRAYER TRAY
PIZZA PLATE

Figure 3.2: The accessories included with the microwave oven: a round cooking rack, a non-stick coated air fryer tray, and a non-stick coated pizza plate.

Included Accessories:

- Removable Turntable ($\varnothing 27$ cm)
- Cooking Rack
- Non-stick Coated Pizza Plate ($\varnothing 28$ cm)
- Non-stick Coated Air Fryer Tray

4. SETUP

4.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check for any damage. Do not operate the appliance if it appears damaged.

4.2 Placement

- Place the oven on a stable, level surface that can support its weight.
- Ensure adequate ventilation: leave a minimum of 20 cm clearance above the oven, 10 cm at the rear, and 5 cm on each side. Do not block any ventilation openings.
- Keep the oven away from heat sources, strong magnetic fields, and areas with high humidity.

4.3 Initial Cleaning

Before first use, wipe the interior and exterior surfaces of the oven with a damp cloth. Wash the turntable, cooking rack, pizza plate, and air fryer tray in warm, soapy water. Dry all parts thoroughly.

4.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating label on the appliance.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview



Figure 5.1: A detailed view of the LED touch display and the various control buttons and rotary knob on the right side of the microwave oven.

The appliance features an LED touch display, a 360° rotary knob, and four program buttons for easy operation.

5.2 Setting the Clock

Upon initial power-up or after a power outage, the display will show '0:00'. Follow the instructions in your full manual to set the current time using the rotary knob and confirmation button.

5.3 Microwave Cooking

The microwave function offers 10 power levels. Place food in a microwave-safe container on the turntable.

1. Press the Microwave button.
2. Use the rotary knob to select the desired power level (e.g., P100 for full power, P50 for medium).
3. Use the rotary knob to set the cooking time.
4. Press the Start button to begin cooking.

5.4 Grill Function

The grill function is ideal for browning and crisping food. Use the cooking rack for best results.

1. Press the Grill button.
2. Use the rotary knob to set the grilling time.
3. Press the Start button.

5.5 Hot Air Fryer Function

This function allows for crispy results with little to no oil. Use the dedicated air fryer tray.



Figure 5.2: The air fryer tray with food, positioned inside the microwave oven, demonstrating the hot air circulation feature.

4-in-1 Kombination aus Mikrowelle, Heißluft-Fritteuse, Ofen & Grill.



Figure 5.3: An internal view of the microwave oven highlighting the 360° hot air circulation for even cooking and crisping.

1. Press the Hot Air Fryer button.
2. Use the rotary knob to select the desired temperature (up to 230°C).
3. Set the cooking time using the rotary knob.
4. Press the Start button.

5.6 Combination Modes

The microwave, grill, and hot air functions can be programmed together or separately. Refer to the full manual for specific combination settings.

5.7 Automatic Programs

The oven includes 10 automatic programs for various food types. Select the desired program and the oven will automatically set the cooking time and power level.

5.8 Memory Function (Favourite Dish)

The 'Favourite Dish' function allows you to save up to 3 preferred cooking settings (power and duration) for quick recall.

1. Set your desired power level and cooking time.
2. Press and hold the Memory button until the display confirms saving.
3. To recall, press the Memory button to cycle through saved programs and then Start.

5.9 Child Safety Lock

To activate the child safety lock, press and hold the designated button (refer to control panel diagram in full manual) until a lock icon appears on the display. This prevents accidental operation. Repeat the process to deactivate.

5.10 'Be-Silent' Function

This function allows you to deactivate the audible signal (beeps) for silent operation. Refer to the full manual for activation/deactivation steps.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

6.1 Exterior Cleaning

Wipe the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could scratch the stainless steel finish.

6.2 Interior Cleaning

Clean the interior cavity after each use. For stubborn food splatters, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen residue. Then wipe with a damp cloth.

6.3 Turntable and Accessories

The removable turntable, cooking rack, pizza plate, and air fryer tray can be washed by hand in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, consult the following table before contacting customer service.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food during cooking; Adjust power level and cooking time as needed.

Problem	Possible Cause	Solution
Excessive steam inside door	High moisture content in food.	This is normal for foods with high moisture. Wipe the interior after use.
Child lock activated	Oven controls are locked.	Deactivate child lock by pressing and holding the lock button.

8. TECHNICAL SPECIFICATIONS

Detailed specifications for the SEVERIN MW 7982 microwave oven.

Tiefe: 47,5 cm



48,5 cm

Figure 8.1: The overall dimensions of the SEVERIN MW 7982 microwave oven, showing a width of 48.5 cm, depth of 47.5 cm, and height of 28 cm.

Feature	Specification
Model Number	MW 7982
Brand	Severin
Capacity	25 Liters
Microwave Power	900 Watts
Total Power (Max)	2150 Watts
Voltage	220 Volts

Feature	Specification
Dimensions (L x W x H)	48.5 x 47.5 x 28 cm
Weight	16.3 Kilograms
Material	Stainless Steel
Installation Type	Freestanding
Special Features	Digital Control, 10 Power Levels, 10 Automatic Programs, Memory Function, Child Safety Lock, 'Be-Silent' Function
Cooking Modes	Microwave, Grill, Hot Air Fryer

9. WARRANTY AND SUPPORT

Your SEVERIN MW 7982 microwave oven comes with a **2-year warranty**, reflecting the brand's commitment to quality and durability. This warranty covers manufacturing defects and ensures performance under normal domestic use.

For technical support, spare parts, or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official Severin website.

© 2025 Severin. All rights reserved.

Related Documents - MW 7982

 <p>SEVERIN</p> <p>ART.-NO. MW 7982 / MW 7983 / MW 7984 / MW 7985</p> <p>DE: Bedienungsanleitung EN: User manual FR: Mode d'emploi NL: Gebruiksaanwijzing NO: Bruksanvisning ES: Manual de uso PT: Manual de uso DK: Brugervejledning HU: Használati útmutató IT: Manuale d'uso GR: Εγχειρίδιο χρήσης SV: Användarhandbok NO: Bruksanvisning NO: Bruksanvisning</p>	<p><u>SEVERIN Mikrowelle mit Grillfunktion - Bedienungsanleitung</u></p> <p>Umfassende Bedienungsanleitung für die SEVERIN Mikrowelle mit Grillfunktion, Modellreihen MW 7892, MW 7893, MW 7894, MW 7898. Erfahren Sie mehr über Sicherheit, Bedienung und Funktionen wie Auftauen, Erwärmen und Grillen.</p>
 <p>SEVERIN</p> <p>ART.-NO. MW 7775 / MW 7803</p> <p>DE: Bedienungsanleitung EN: User manual FR: Mode d'emploi NL: Gebruiksaanwijzing NO: Bruksanvisning ES: Manual de uso PT: Manual de uso DK: Brugervejledning HU: Használati útmutató IT: Manuale d'uso GR: Εγχειρίδιο χρήσης SV: Användarhandbok NO: Bruksanvisning NO: Bruksanvisning</p>	<p><u>Severin MW 7775 / MW 7803 Microwave Oven User Manual</u></p> <p>Comprehensive user manual for the Severin MW 7775 and MW 7803 microwave ovens, covering operation, safety instructions, and features like microwave, grill, and hot air functions.</p>

Documents - Severin – MW 7982



[pdf]

7982000 de CrispyWave Microonde con funzione grill e aria calda MW 7918 SEVERIN Official severin 2024 12 |||

MW 7982 CrispyWave - Mikrowelle mit Grill- und Heiluftfunktion 4-in-1 Kombination aus Mikrowelle, Heiluft-Fritteuse, Ofen Grill: mit bis zu 230 C, perfekt fr Pommes, Lachs, Hhnchen oder Gemse Hochwertiges Edelstahl-Design mit ansprechend verspiegelter Tr Inkl. Grillrost und antihaft-beschichtet...

lang:de score:14 filesize: 755.67 K page_count: 3 document_date: 2024-12-05

