

BarcaLounger Maple 3P-1446-3768-86

BarcaLounger Maple Power Swivel Glider Recliner Instruction Manual

Model: Maple 3P-1446-3768-86

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your BarcaLounger Maple Power Swivel Glider Recliner. Please read this manual thoroughly before assembly and operation to ensure proper function and longevity of your product.

The BarcaLounger Maple Power Swivel Glider Recliner features a low-profile design with a 360-degree swivel, power reclining mechanism, and a gliding function. It includes a steel seat box, a semi-attached back cushion, and a boxed-style chaise seat designed to support the legs and eliminate pressure points. Reclining functions are controlled by small round push buttons located on the inside of the arm.



Figure 1: BarcaLounger Maple Power Swivel Glider Recliner (Seville-Fawn)

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Ensure sufficient space of at least 15 inches (38 cm) from any wall or obstruction for the recliner to fully recline without interference.
- Keep children and pets away from the reclining mechanism, especially during operation, to prevent entrapment or injury.
- Do not allow children to play on or operate the recliner.
- Avoid placing hands or feet near the moving parts of the reclining mechanism.
- Do not stand on the footrest or armrests.
- Ensure the power cord is not pinched or damaged. Keep it away from high-traffic areas.
- Only use the recliner on a level surface.
- Unplug the recliner from the power outlet before cleaning or maintenance.

SETUP

Your recliner may require minimal assembly. Follow these general steps:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials until assembly is complete in case of return.
2. **Component Identification:** Verify all parts are present according to the packing list (not provided in this manual, refer to product packaging).
3. **Backrest Attachment:** If the backrest is separate, align the metal receivers on the backrest with the posts on the

chair base. Push down firmly until the backrest locks into place. You should hear a click.

4. **Power Connection:** Locate the power cord. Connect the power adapter to the recliner's power input, then plug the adapter into a standard wall outlet. Ensure the connection is secure.
5. **Positioning:** Place the recliner in its desired location, ensuring the required 15-inch (38 cm) clearance from walls or other furniture for full recline.



Figure 2: Front view of the recliner.

OPERATING INSTRUCTIONS

Your BarcaLounger recliner features power reclining, swivel, and gliding functions for optimal comfort.

Power Recline Operation

The power recline function is controlled by two small round push buttons located on the inside of the armrest.



Figure 3: Recline control buttons.

- To recline the chair and extend the footrest, press and hold the "Recline +" button. Release the button when you reach your desired position.
- To return the chair to the upright position and retract the footrest, press and hold the "Recline -" button. Release the button when the chair is fully upright or in your desired position.
- The power layflat mechanism allows for infinite reclining positions from upright to fully reclined.



Figure 4: Recliner in a partially reclined state.



Figure 5: Reclining mechanism in extended position.

Swivel and Glider Functions

- The chair features a 360-degree swivel base, allowing you to rotate freely while seated.
- The glider function allows for a smooth back-and-forth motion. This function operates independently of the recline.

MAINTENANCE

Proper care and maintenance will extend the life and appearance of your recliner.

Leather Care

- **Regular Cleaning:** Dust the leather regularly with a soft, dry cloth. For light cleaning, wipe with a damp cloth and then dry immediately.

- **Spills:** Blot spills immediately with a clean, absorbent cloth. Do not rub. For stubborn stains, consult a professional leather cleaning service.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause leather to fade and dry out. Position your recliner away from direct sunlight.
- **Avoid Heat Sources:** Keep the recliner away from heat sources like radiators or fireplaces, which can dry and crack the leather.
- **Conditioning:** Periodically condition the leather with a reputable leather conditioner to keep it supple and prevent cracking. Follow the product manufacturer's instructions.

Mechanism Care

- **Lubrication:** The reclining mechanism is designed for long-term use and typically does not require lubrication. If you notice squeaking or stiffness, contact customer support.
- **Inspections:** Periodically inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer support for replacement.

TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not operate (no power).	<ul style="list-style-type: none">• Power cord unplugged.• Outlet not functioning.• Power adapter issue.	<ul style="list-style-type: none">• Ensure power cord is securely plugged into the recliner and the wall outlet.• Test the outlet with another appliance.• Contact customer support if the adapter is suspected to be faulty.
Reclining mechanism is stiff or noisy.	<ul style="list-style-type: none">• Obstruction in mechanism.• Mechanism requires inspection.	<ul style="list-style-type: none">• Inspect the area under and around the recliner for any obstructions.• Contact customer support for assistance. Do not attempt to lubricate or repair the mechanism yourself.
Chair does not swivel smoothly.	<ul style="list-style-type: none">• Obstruction under the base.• Uneven floor surface.	<ul style="list-style-type: none">• Check for any objects under the swivel base.• Ensure the recliner is on a flat, level surface.

SPECIFICATIONS

The following are the technical specifications for the BarcaLounger Maple Power Swivel Glider Recliner:

Model Name: Maple

Item Model Number: 3P-1446-3768-86

Color: Seville-Fawn

Product Dimensions (Upright): 38"D x 31"W x 38"H (96.5 cm D x 78.7 cm W x 96.5 cm H)

Seat Height: 21 Inches (53.3 cm)

Seat Depth: 22 Inches (55.9 cm)

Item Weight: 124 pounds (56.2 kg)

Material: Leather

Fill Material: Foam

Back Style: 360-Degree Swivel

Arm Style: Rounded

Leg Style: Sled Base

Reclining Position Count: 2 (Upright and Fully Reclined, with infinite positions in between)

Wall Proximity Required: 15 inches (38 cm)

UPC: 850063215725



Figure 6: Back view of the recliner.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official BarcaLounge website. If you require technical assistance, replacement parts, or have questions not covered in this manual, please contact BarcaLounge customer support.

BarcaLounge Customer Support:

Website: www.barcalounge.com

Contact Information: Refer to the website for current contact methods (phone, email, etc.).