

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Vente-unique](#) /
- › [Vente-unique LOXTON Reversible Aluminum and Tempered Glass Door Block - H204 x L73 cm - White Instruction Manual](#)

Vente-unique LOXTON

Vente-unique LOXTON Reversible Aluminum and Tempered Glass Door Block

Model: LOXTON | Brand: Vente-unique

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Vente-unique LOXTON Reversible Aluminum and Tempered Glass Door Block. Please read this manual thoroughly before beginning installation to ensure proper setup and safe use of the product. Keep this manual for future reference.



Image 1: The LOXTON door block seamlessly integrated into a modern living space.

The LOXTON door block features a robust aluminum frame and 5mm thick tempered glass, designed for interior use. Its reversible design allows for left or right-hand opening, adapting to your specific needs.

SAFETY INFORMATION

- Always wear appropriate personal protective equipment (PPE) such as gloves and safety glasses during installation.
- Ensure the installation area is clear of obstructions and well-lit.
- Handle glass components with extreme care to prevent breakage and injury.
- This product is heavy (approximately 28.82 kg). It is recommended to have at least two people for lifting and installation.
- Do not modify the product in any way, as this may compromise its structural integrity and void the warranty.
- Keep small parts and hardware out of reach of children.

PACKAGE CONTENTS

Before starting assembly, verify that all components are present and undamaged. If any parts are missing or damaged, contact Vente-unique customer support.

- 1 x Aluminum and Tempered Glass Door Panel (H204 x L73 cm)
- 1 x Plywood Door Frame (H207.5 x L78.4 cm)
- 1 x Handle Set

- Visserie (Screws and Fasteners)

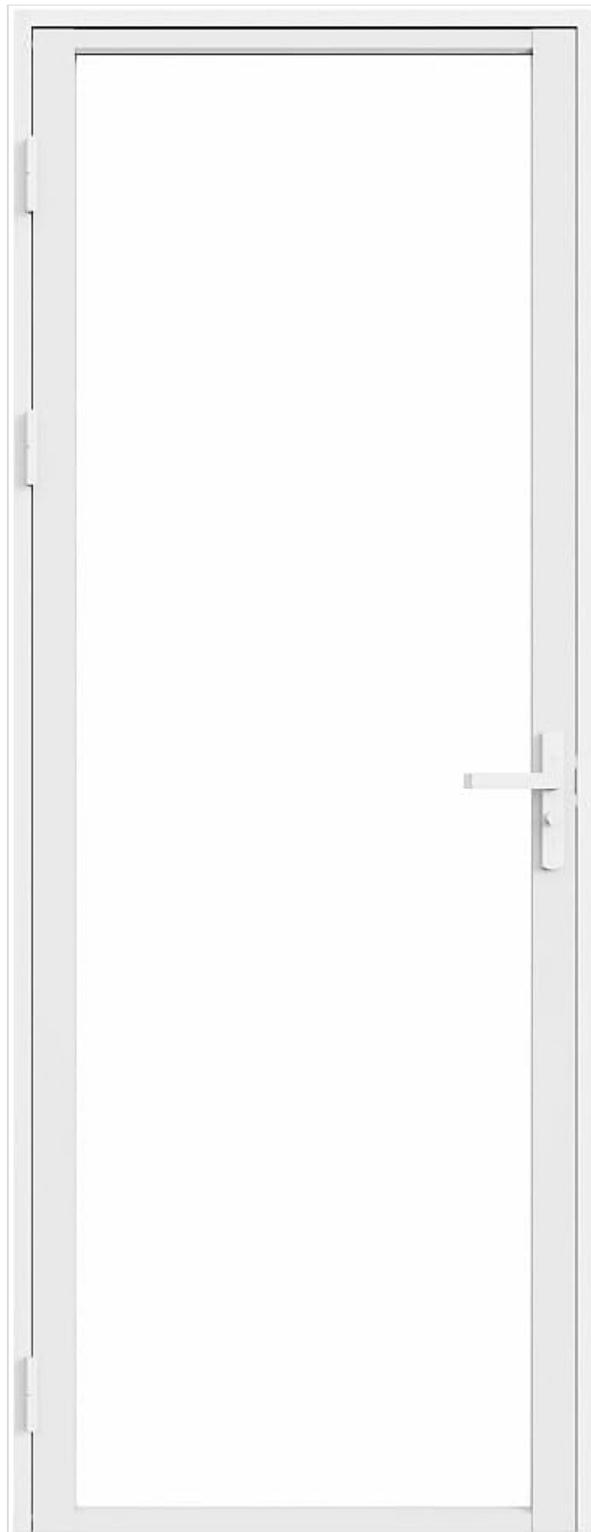


Image 2: Complete LOXTON door block with frame and handle.

SETUP AND INSTALLATION

The LOXTON door block requires assembly. Follow these steps carefully for proper installation. This door is reversible, allowing you to choose the opening direction (left or right push) during installation.

1. Prepare the Opening

Ensure your door opening dimensions are compatible with the door frame. The frame dimensions are H207.5 cm x L78.4 cm x D7.4 cm. The door panel itself is H204 cm x L73 cm x D3.5 cm.



Image 3: Door frame dimensions for installation planning.

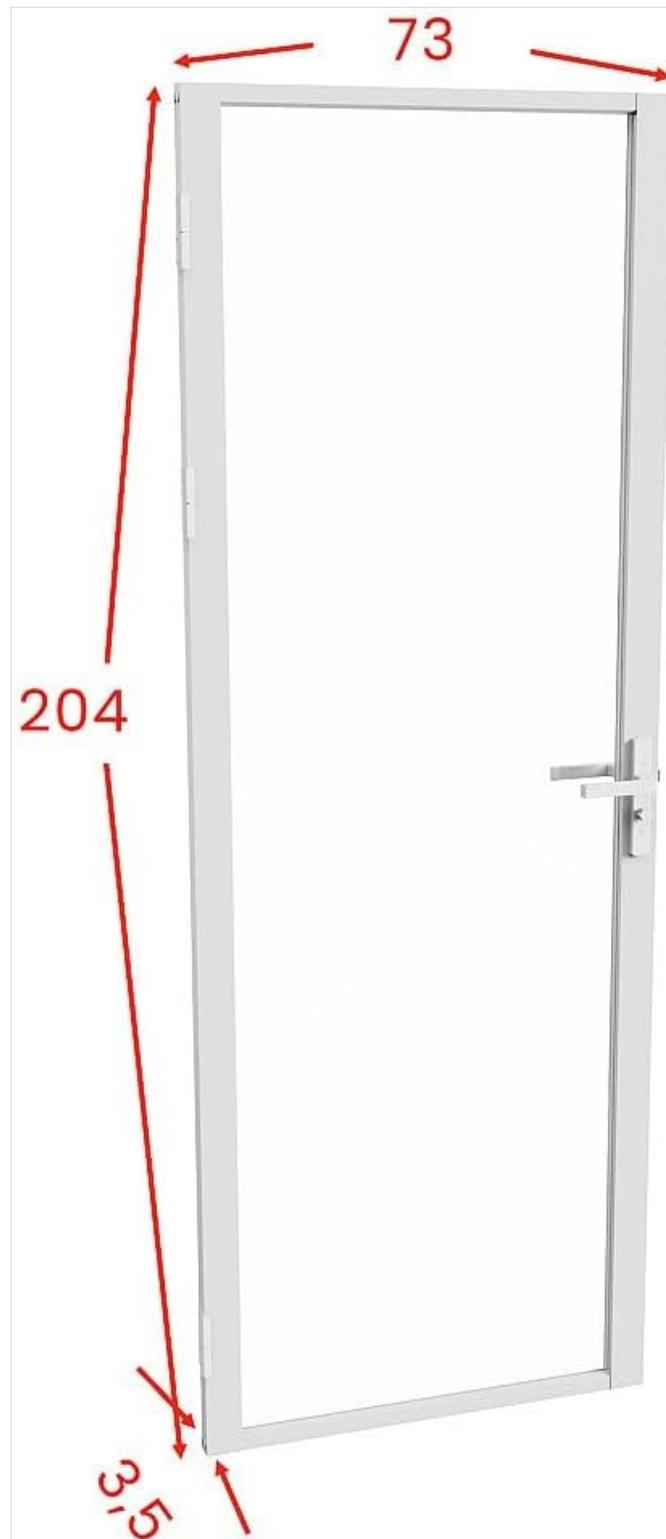


Image 4: Door panel dimensions.

2. Assemble the Door Frame

Assemble the door frame components according to the included diagram. Use the provided visserie (screws) to secure the frame pieces together. Ensure the frame is square and level before proceeding.

3. Install the Door Frame

Position the assembled door frame within the prepared opening. Use shims to ensure the frame is plumb and level. Secure the frame to the wall using appropriate fasteners (not always included, depending on wall material) through the pre-drilled holes in the frame. The installation type is "en tunnel" (or "en tableau").

4. Attach Hinges and Door Panel

The door is reversible. Decide whether you need a left-hand or right-hand push opening. Attach the hinges to the door panel and then to the door frame. Ensure the hinges are securely fastened and aligned for smooth operation.



Image 5: Detail of the door hinge.

5. Install the Handle Set

Install the provided handle set onto the door panel. Follow the specific instructions included with the handle hardware for proper assembly and function. Ensure all screws are tightened securely.



Image 6: Detail of the door handle.

6. Final Adjustments

Test the door's operation. It should open and close smoothly without rubbing against the frame. Adjust hinges or frame shims as necessary to achieve optimal alignment and a 90-degree maximum opening angle.

OPERATING INSTRUCTIONS

The LOXTON door block operates manually. To open, simply push or pull the handle. To close, gently push the door until it latches. Avoid slamming the door to prevent damage to the glass and frame.

The door is designed for a maximum opening angle of 90 degrees. Do not force the door beyond this limit.

MAINTENANCE

Cleaning

- **Aluminum Frame:** Clean the aluminum frame with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Tempered Glass:** Use a standard glass cleaner and a soft, lint-free cloth to clean the glass. For stubborn marks, a mixture of vinegar and water can be effective.
- **Hardware:** Wipe down handles and hinges with a damp cloth. Do not use abrasive materials.

General Care

- Regularly check all screws and fasteners for tightness. Tighten if necessary to ensure the door remains secure and stable.
- Lubricate hinges annually with a silicone-based lubricant to ensure smooth operation and prevent squeaking.
- Inspect the glass for any chips or cracks. If damage is observed, contact a professional for assessment and repair.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Door does not close properly or rubs against the frame.	Frame is not plumb or square; hinges are misaligned; screws are loose.	Check frame alignment with a level and adjust shims. Tighten hinge screws. Realign hinges if necessary.
Door handle is loose or not functioning correctly.	Handle screws are loose; internal mechanism is faulty.	Tighten all visible screws on the handle set. If the problem persists, the handle mechanism may need replacement.
Squeaking hinges.	Lack of lubrication.	Apply a silicone-based lubricant to the hinge pins.
Glass appears cloudy or stained.	Improper cleaning agents or residue.	Clean with a dedicated glass cleaner and a lint-free cloth. Avoid harsh chemicals.

SPECIFICATIONS

Feature	Detail
Brand	Vente-unique

Feature	Detail
Model	LOXTON
Type	Reversible Door Block (Single Battant)
Material (Door)	Aluminum frame, Tempered Glass
Material (Frame)	Plywood
Glass Thickness	5 mm
Metal Thickness (Door)	1.5 mm
Color	White
Door Panel Dimensions (H x L x D)	204 cm x 73 cm x 3.5 cm
Door Frame Dimensions (H x L x D)	207.5 cm x 78.4 cm x 7.4 cm
Weight	28.82 kg
Opening Mechanism	Manual
Max Opening Angle	90 degrees
Installation Type	Tunnel (or Tableau)
Included Equipment	Handle, Visserie (Screws)
Assembly Required	Yes
Intended Use	Interior

WARRANTY AND SUPPORT

This product is covered by standard legal guarantees. For specific warranty details, please refer to the purchase documentation or contact Vente-unique customer service. Information regarding spare parts availability is not provided.

For technical assistance, missing parts, or warranty claims, please contact Vente-unique customer support through their official channels. Refer to your purchase receipt for contact information.

You can also visit the Vente-unique store on Amazon for more information:[Vente-unique Amazon Store](#)

© 2024 Vente-unique. All rights reserved.

This manual is subject to change without notice. The latest version can be found on the manufacturer's website.