

[Manuals.plus](#) /

› [Tek Styz](#) /

› Tek Styz G2 Pro TWS Portable Bluetooth Speaker User Manual

## Tek Styz G2 Pro TWS Speaker

# Tek Styz G2 Pro TWS Portable Bluetooth Speaker User Manual

Model: G2 Pro TWS Speaker

## INTRODUCTION

Thank you for choosing the Tek Styz G2 Pro TWS Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



*Image: Front view of the Tek Styz G2 Pro TWS Portable Bluetooth Speaker, showcasing its compact design and fabric grille.*

## Key Features

- **Portable Design:** Lightweight and compact, designed for easy transport and use anywhere.
- **Bluetooth 4.2 Connectivity:** Ensures fast and stable wireless connection with compatible devices.
- **Dual Speaker Pairing (TWS):** Connect two G2 Pro TWS speakers for true stereo surround sound.
- **Built-in Microphone:** Supports hands-free calling for convenience.
- **Multiple Playback Modes:** Supports Bluetooth, USB, TF card, FM radio, and line input.
- **Long Playtime:** Up to 6+ hours of continuous audio playback on a single charge.
- **Durable Construction:** Made with ABS plastic and a stylish fabric cover.

# UNIVERSAL MINI-SPEAKER

## Use with Multiple Devices and Items



Bluetooth 4.2



Handfree  
phone call



TF card



FM Radio



ABS+Fabric



*Image: Diagram illustrating the universal features of the mini-speaker, including Bluetooth 4.2, handfree phone call, TF card support, FM Radio, and ABS+Fabric construction.*

## PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Tek Styz G2 Pro TWS Portable Bluetooth Speaker

- 1 x MicroUSB Charging Cable
- 1 x User Manual (this document)

*Note: A charger block/adaptor is not included. It is suggested to use your mobile phone's charger for power supply.*

## SETUP

---

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied MicroUSB charging cable to the speaker's MicroUSB port and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

- A red indicator light will typically show during charging.
- The light will turn off or change color once fully charged.
- Charging time is approximately 2-3 hours for a full charge.

### 2. Powering On/Off

Locate the ON/OFF switch on the back of the speaker.

- To turn ON: Slide the switch to the "ON" position. You will hear an audible prompt indicating the speaker is powered on and ready for pairing.
- To turn OFF: Slide the switch to the "OFF" position.

# MULTIPLE INPUTS/OPTIONS



*Image: Detailed view of the speaker's rear panel, highlighting the USB input, MicroSD/XC slot, MicroUSB charging port, and the On/Off switch.*

## OPERATING INSTRUCTIONS

### 1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED or audible prompt).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "G2 Pro TWS Speaker" (or similar name) from the list of found devices.
4. Once connected, you will hear a confirmation sound, and the LED indicator will typically become solid.

Your speaker is now ready to play audio wirelessly from your device.



## COMPATIBLE WITH ANY BLUETOOTH DEVICE!

*Image: The Tek Styz G2 Pro TWS speaker positioned next to a smartphone, illustrating its compatibility with any Bluetooth-enabled device.*

### 2. Dual Speaker Pairing (TWS Function)

To achieve true wireless stereo sound, you can pair two G2 Pro TWS speakers together:

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one of the speakers (this will be the primary speaker), double-press the "Mode" button or a dedicated TWS button (if available, refer to the button diagram). The speakers will attempt to connect to each other.
3. Once successfully paired, you will hear a confirmation sound. The primary speaker's LED will indicate it's ready for Bluetooth pairing with your device, while the secondary speaker's LED will remain solid.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

Audio will now play in stereo across both speakers.

### 3. Playback Controls

The speaker features easy-access buttons on the top panel:

- **Play/Pause:** Press the **Play/Pause** button to start or pause playback.
- **Volume Up/Next Track:**
  - Short press the **+** button to increase volume.
  - Long press the **+** button to skip to the next track.
- **Volume Down/Previous Track:**
  - Short press the **-** button to decrease volume.
  - Long press the **-** button to go to the previous track.
- **Mode Switch:** Press the **M** (Mode) button to cycle through different playback modes (Bluetooth, USB, TF card, FM, Line input).

### 4. Hands-Free Calling

When connected to your smartphone via Bluetooth, the speaker's built-in microphone allows for hands-free calls:

- **Answer Call:** Press the **Play/Pause** button once to answer an incoming call.
- **End Call:** Press the **Play/Pause** button once to end an ongoing call.
- **Reject Call:** Long press the **Play/Pause** button to reject an incoming call.

### 5. Multiple Playback Modes

The G2 Pro TWS speaker supports various audio input methods:

- **Bluetooth Mode:** Default wireless connection for audio streaming.
- **USB Input:** Insert a USB flash drive with audio files into the USB port.
- **TF Card (MicroSD) Input:** Insert a MicroSD card with audio files into the TF card slot.
- **FM Radio Mode:** Press the Mode button to switch to FM radio. The speaker will automatically scan and save available stations. Use the **+/-** buttons to navigate stations.
- **Line Input (AUX):** Connect an external audio device using a 3.5mm audio cable (not included) to the AUX port (if available, typically shared with MicroUSB or a separate port).

## MAINTENANCE

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the finish.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to prevent deep discharge.

- **Water Resistance:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.
- **Avoid Impacts:** Protect the speaker from drops and impacts, which can damage internal components.

## TROUBLESHOOTING

If you encounter any issues with your speaker, please refer to the following common problems and solutions:

| Problem                            | Possible Cause                                                                                                               | Solution                                                                                                                                                                          |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Speaker does not turn on.          | Low battery; Power switch is off.                                                                                            | Charge the speaker fully. Ensure the ON/OFF switch is in the "ON" position.                                                                                                       |
| Cannot pair with Bluetooth device. | Speaker is not in pairing mode; Device's Bluetooth is off; Speaker is already connected to another device; Distance too far. | Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Disconnect speaker from other devices. Move speaker closer to your device (within 10 meters). |
| No sound or low volume.            | Volume too low on speaker or device; Incorrect mode selected; Audio source issue.                                            | Increase volume on both speaker and connected device. Press the "M" button to ensure correct playback mode. Check if the audio source is playing correctly.                       |
| Sound distortion.                  | Volume too high; Low battery; Interference.                                                                                  | Reduce volume. Charge the speaker. Move away from other electronic devices that may cause interference.                                                                           |
| TWS pairing fails.                 | Speakers are too far apart; One speaker is already paired to a device.                                                       | Ensure both speakers are close to each other. Disconnect both speakers from any other Bluetooth devices before attempting TWS pairing.                                            |

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

| Feature                 | Detail                                            |
|-------------------------|---------------------------------------------------|
| Brand                   | Tek Styz                                          |
| Model                   | G2 Pro TWS Speaker                                |
| Connectivity Technology | Bluetooth 4.2, USB, TF Card, FM Radio, Line Input |
| Speaker Type            | Portable Bluetooth Speaker                        |

| Feature                      | Detail                                                                          |
|------------------------------|---------------------------------------------------------------------------------|
| Speaker Maximum Output Power | 3 Watts                                                                         |
| Battery Capacity             | 800 mAh                                                                         |
| Playtime                     | Up to 6+ hours                                                                  |
| Charging Port                | MicroUSB                                                                        |
| Built-in Microphone          | Yes                                                                             |
| Material                     | ABS Plastic, Fabric                                                             |
| Product Dimensions           | 4.5 x 1.6 x 3 inches                                                            |
| Item Weight                  | 4 ounces                                                                        |
| Compatible Devices           | Android, iOS, Mac, Windows, ONN ONA19TB007, and other Bluetooth-enabled devices |

## WARRANTY INFORMATION

Tek Styz products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship from the date of original purchase. Please retain your proof of purchase for warranty claims.

For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Tek Styz website.

## CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Tek Styz G2 Pro TWS Portable Bluetooth Speaker, please do not hesitate to contact our customer support team.

For the most up-to-date contact information, please visit the official Tek Styz website or refer to the contact details provided on your product packaging.

Thank you for choosing Tek Styz.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question