

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Braun](#) /

› [Braun Replacement Ear and Nose Hair Trimmer Head Attachment User Manual](#)

Braun Replacement Ear and Nose Hair Trimmer Head Attachment

Braun Replacement Ear and Nose Hair Trimmer Head Attachment User Manual

Model: Replacement Ear and Nose Hair Trimmer Head Attachment

INTRODUCTION

This manual provides essential instructions for the safe and effective use, installation, and maintenance of your Braun Replacement Ear and Nose Hair Trimmer Head Attachment. Please read this manual thoroughly before use and retain it for future reference.

This attachment is designed for use with specific Braun Trimmer Types and Models. Ensure your trimmer is compatible before attempting installation.

Compatible Trimmer Types: 5513, 5514, 5515, 5516, 5517, 5518, 5541, 5542, 5544, 5806, 5807, 5808

Compatible MGK Models: MGK 3080, MGK 3980, MGK 5045, MGK 5060, MGK 5245, MGK 5260, MGK 5080, MGK 5280, MGK 7020, MGK 7021, MGK 7220, MGK 7221, MGK 7920, MGK 7921

SAFETY INFORMATION

WARNING:

- Do not use on infants or children.
- Keep away from water sources.
- Avoid contact with eyes and skin.
- Always unplug the trimmer before cleaning or maintaining the attachment.
- Follow manufacturer's instructions for care and maintenance of both the attachment and the trimmer.
- Always keep the trimmer and attachment out of reach of children and pets.
- Store the trimmer and attachment in a dry place.

PRODUCT OVERVIEW

The Braun Replacement Ear and Nose Hair Trimmer Head Attachment is designed for precise and comfortable removal of unwanted hair in sensitive areas. It features durable plastic blades for gentle trimming.



Figure 1: Braun Replacement Ear and Nose Hair Trimmer Head Attachment. This image shows the compact design of the attachment, ready for installation onto a compatible Braun trimmer body.

SETUP AND INSTALLATION

1. **Ensure Trimmer is Off:** Before attaching or detaching the trimmer head, ensure your Braun trimmer is switched off and unplugged from any power source.
2. **Remove Existing Head (if applicable):** Gently twist or pull off the currently installed trimmer head from the main body. Refer to your trimmer's original manual for specific removal instructions if needed.
3. **Attach New Head:** Align the replacement ear and nose hair trimmer head with the connection point on the trimmer body. Push firmly until you hear a click, indicating it is securely fastened. Do not force the attachment.
4. **Verify Secure Fit:** Gently tug on the attached head to ensure it is stable and does not wobble.

Your browser does not support the video tag.

Video 1: How to Identify Your Trimmer TYPE Number. This video demonstrates how to locate the type number on your Braun trimmer, which is crucial for ensuring compatibility with replacement parts.

OPERATING INSTRUCTIONS

1. **Power On:** Once the attachment is securely installed, switch on your Braun trimmer.
2. **Positioning:** Carefully insert the trimmer head into the nostril or ear canal. Do not insert too deeply to avoid injury.

3. **Trimming:** Move the trimmer gently in a circular motion to trim unwanted hair. The plastic blades are designed for safe contact with skin.
4. **Clean After Use:** After each use, switch off and unplug the trimmer. Remove the attachment and clean it as described in the Maintenance section.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your trimmer head attachment.

1. **Power Off and Detach:** Always ensure the trimmer is switched off and unplugged before cleaning. Detach the ear and nose trimmer head from the main unit.
2. **Rinse:** Rinse the trimmer head under warm running water. For thorough cleaning, you may use a mild soap.
3. **Dry:** Shake off excess water and allow the attachment to air dry completely before reattaching or storing. Do not use cloths or abrasive materials that could damage the blades.
4. **Lubrication (Optional):** While not strictly necessary for plastic blades, a drop of light machine oil (e.g., sewing machine oil) on the moving parts can help maintain smooth operation over time. Consult your main trimmer manual for specific lubrication recommendations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Attachment does not fit securely.	Incorrect trimmer type/model.	Verify your trimmer's type number against the compatibility list in the Introduction section.
Trimmer head pulls hair instead of cutting.	Hair buildup or dull blades.	Clean the attachment thoroughly. If the problem persists, the blades may be worn and require replacement of the attachment.
Trimmer head makes unusual noise.	Improper installation or debris.	Re-attach the head, ensuring it clicks into place. Clean the head and the trimmer's connection point.

SPECIFICATIONS

- **Product Type:** Replacement Ear and Nose Hair Trimmer Head Attachment
- **Brand:** Braun (Compatible with Braun trimmers)
- **Model:** Specific to Braun Trimmer Types 5513, 5514, 5515, 5516, 5517, 5518, 5541, 5542, 5544, 5806, 5807, 5808 and MGK models.
- **Blade Material:** Plastic
- **Item Weight:** 2 ounces (approx.)
- **Unit Count:** 1 Count
- **Power Source:** Manual (Powered by the main trimmer unit)
- **Manufacturer:** Braun

WARRANTY AND SUPPORT

For warranty information and customer support regarding your Braun trimmer or this replacement attachment, please refer to the documentation provided with your original Braun trimmer unit or visit the official Braun website. As this is a replacement part, its warranty may be covered under the original trimmer's warranty or a separate limited warranty for accessories.

For further assistance, you may contact the seller, Shaver Outlet, Inc., through the platform where the purchase was made.