

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Salton](#) /
- › [Salton Touchscreen Toaster 2 Slice User Manual](#)

Salton ET2151

Salton Touchscreen Toaster 2 Slice User Manual

Model: ET2151

INTRODUCTION

Thank you for choosing the Salton Touchscreen Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



Figure 1: The Salton Touchscreen Toaster, a 2-slice model, shown in a kitchen setting with toasted bread and a beverage.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- To avoid possibility of fire, do not leave toaster unattended during use.
- Do not operate without the crumb tray in place.

PARTS AND FEATURES

Familiarize yourself with the components of your Salton Touchscreen Toaster:

1. Toasting Slots (2)
2. Touchscreen Display
3. Control Lever
4. Removable Crumb Tray
5. Cord Storage (under base)



Figure 2: Front view of the toaster highlighting the intuitive touchscreen display with its various function icons and shade settings.



Figure 3: Angled view of the toaster, illustrating the control lever on the side and the touchscreen interface.



Figure 4: The removable crumb tray, located at the back of the toaster, shown partially extracted for cleaning.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for storage or future transport.
2. **Placement:** Place the toaster on a stable, heat-resistant, non-flammable surface, away from curtains or other flammable materials. Ensure adequate ventilation around the appliance.
3. **Power Connection:** Unwind the power cord from the cord storage area under the base. Plug the toaster into a standard 120V AC electrical outlet.
4. **Initial Burn-off:** Before toasting food for the first time, operate the toaster without bread for a few minutes on the highest shade setting (6). This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

Your Salton Touchscreen Toaster offers a variety of settings for perfect toasting.

Basic Toasting


1. **Power On:** Plug in the toaster. The touchscreen display will illuminate. If not, touch the **Power** icon  on the touchscreen.
2. **Insert Bread:** Place up to two slices of bread into the toasting slots. The self-adjusting slots will center the bread for even toasting.
3. **Select Shade Setting:** On the touchscreen, choose your desired shade setting from 1 (lightest) to 6 (darkest). The selected shade will be highlighted.
4. **Lower Lever:** Push the control lever down until it locks into place. The digital countdown timer will begin, indicating the remaining toasting time.
5. **Completion:** When toasting is complete, the bread will automatically pop up.



Figure 5: Detailed view of the touchscreen interface, displaying the six shade settings and various function icons for different toasting modes.

Special Functions

The toaster features several pre-programmed functions accessible via the touchscreen:

- **Defrost:** For frozen bread. Select the **Defrost** icon (❄️) before lowering the lever. The toaster will automatically adjust the toasting time.
- **Reheat:** To warm up already toasted bread without further browning. Select the **Reheat** icon (🔄) before lowering the lever.
- **Single Slice:** Ensures even toasting on both sides when toasting only one slice. Select the **Single Slice** icon (🔄) before lowering the lever.
- **Memory:** Save your preferred shade setting for quick access. After selecting a shade, touch and hold the **Memory** icon (❤️) until it confirms. To use, simply touch the Memory icon before lowering the lever.
- **Cancel:** To stop the toasting cycle at any time, touch the **Cancel** icon (1). The bread will pop up.

Toast Options (Food Type Selection)

Optimize toasting for specific food types by selecting the corresponding icon at the bottom of the touchscreen:

- **Bread:** Standard bread slices.
- **Bagel:** Toasts the cut side of bagels while gently warming the crust side.
- **English Muffin:** Optimized for English muffins.
- **Waffle:** For frozen or fresh waffles.
- **Pastry:** For toaster pastries.

Select the desired food type icon, then choose your shade setting, and lower the lever.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your toaster.

1. **Always Unplug:** Before cleaning, always unplug the toaster from the electrical outlet and allow it to cool completely.
2. **Crumb Tray Cleaning:**
 - Pull out the removable crumb tray from the back of the toaster.
 - Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly.
 - Slide the crumb tray back into place until it locks.
3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface.
4. **Never Immerse:** Never immerse the toaster, cord, or plug in water or any other liquid.
5. **Storage:** When not in use, ensure the toaster is clean and dry. You can wrap the cord around the cord storage area under the base. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in or power outlet issue.	Ensure the toaster is securely plugged into a working electrical outlet. Check circuit breaker.
Bread does not toast evenly.	Uneven bread thickness; crumb tray full; single slice not selected for one slice.	Ensure bread is evenly sliced. Clean crumb tray. Use the "Single Slice" function for one slice.
Bread is stuck in the toaster.	Food too large; anti-jam feature activated.	Unplug the toaster. Carefully remove the bread using non-metallic tongs. Do not force the lever.
Smoke coming from toaster.	Crumbs accumulated; food stuck; initial burn-off.	Unplug immediately. Clean crumb tray. Remove any stuck food. Initial smoke is normal for first use.
Touchscreen unresponsive.	Temporary glitch; power cycle needed.	Unplug the toaster for 1-2 minutes, then plug it back in.

If the problem persists after trying these solutions, please contact Salton Customer Support.

PRODUCT SPECIFICATIONS

Brand: Salton

Model Number: ET2151

Color: Silver

Number of Slices: 2

Wattage: 900 watts

Voltage: 120 Volts

Number of Programs: 6 (Reheat, Defrost, Single Slice, Cancel, Memory, Power)

Dimensions (L x W x H): 11.02 x 6.3 x 6.69 inches

Item Weight: 3.08 pounds (1.4 Kilograms)

UPC: 061283117823

First Available: November 8, 2024

WARRANTY INFORMATION

Salton products are designed and manufactured to the highest standards. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official Salton website. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, product registration, or to inquire about replacement parts, please contact Salton Customer Support:

Website: www.salton.com

Phone: Refer to your product packaging or the Salton website for regional contact numbers.

When contacting support, please have your model number (ET2151) and purchase date available.