

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Best Choice Products](#) /

› [Best Choice Products Wooden Farmhouse Kitchen Set \(Model SKY8647\) - Instruction Manual](#)

Best Choice Products SKY8647

Best Choice Products Wooden Farmhouse Kitchen Set (Model SKY8647) - Instruction Manual

Comprehensive guide for assembly, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Best Choice Products Wooden Farmhouse Kitchen Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Please read all instructions carefully before assembly and retain this manual for future reference.

Safety Information

- **WARNING:** Not for children under 3 years old. This product contains small parts that may pose a choking hazard.
- Adult supervision is recommended during play.
- Ensure all fasteners are securely tightened before use. Periodically check for loose parts.
- Keep away from open flames and heat sources.

This play kitchen is designed to provide an immersive and stylish cooking experience for children, featuring a classic farmhouse design with custom 4-paned windows, a pretend stovetop, and an oven with realistic clicking knobs.



Image 1: The Best Choice Products Wooden Farmhouse Kitchen Set in Rose color, fully assembled.

2. PARTS LIST AND INCLUDED ACCESSORIES

Before beginning assembly, verify that all components listed in the included Assembly Guide are present and undamaged. The set is crafted from engineered wood with metal components for durability.

Included Accessories:

- 3 x Pretend Cooking Utensils (e.g., ladle, slotted spoon, spatula)
- 1 x Pretend Pot
- 1 x Pretend Pan

Refer to the detailed parts diagram in your separate Assembly Guide for a complete list of wooden panels, hardware (screws, fasteners), and other small components.

5 Included Accessories

Cook up some fun with 3 pretend cooking utensils, as well as a pot and pan to stir play food in

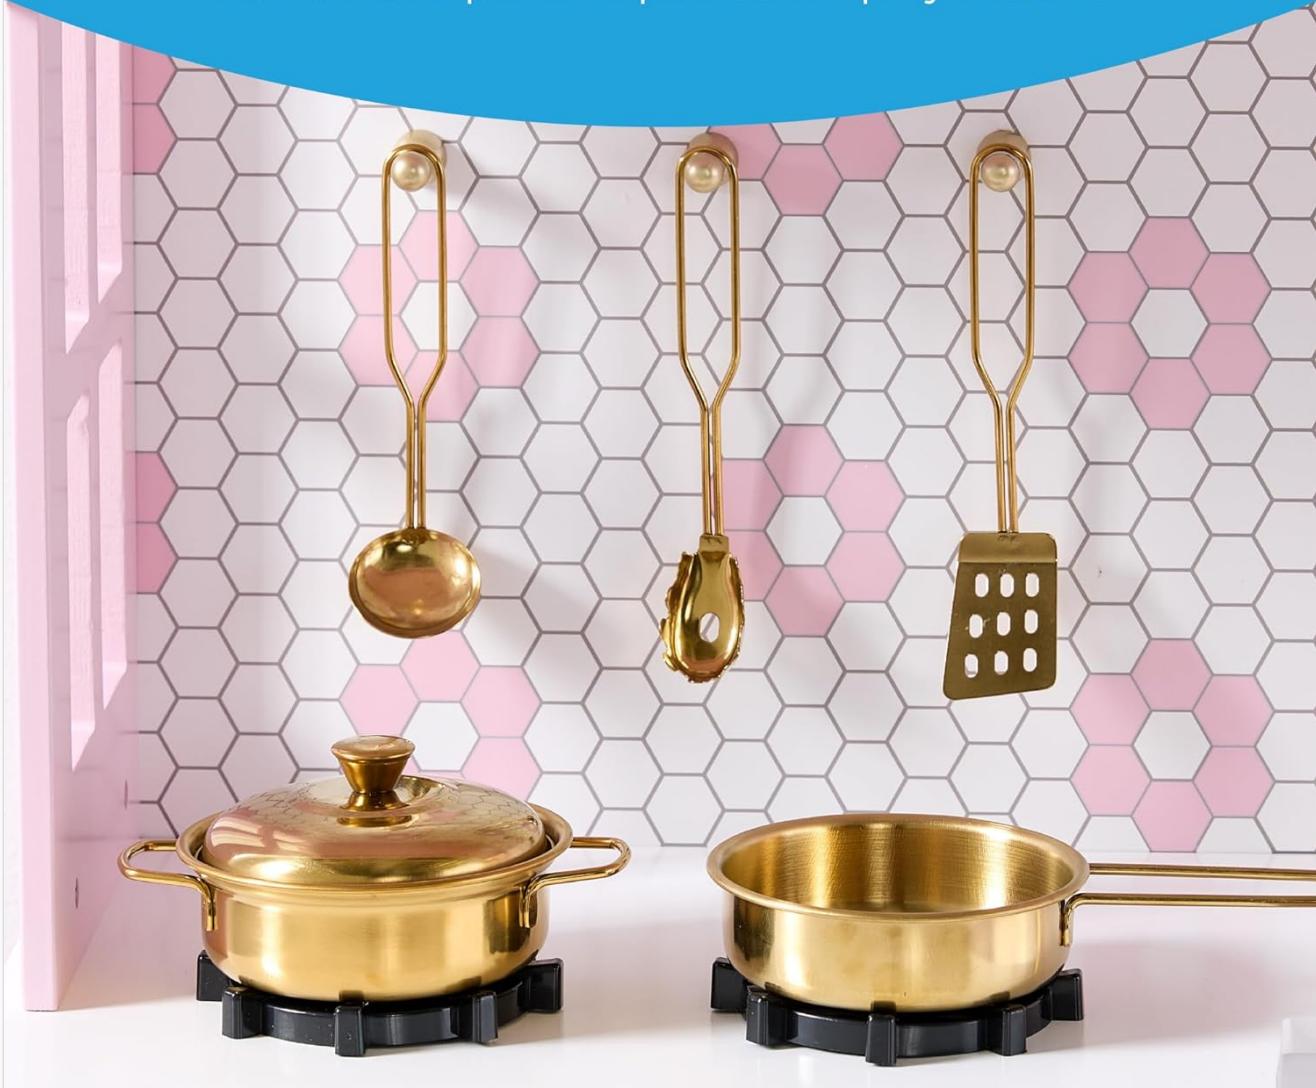


Image 2: Close-up view of the five included cooking accessories.

3. SETUP AND ASSEMBLY

Assembly of this play kitchen requires careful attention to detail and may take approximately 1.5 hours with two adults. Please follow the step-by-step instructions provided in the separate Assembly Guide included with your product. Ensure you have a clear, spacious area for assembly and the necessary tools (typically a screwdriver).

General Assembly Tips:

- Unpack Carefully:** Lay out all parts and hardware on a soft, clean surface to prevent scratches and ensure all pieces are accounted for.
- Follow Order:** Adhere strictly to the numerical or alphabetical order of steps in the Assembly Guide.
- Do Not Overtighten:** Tighten screws firmly, but avoid overtightening, which can strip threads or damage the wood.
- Two-Person Assembly:** Some steps may be easier or require two people for proper alignment and stability.
- Check Stability:** Once assembled, gently shake the kitchen to ensure all connections are secure and stable.

The Assembly Guide contains detailed diagrams and instructions for each step, including the placement of dozens of screws and fasteners to ensure a sturdy structure.

4. OPERATING INSTRUCTIONS

The Best Choice Products Wooden Farmhouse Kitchen Set is designed for imaginative play. Here's how to interact with its features:

Key Features:

- Stovetop and Oven:** The pretend stovetop burners and oven feature realistic clicking knobs. Turn the knobs to simulate cooking and baking. The oven door opens to reveal storage space.
- Sink and Faucet:** The sink area includes a pretend faucet and basin for washing play dishes.
- Storage:** The kitchen includes built-in toy storage with open shelving and an oven compartment, designed to keep accessories and other toys organized.
- Accessories:** Use the included pot, pan, and cooking utensils for various pretend cooking scenarios.



Image 3: The play kitchen demonstrating its ample storage space with open shelving and an oven compartment.

5. MAINTENANCE AND CARE

Proper care will extend the life of your wooden play kitchen.

Cleaning:

- Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- For stubborn spots, use a mild soap solution on a cloth, then wipe clean with a damp cloth and dry immediately.
- Do not immerse wooden parts in water.

General Care:

- Periodically check all screws and fasteners and tighten them if they become loose.
- Avoid exposing the kitchen to excessive moisture or humidity, as this can cause the wood to swell or warp.
- Keep the kitchen away from direct sunlight to prevent fading of colors.

6. TROUBLESHOOTING

If you encounter any issues with your play kitchen, refer to the following common solutions:

Common Issues and Solutions:

- **Loose Parts:** If any part feels wobbly or loose, check the corresponding screws and tighten them using a screwdriver. Refer to the Assembly Guide for screw locations.
- **Clicking Knobs Not Functioning:** Ensure the knobs are correctly installed according to the assembly instructions. If they are loose, re-secure them.
- **Damage from Liquids:** Exposure to liquids, especially water, can cause wooden components to swell. Avoid placing drinks or wet items directly on the kitchen surfaces. If spills occur, wipe immediately and dry thoroughly.
- **Missing Parts:** If you discover any missing parts during assembly, please contact Best Choice Products customer service immediately.

7. SPECIFICATIONS

Feature	Specification
Model Number	SKY8647
Overall Dimensions (L x W x H)	25" x 13.5" x 35.5" (63.5 cm x 34.3 cm x 90.2 cm)
Item Weight	20 pounds (9.07 kg)
Recommended Age	3 years and up
Materials	Engineered wood, metal components
Certifications	ASTM F963, CPSIA



Image 4: Dimensional overview of the play kitchen.

8. WARRANTY AND CUSTOMER SUPPORT



For any questions, concerns, or assistance with your Best Choice Products Wooden Farmhouse Kitchen Set, please contact our customer service department. While specific warranty details are not provided in this manual, Best Choice Products is committed to customer satisfaction.

Contact Information:

Please refer to the contact details provided on your purchase receipt or visit the official Best Choice Products website for the most current customer support information.

When contacting support, please have your product model number (SKY8647) and purchase information readily available.


Related Documents - SKY8647

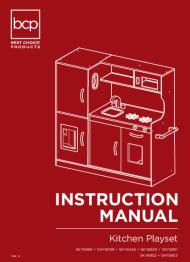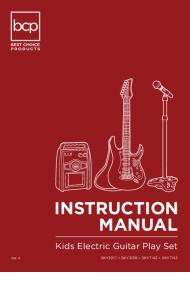	<p><u>Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set - SKY6910, 6911, 6912</u></p> <p>Overview of parts and components for the Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set, models SKY6910, SKY6911, and SKY6912. This document outlines the various numbered parts and lettered components that make up the toy kitchen.</p>
	<p><u>Best Choice Products Kitchen Playset Instruction Manual</u></p> <p>Comprehensive instruction manual for assembling the Best Choice Products Kitchen Playset, including parts lists, hardware details, and step-by-step assembly instructions for models SKY5969, SKY6009, SKY6346, SKY6850, SKY6851, SKY6852, and SKY6853.</p>
	<p><u>Best Choice Products Kids Electric Guitar Play Set Instruction Manual</u></p> <p>Official instruction manual for the Best Choice Products Kids Electric Guitar Play Set (SKY3017, SKY3018, SKY7142, SKY7143). Learn how to set up, operate, and maintain your toy guitar, amplifier, and microphone.</p>
	<p><u>Best Choice Products 110-Piece Magnetic Building Tiles - Building Examples</u></p> <p>Explore creative building possibilities with the Best Choice Products 110-Piece Multicolor Magnetic Building Tiles. This guide showcases various examples of structures that can be created, encouraging imagination and skill development in children aged 3-8.</p>



[Best Choice Products 3-Piece Kids Beginner Drum Set Instruction Manual](#)

Comprehensive instruction manual for assembling and using the Best Choice Products 3-Piece Kids Beginner Drum Set (models SKY6261, SKY6264). Includes parts list, assembly steps, and warranty information.

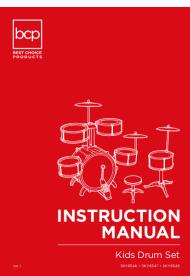

[Best Choice Products Kids Drum Set Instruction Manual](#)

Instruction manual for the Best Choice Products Kids Drum Set (Models SKY6546, SKY6547, SKY6548), detailing parts identification, assembly steps for classic and upright configurations, battery warnings, care instructions, and warranty information.