

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ICE-WATCH](#) /

› ICE-WATCH Ice Digit Explorer Digital Watch User Manual - Model 023264

## ICE-WATCH 023264

# ICE-WATCH Ice Digit Explorer Digital Watch User Manual

MODEL: 023264

## Introduction

This manual provides detailed instructions for the operation and maintenance of your ICE-WATCH Ice Digit Explorer digital wristwatch, model 023264. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

## Product Overview

The ICE-WATCH Ice Digit Explorer is a digital wristwatch featuring a durable silicon strap and a lightweight plastic case. It includes a digital display with backlight, 12/24H time format, dater, stopwatch, and alarm functions.





**Figure 1:** Front view of the ICE-WATCH Ice Digit Explorer digital watch. Shows the digital display, watch face, and the four control buttons labeled SET, ADJ, MODE, and LIGHT.

### Watch Components:

- **Display:** Digital screen showing time, date, and other functions.
- **SET Button (Top Left):** Used for entering and confirming settings.
- **ADJ Button (Top Right):** Used for adjusting values during settings.
- **MODE Button (Bottom Left):** Used to cycle through different operational modes (Time, Stopwatch, Alarm).
- **LIGHT Button (Bottom Right):** Activates the backlight for improved visibility in low light conditions.
- **Silicon Strap:** Flexible and durable strap for comfortable wear.
- **Case Back:** Stainless steel case back with model and water resistance information.



**Figure 2:** Side view of the watch, highlighting the profile of the case and the buttons.



**Figure 3:** Back view of the watch, showing the stainless steel case back with engraved details including the model number and water resistance rating.

## Setup

### Initial Setup and Time/Date Adjustment:

1. In normal time display mode, press and hold the **SET** button until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. While a value is flashing, press the **ADJ** button to increase the value. Hold **ADJ** to rapidly advance.
4. To switch between 12-hour and 24-hour format, adjust the hour setting. The 'PM' indicator will appear for 12-hour format.
5. Once all settings are adjusted, press the **SET** button again to exit the setting mode and save your changes.

# Operating Instructions

---

## Mode Navigation:

From the normal time display, press the **MODE** button to cycle through the following functions:

- Time Display (default)
- Stopwatch
- Alarm Setting

## Using the Stopwatch:

1. Press the **MODE** button until "ST" or "STOPWATCH" appears on the display.
2. Press the **ADJ** button to start the stopwatch.
3. Press the **ADJ** button again to pause the stopwatch.
4. To reset the stopwatch to zero, press the **SET** button while the stopwatch is paused.
5. To record lap/split times, press the **SET** button while the stopwatch is running. The display will show the lap time while the stopwatch continues to run in the background. Press **SET** again to return to the running stopwatch display.

## Setting and Using the Alarm:

1. Press the **MODE** button until "AL" or "ALARM" appears on the display.
2. Press the **SET** button. The hour digits will begin to flash.
3. Use the **ADJ** button to set the desired alarm hour.
4. Press the **MODE** button to move to the minute digits.
5. Use the **ADJ** button to set the desired alarm minute.
6. Press the **SET** button to confirm the alarm time and exit setting mode.
7. To activate/deactivate the alarm, in alarm mode, press the **ADJ** button. An alarm icon will appear/disappear on the display.
8. When the alarm sounds, press any button to stop it.

## Using the Backlight:

Press the **LIGHT** button (bottom right) to illuminate the display for a few seconds. This feature is useful in dark environments.

## Water Resistance Guidelines

---

Your ICE-WATCH Ice Digit Explorer is water resistant to 10 ATM (100 meters / 330 feet). This rating means the watch is suitable for:

- Immersion in water
- Swimming
- Watersports

## Important Note:

- This watch is **not suitable for diving**.
- Do not operate any buttons while the watch is wet or submerged, as this can compromise the water resistance seal.
- Avoid exposing the watch to extreme temperature changes (e.g., hot showers followed by cold water), which can also affect seals.

## Maintenance and Care

- Cleaning:** Wipe the watch regularly with a soft, damp cloth. For the silicon strap, mild soap and water can be used. Ensure the watch is completely dry before wearing.
- Avoid Chemicals:** Do not expose the watch to strong chemicals, solvents, or detergents, as these can damage the case, strap, or seals.
- Temperature:** Avoid prolonged exposure to extreme temperatures (hot or cold) and direct sunlight.
- Impact:** While durable, avoid strong impacts or dropping the watch.
- Battery Replacement:** When the display becomes dim or functions become erratic, the battery may need replacement. This should ideally be performed by a qualified watch technician to ensure water resistance is maintained.

## Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to the "Initial Setup and Time/Date Adjustment" section to reset the time.
Buttons are unresponsive.	Watch may be in an incorrect mode or internal issue.	Try pressing the <b>MODE</b> button to return to time display. If unresponsive, a battery replacement might be needed.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal damage).	Immediately take the watch to a professional watch repair service. Do not attempt to dry it yourself.

## Specifications

**Model Number:** 023264

**Display Type:** Digital

**Case Material:** Plastic

**Strap Material:** Silicon

**Water Resistance:** 10 ATM (100 meters / 330 feet)

**Functions:** Time (12/24H), Date, Day of Week, Stopwatch (Lap/Split), Alarm, Backlight

**Battery:** 1 Unknown battery (included)

**Item Weight:** 1.48 ounces

**Package Dimensions:** 3.39 x 3.23 x 2.83 inches

## Warranty and Support

Your ICE-WATCH Ice Digit Explorer digital watch comes with a **2-year warranty** from the date of purchase, covering manufacturing defects. This warranty does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims, technical support, or service inquiries, please contact your authorized ICE-WATCH retailer or visit the official ICE-WATCH website for contact information.

