

## OVENTE SGR85W

# OVENTE SGR85W Smokeless Indoor Electric Grill Instruction Manual

Model: SGR85W | Brand: OVENTE

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your OVENTE Smokeless Indoor Electric Grill. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.


- Always unplug the appliance from the outlet after use and before cleaning.
- Do not immerse the electrical unit, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the appliance on a stable, heat-resistant surface.
- Ensure proper ventilation during use.
- Do not touch hot surfaces. Use handles or knobs.
- Do not use accessories not recommended by the manufacturer.
- Allow the appliance to cool completely before cleaning or removing parts.

## 2. PRODUCT COMPONENTS

The OVENTE SGR85W Smokeless Indoor Electric Grill comes with several removable parts for easy assembly, use, and cleaning.



**Figure 2.1:** The OVENTE SGR85W Smokeless Indoor Electric Grill, showcasing its main body, grill plate, and tempered glass lid.

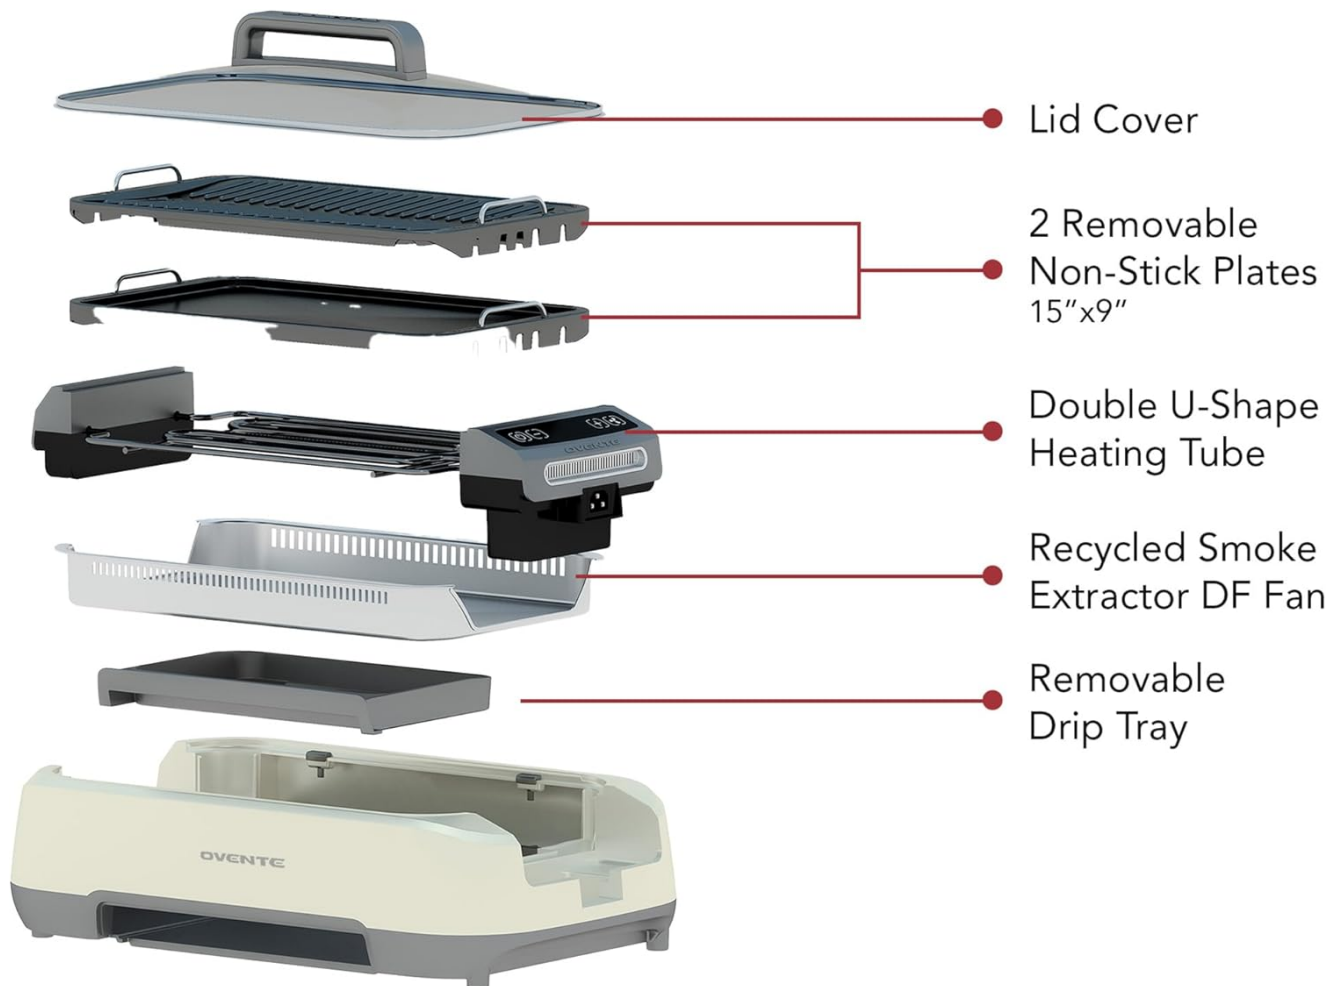

**Figure 2.2:** Exploded view illustrating the removable components: Lid Cover, 2 Removable Non-Stick Plates (Grill and Griddle), Double U-Shape Heating Tube, Recycled Smoke Extractor DF Fan, Removable Drip Tray, and the main base unit.

- **Main Base Unit:** Houses the internal components and control panel.
- **Tempered Glass Lid:** Allows monitoring of food during cooking and helps contain smoke. Features a cool-touch handle.
- **Non-Stick Grill Plate (15" x 9"):** For traditional grilling with sear marks.
- **Non-Stick Griddle Plate (15" x 9"):** For flat-surface cooking like pancakes or eggs.
- **Heating Element:** The 1500W heating component for cooking.
- **Removable Drip Tray:** Collects excess grease and liquids.
- **Water Tray:** Located beneath the heating element, this tray must be filled with water to ensure smokeless operation.
- **Power Cord:** Detachable power supply.
- **Tongs:** Included for handling food.

**Video 2.1:** A brief overview of the OVENTE SGR85 Series Smokeless Grill, demonstrating the assembly and disassembly of its main components including the lid, grill plate, heating element, and water tray. This video highlights the ease of setting up the grill for use.

### 3. SETUP INSTRUCTIONS

Before first use, ensure all packaging materials are removed and all parts are clean. Wash removable parts (lid, grill/griddle plates, drip tray) with warm, soapy water and dry thoroughly.

1. **Place the Main Base:** Position the main base unit on a stable, flat, and heat-resistant surface.
2. **Insert Water Tray:** Slide the water tray into the designated slot at the bottom of the main base. Fill the water tray with approximately 2 cups of water. This is crucial for the smokeless function.
3. **Place Heating Element:** Carefully place the heating element assembly into the base, ensuring it sits securely.
4. **Select Cooking Plate:** Choose either the grill plate or the griddle plate and place it on top of the heating element.
5. **Attach Lid:** Place the tempered glass lid on top of the cooking plate.
6. **Connect Power:** Plug the power cord into the appliance's port and then into a standard 120V AC electrical outlet.

#### 4. OPERATING INSTRUCTIONS

The OVENTE SGR85W features a user-friendly one-touch control panel with an LED smart display.





**Figure 4.1:** The intuitive control panel with power, temperature adjustment, and fan buttons, along with the LED display.

1. **Power On:** Press the 'Power' button to turn on the grill. The LED display will illuminate.
2. **Set Temperature:** Use the '+' and '-' buttons to adjust the desired cooking temperature. The temperature range is 212°F to 446°F. The display will show the current temperature.
3. **Activate Fan:** Press the 'Fan' button to activate the smoke-extracting fan. It is recommended to keep the fan on during cooking for optimal smokeless performance.
4. **Preheat:** Allow the grill to preheat until it reaches the set temperature. The display will indicate when it's ready.
5. **Add Food:** Carefully place food onto the preheated grill or griddle plate. Close the lid to maintain temperature and contain smoke.
6. **Monitor Cooking:** The transparent tempered glass lid allows you to monitor your food without lifting the lid, preserving heat and smoke containment.
7. **Adjust as Needed:** Adjust temperature or cooking time as required for your specific recipe.
8. **Power Off:** Once cooking is complete, turn off the fan and then the power button. Unplug the appliance and allow it to cool before cleaning.

## 5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your grill. Always unplug the grill and allow it to cool completely before cleaning.



### Easy To Clean

Removable & Dishwasher Safe Parts

**Figure 5.1:** The removable non-stick plates, glass lid, and drip tray are dishwasher safe for convenient cleaning.

- **Removable Parts:** The non-stick grill/griddle plates, tempered glass lid, and drip tray are all removable and dishwasher safe. For best results, wash them in warm, soapy water or place them in the dishwasher.
- **Main Base Unit:** Wipe the exterior of the main base unit with a soft, damp cloth. Do not immerse the main base unit, power cord, or heating element in water or any other liquid.
- **Heating Element:** The heating element should not be immersed in water. If necessary, gently wipe it with a damp cloth after it has completely cooled.
- **Storage:** Ensure all parts are clean and dry before storing. The base detaches and nests for compact storage.



## 6. TROUBLESHOOTING

If you encounter any issues with your OVENTE Smokeless Indoor Electric Grill, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not turn on	Not properly plugged in; Power outlet malfunction	Ensure power cord is securely plugged into the grill and a working outlet. Check circuit breaker.
Excessive smoke during cooking	Water tray is empty; Fan is off; Too much grease/oil on plate	Ensure water tray is filled. Turn on the fan. Clean excess grease from the cooking plate.
Food not cooking evenly	Temperature too low; Uneven food placement	Increase cooking temperature. Arrange food in a single layer for even heat distribution.
Food sticking to plate	Plate not properly seasoned; Food not fully cooked	Ensure the non-stick surface is clean. Lightly brush with oil before cooking. Allow food to cook longer before attempting to flip.

## 7. SPECIFICATIONS







- **Brand:** OVENTE
- **Model Name:** SGR85W
- **Product Dimensions:** 13"D x 18.25"W x 2.26"H
- **Color:** White
- **Fuel Type:** Electric
- **Wattage:** 1500 watts
- **Voltage:** 120 Volts
- **Material:** Aluminum, Stainless Steel, Non-Stick Coated Metal
- **Special Feature:** Non-Stick Coating, LED Smart Display, One-Touch Control, Smoke Extractor Fan
- **Cooking Surface Area:** 135 Square Inches (15" x 9" plates)
- **Included Components:** User Manual, Grill Plate, Griddle Plate, Drip Tray, Tongs, Power Cord, Tempered Glass Lid

## 8. WARRANTY AND SUPPORT

OVENTE warrants that this product shall be free from defects in material and workmanship under normal use and conditions for **1 year** from the original purchase date.

For customer service or warranty claims, please contact OVENTE directly. Keep your proof of purchase for all warranty inquiries.

## Related Documents - SGR85W

	<p><a href="#">Ovente 4-Sandwich Digital Panini Grill GP1000 Series User Manual</a></p> <p>User manual for the Ovente 4-Sandwich Digital Panini Grill with Temperature Control, GP1000 Series. Provides essential safety guidelines, product features, operating instructions, tips for use, care and maintenance advice, and warranty information.</p>
	<p><a href="#">Ovente GD1632 Series Non-Stick Indoor Grill User Manual and Features</a></p> <p>Comprehensive guide for the Ovente GD1632 Series Non-Stick Indoor Grill, covering important safeguards, parts, features, usage instructions, cooking tips, recipes, care, maintenance, and warranty information.</p>
	<p><a href="#">Ovente Electric Panini Grill GP0540/GP0620 Series User Manual</a></p> <p>User manual for the Ovente Electric Panini Grill, models GP0540 and GP0620. Provides essential safety guidelines, product features, operating instructions, maintenance advice, and warranty details.</p>
	<p><a href="#">Ovente 3-in-1 Grill GP1302 Series User Manual and Warranty Information</a></p> <p>Comprehensive user manual for the Ovente 3-in-1 Grill, model GP1302 Series. Contains essential safety guidelines, detailed parts and features, operating instructions for sandwiches, waffles, and grilling, care and maintenance advice, electrical specifications, and warranty details.</p>
	<p><a href="#">Ovente 3-in-1 Grill GPI302 Series User Manual</a></p> <p>Get the most out of your Ovente 3-in-1 Grill (GPI302 Series) with this comprehensive user manual. Learn about important safety precautions, product features, how to use for sandwiches, waffles, and grilling, plus care, maintenance, and warranty details.</p>
	<p><a href="#">Ovente 3-in-1 Grill GPI302 Series User Manual and Instructions</a></p> <p>Comprehensive user manual for the Ovente 3-in-1 Grill, GPI302 Series. Includes important safety precautions, parts and features, detailed usage instructions for sandwiches, waffles, and grilling, care and maintenance guidelines, electrical specifications, environmental disposal information, and a one-year limited warranty.</p>