



[Manuals.plus](#) /

› [Audiobox](#) /

› Audiobox TV-240SD 24-Inch Smart LED HDTV User Manual

Audiobox TV-240SD

Audiobox TV-240SD 24-Inch Smart LED HDTV

USER MANUAL

1. Introduction

This manual provides essential instructions for the safe and efficient operation of your Audiobox TV-240SD 24-Inch Smart LED HDTV. Designed for versatility, this television is ideal for RV, camping, and off-grid use, featuring 12V AC/DC compatibility, webOS Hub, and a Magic Remote. Please read this manual thoroughly before using the product and retain it for future reference.



The Audiobox TV-240SD is designed for versatile use, including outdoor camping environments.



The TV-240SD can be easily integrated into an RV interior for entertainment on the go.

2. Safety Information

Observe the following safety precautions to prevent damage to the TV and ensure personal safety:

- Do not expose the TV to rain or moisture.
- Ensure proper ventilation; do not block ventilation openings.
- Use only the power cords and adapters provided or specified by the manufacturer.
- Avoid placing the TV on unstable surfaces.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Keep the TV away from direct sunlight, heat sources, and extreme temperatures.

3. What's in the Box

Verify that all components are present:

- Audiobox TV-240SD Smart LED HDTV
- AC Power Cord

- DC Car Adaptor
- Smart TV Magic Remote
- Instruction Manual (this document)

4. Setup

4.1 Unpacking

Carefully remove the TV and all accessories from the packaging. Retain packaging for potential future transport or service.

4.2 Stand Installation

If using the included stand, attach it securely to the bottom of the TV using the provided screws. Ensure the stand is stable before placing the TV.



The TV-240SD with its stand, showing the slim profile.

4.3 Wall Mounting

The TV is VESA mount compatible (100 x 100 mm). For wall mounting, use a compatible VESA bracket

(sold separately) and follow the bracket manufacturer's instructions. Ensure the wall can support the TV's weight.



Rear view of the TV, illustrating VESA mounting compatibility for wall installation.

4.4 Power Connection

Connect the appropriate power adapter:

- **AC Power:** Use the AC power cord to connect the TV to a standard wall outlet.
- **DC Power (12V):** For RV or camping use, connect the DC car adaptor to the TV's 12V DC input and then to a compatible 12V power source (e.g., car cigarette lighter socket).

AUDIOBOX

AC/DC

12V

Power Compatible

Watch your favorite shows
at **Home** and on the go.

The 12V DC power input allows for flexible power options in RVs or off-grid settings.

4.5 Connecting External Devices

The TV-240SD offers multiple connectivity options:

- **HDMI:** Connect Blu-ray players, game consoles, or other HDMI-enabled devices.
- **USB:** Insert USB drives for media playback.
- **RCA (AV Input):** Connect older devices using composite video and stereo audio cables.
- **LAN:** For a wired internet connection.
- **RF IN:** Connect an antenna for over-the-air broadcasts.



A detailed view of the TV's various input ports for connecting external devices.

4.6 Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup wizard to configure language, time zone, network connection, and channel scanning.

4.7 Network Connection (Wi-Fi)

Access the network settings menu to connect to your dual-band Wi-Fi network. This is required for webOS Hub and streaming applications.

4.8 Magic Remote Pairing

The Magic Remote provides intuitive point-and-click navigation. To pair, point the remote at the TV and press the **OK** button. If pairing fails, try replacing the batteries or moving closer to the TV.



Point & Click

Control Your World

The Magic Remote allows for easy navigation and control of the TV's smart features.

5. Operating Your TV

5.1 Basic TV Functions

- **Power:** Press the power button on the remote or TV to turn on/off.
- **Volume:** Use the Volume Up/Down buttons on the remote.
- **Channel:** Use the Channel Up/Down buttons for broadcast channels.
- **Input:** Press the Input button to select connected devices (HDMI, USB, etc.).

5.2 webOS Hub and Streaming Apps

The webOS Hub provides access to a variety of streaming applications like Netflix, Hulu, and YouTube. Navigate using the Magic Remote's pointer or directional buttons. Ensure an active internet connection for optimal performance.

5.3 Picture Settings

Adjust picture quality through the settings menu. Options include:

- **Picture Mode:** Standard, Vivid, Cinema, Game, Custom.

- **Brightness, Contrast, Saturation:** Fine-tune display levels.
- **Pixel Noise Reduction:** Enhances image clarity.

5.4 Sound Settings

Customize audio output:

- **Sound Mode:** Standard, Music, Movie, Speech, Custom.
- **Equalizer:** Adjust specific frequency bands.
- **Balance:** Adjust left/right speaker output.

5.5 Bluetooth Connectivity

Pair Bluetooth-enabled audio devices (e.g., headphones, soundbars) with your TV for wireless audio. Access Bluetooth settings in the TV's menu to scan for and connect devices.

6. Product Demonstration

Your browser does not support the video tag.

This video demonstrates the Audiobox 12V TV in various camping and road trip scenarios, highlighting its portability and smart features for on-the-go entertainment.

7. Maintenance

7.1 Cleaning

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen-cleaning solution applied to the cloth, not directly to the screen.
- **Casing:** Wipe the TV casing with a soft, dry cloth. Avoid abrasive cleaners or solvents.

7.2 Storage

If storing the TV for an extended period, disconnect it from power, remove batteries from the remote, and store it in a cool, dry place, preferably in its original packaging.

8. Troubleshooting

| Problem | Possible Solution |
|-------------------------------|--|
| No Power | Check power cord connection to TV and outlet. Ensure the 12V DC adapter is securely connected if using DC power. Try a different outlet. |
| No Picture/Sound | Verify correct input source is selected. Check cable connections to external devices. Adjust brightness/contrast settings. |
| Remote Not Working | Replace remote batteries. Ensure no obstructions between remote and TV. Re-pair the Magic Remote (see Section 4.8). |
| Network Connection Issues | Restart your router/modem. Check Wi-Fi password. Ensure TV is within Wi-Fi range. Try a wired LAN connection if available. |
| Smart Features Not Responding | Ensure a stable internet connection. Restart the TV by unplugging it for 30 seconds and plugging it back in. |

9. Specifications

| Feature | Detail |
|--------------------------------|--|
| Screen Size | 24 Inches |
| Display Technology | LED |
| Resolution | 768p (1366x768) |
| Refresh Rate | 60 Hz |
| Operating System | webOS Hub |
| Connectivity | Dual-band Wi-Fi, Bluetooth 5.0, HDMI, USB, RCA, LAN |
| Power Compatibility | 12V AC/DC |
| Mounting Type | Table Mount and Wall Mount (VESA 100 x 100 mm) |
| Product Dimensions (D x W x H) | 3.3" x 21.6" x 12.8" |
| Included Components | Smart TV, AC Power Cord, DC Car Adaptor, Smart TV Magic Remote, Instruction Manual |
| Audio Output | Built-in speakers, 2.1 channel integrated surround sound |
| Control Method | Remote, Voice |

10. Warranty and Support

For warranty information and technical support, please contact the seller or refer to the warranty card included with your product. Keep your purchase receipt as proof of purchase.

Manufacturer: General Sound Co