

[manuals.plus](#) /› [Smartby](#) /› [Smartby BN59-01330H / RMCSPR1AP1 Remote Control User Manual for Samsung Smart TVs](#)

Smartby BN59-01330H

Smartby BN59-01330H / RMCSPR1AP1 Remote Control User Manual

For Samsung Smart TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Smartby BN59-01330H / RMCSPR1AP1 Remote Control. This remote is designed as a replacement for various Samsung Smart TV models, offering voice control and essential functions.

2. PRODUCT OVERVIEW

The Smartby BN59-01330H / RMCSPR1AP1 is a universal remote control compatible with a wide range of Samsung Smart TVs, including LED, QLED, UHD, SUHD, HDR, LCD, Frame, Curved, Solar, HDTV, 4K, 8K, and 3D models. It features built-in voice recognition technology for enhanced control.

This remote replaces numerous Samsung remote models, including BN59-01312, BN59-01329A, BN59-01329C, BN59-01329F, BN59-01330A, BN59-01330C, BN59-01330H, BN59-01330N, BN59-01330Q, BN59-01330N, BN59-01330M, BN59-01330H, BN59-01312Q, BN59-01259E, BN59-01312B/H/G, BN59-01312F, BN59-01312M, BN59-01312A, BN59-01199F, BN59-01259B, BN59-01260A, BN59-01301A, BN59-01315A, AA59-00666A, AA59-00741A, AA59-00786A, AA59-00602, AA59-00581A, AA59-00582A, AA59-00594A, BN59-01178W, and AA59-00638A.



Front view of the Smarty BN59-01330H remote control, displaying all buttons and their layout.

Replacement for Samsung Voice Remote Control (BN59-01330H / RMCS-PR1AP1) for Smart TVs



The Smarty BN59-01330H remote control positioned in front of a Samsung Smart TV, illustrating its intended use.

3. SETUP

- Battery Installation:** Insert two AAA batteries into the remote control, ensuring correct polarity.
- Pairing Process:** To pair the remote with your Samsung Smart TV, press and hold the **Back/Exit** button and the **Play/Pause** button simultaneously for approximately 5 seconds. A 'Pairing complete' message will appear on your TV screen once successful.



Easy To Use

1. Insert two AAA batteries
2. Press and hold the Back/Exit and Play/Pause buttons at the same time for 5 seconds and you will see the message "Pairing complete" on your TV screen

Diagram illustrating the pairing process for the Smartby BN59-01330H remote control, highlighting the Back/Exit and Play/Pause buttons.

4. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your Samsung Smart TV. Refer to the image below for button identification.

 


Front view of the Smarty BN59-01330H remote control, displaying all buttons and their layout.

- **Power Button:** Turns the TV on or off.
- **123 Button:** Accesses the virtual numeric keypad.

- **Microphone Button:** Activates voice control for commands and searches.
- **Directional Pad (Circular):** Navigates menus and selects items.
- **Back/Exit Button:** Returns to the previous screen or exits a menu.
- **Home Button:** Accesses the TV's Smart Hub or home screen.
- **Play/Pause Button:** Controls media playback.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down (CC/VD):** Changes TV channels or accesses Closed Captions/Video Description.
- **Netflix, Prime Video, Samsung TV Plus Buttons:** Direct access to these streaming services.





The Smartby BN59-01330H remote control with the microphone button highlighted, indicating its voice control functionality.

5. TROUBLESHOOTING

- Remote Not Responding:** Ensure batteries are correctly installed and have sufficient charge. Replace batteries if necessary.
- Pairing Issues:** If the 'Pairing complete' message does not appear, ensure the remote is within close proximity to the TV and repeat the pairing process (hold Back/Exit and Play/Pause buttons for 5 seconds). Some users have reported needing multiple attempts for successful Bluetooth connection.
- Voice Control Not Working:** Verify that the remote is properly paired and that your TV supports voice control. Ensure there are no obstructions between the remote and the TV.
- Specific App Buttons Not Activating:** If direct streaming buttons (Netflix, Prime Video, Samsung TV Plus) do not launch the apps, check your TV's internet connection and app installation. In some cases, this may indicate a compatibility issue or require a TV software update.
- Intermittent Functionality:** If the remote stops working intermittently, try re-pairing it with the TV. If issues persist, consider replacing the batteries or contacting support.

6. SPECIFICATIONS

Product Dimensions	7.5 x 1.2 x 1 inches
Item Weight	1.44 ounces
Batteries	2 AAA batteries (required)
Connectivity Technology	Bluetooth
Compatible Devices	Television
Special Feature	Voice Search


Max Number of Supported Devices	1
Model Number	BN59-01330H

7. WARRANTY AND SUPPORT

For product support or warranty inquiries, please contact Smartby customer service. Refer to your purchase documentation for specific warranty terms and conditions.

© 2024 Smartby. All rights reserved.

Related Documents - BN59-01330H

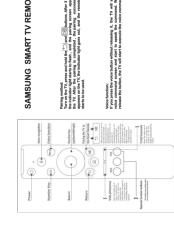	<p>Samsung Universal Remote Control BN59-01315A User Guide</p> <p>Comprehensive user guide for the Samsung BN59-01315A universal remote control. Learn about its features, compatibility with Samsung smart TVs, setup, and programming instructions for seamless TV and cable/satellite box operation.</p>
	<p>Samsung Remote Control User Guide and Compatibility</p> <p>Comprehensive guide to Samsung remote control functions, installation steps, and compatibility with various Samsung TV models. Includes model numbers for easy reference.</p>
	<p>Samsung Smart TV Remote Control Guide</p> <p>A comprehensive guide to using the Samsung Smart TV Remote Control, including pairing instructions, button functions, and voice command usage.</p>
	<p>Samsung Smart Remote Instructions and Troubleshooting</p> <p>A guide to connecting and using the Samsung Smart Remote, including troubleshooting common issues with the remote and controlling external devices via Universal Remote.</p>
	<p>Samsung BN59-00516A Replacement Remote Control Guide</p> <p>This guide provides button mapping details for the Samsung BN59-00516A replacement remote control, covering TV, DVD, STB, and CABLE-VCR functions. Compare original remote buttons to their replacements.</p>



[Samsung Smart Remote: Connecting and Troubleshooting Guide](#)

A guide on how to connect the Samsung Smart Remote to your TV, control external devices, and troubleshoot common remote control issues. Includes FCC compliance information.