

WWEIFUS DWF-A1088 / 11210761

WWEIFUS Daewoo Washing Machine Control Board DWF-A1088 / 11210761 Instruction Manual

Model: DWF-A1088 / 11210761 | Brand: WWEIFUS

1. INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of the WWEIFUS compatible Daewoo Washing Machine Computer Control Board, part numbers DWF-A1088 and 11210761. This control board is designed as a direct replacement part for specific Daewoo washing machine models, ensuring proper functionality and longevity of your appliance.

It is crucial to read and understand all instructions before attempting any installation or repair to ensure safety and prevent damage to the product or appliance.

2. SAFETY INFORMATION

WARNING: Risk of Electric Shock. Always disconnect power to the washing machine before servicing.

- Ensure the washing machine is unplugged from the electrical outlet before beginning any installation or repair work.
- Turn off the water supply to the washing machine.
- If you are not comfortable performing electrical repairs, seek assistance from a qualified technician.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- Handle the control board with care to avoid damage to electronic components.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package.

- 1 x WEIFUS Compatible Daewoo Washing Machine Computer Control Board (DWF-A1088 / 11210761)

4. INSTALLATION GUIDE

This section outlines the general steps for replacing the control board. Specific disassembly and reassembly procedures may vary slightly depending on your Daewoo washing machine model. Refer to your washing machine's service manual for detailed instructions if available.

1. **Disconnect Power and Water:** Ensure the washing machine is completely unplugged from the power outlet and the water supply is turned off.
2. **Access the Control Panel:** Depending on your washing machine model, you may need to remove screws from the rear panel or lift the top lid to access the control panel assembly. Carefully detach the control panel from the main body of the washing machine.
3. **Locate the Old Control Board:** Identify the existing control board within the control panel. It will have multiple wire harnesses connected to it.
4. **Document Connections:** Before disconnecting any wires, take clear photographs or make detailed diagrams of all wire connections to the old control board. This is critical for correct reassembly.
5. **Disconnect Wires:** Carefully disconnect all wire harnesses and connectors from the old control board. Note that some connectors may have locking tabs that need to be pressed or squeezed.
6. **Remove Old Control Board:** Unscrew or unclip the old control board from its mounting points within the control panel.
7. **Install New Control Board:** Position the new WEIFUS control board in the same location as the old one. Secure it using the original screws or clips.
8. **Reconnect Wires:** Using your photographs or diagrams, carefully reconnect all wire harnesses and connectors to the new control board. Ensure each connection is firm and correctly seated.
9. **Reassemble Control Panel:** Reattach the control panel to the washing machine body, ensuring all screws are tightened and the panel is securely in place.
10. **Restore Power and Water:** Plug the washing machine back into the electrical outlet and turn on the water supply.
11. **Test Functionality:** Run a short wash cycle to confirm that the washing machine operates correctly with the new control board.



Image 1: Angled view of the WEIFUS Daewoo Washing Machine Control Board DWF-A1088 / 11210761, showing various connectors and electronic components.



Image 2: Top-down view of the WEIFUS Daewoo Washing Machine Control Board DWF-A1088 / 11210761, highlighting the display, buttons, and circuit layout.

5. OPERATION

The WEIFUS Daewoo Washing Machine Control Board DWF-A1088 / 11210761 is an internal component that facilitates the proper functioning of your washing machine. Once correctly installed, it enables the washing machine to:

- Execute various wash cycles and programs.
- Control water intake, heating, agitation, rinsing, and spinning.
- Display cycle status, error codes, and remaining time on the machine's user interface.
- Respond to user inputs from the control panel buttons and knobs.

The operation of the washing machine itself remains unchanged; the control board simply restores its intended functionality.

6. MAINTENANCE

The control board itself requires minimal direct maintenance. However, general care for your washing machine can help prolong the life of all its components, including the control board.

- **Keep Dry:** Ensure the control panel area remains dry. Moisture can damage electronic components.
 - **Clean Exterior:** Regularly clean the exterior of your washing machine, including the control panel, with a soft, damp cloth. Avoid abrasive cleaners or excessive moisture.
 - **Stable Power Supply:** Use a surge protector for your washing machine to protect against power fluctuations that could damage electronic components.
 - **Avoid Impact:** Protect the washing machine from physical impacts that could dislodge or damage internal components.
-

7. TROUBLESHOOTING

If your washing machine is not functioning correctly after installing the new control board, consider the following troubleshooting steps:

- **No Power/Display:**
 - Check if the washing machine is properly plugged into a working electrical outlet.
 - Verify the circuit breaker for the washing machine has not tripped.
 - Ensure all wire harnesses to the control board are securely connected.
- **Incorrect Cycle Behavior:**
 - Double-check all wire connections against your diagrams or photos to ensure they are correctly matched.
 - Ensure the control board is correctly seated and secured.
- **Error Codes Displayed:**
 - Refer to your Daewoo washing machine's user manual for the meaning of specific error codes. This may indicate issues with other components, not necessarily the control board itself.
- **Partial Functionality:**
 - A loose or incorrect connection for a specific function (e.g., water fill, spin) could be the cause. Re-examine the relevant connections.

If troubleshooting steps do not resolve the issue, it is recommended to consult a qualified appliance technician.

8. SPECIFICATIONS

Attribute	Value
Item Name	Washing Machine Control Board
Compatible Brand	Daewoo
Part Numbers	DWF-A1088, 11210761
Type	Washing Machine Parts
Package Dimensions	1.18 x 0.79 x 0.39 inches
Item Weight	1.76 ounces
Manufacturer	hsujd
Assembly Required	No (refers to the board itself, not its installation into the machine)
Number of Pieces	1

9. WARRANTY AND SUPPORT

For warranty information regarding this WWEIFUS compatible control board, please refer to the product packaging or contact the seller directly. Specific warranty terms and conditions may vary.

For technical support or further assistance, please reach out to the seller or manufacturer through the contact information provided at the point of purchase.