



Manuals.plus /

› LSSF /

› LSSF C4473 Waste Toner Container User Manual for Xerox ApeosPort-VII Printers

LSSF C4473

LSSF C4473 Waste Toner Container User Manual

For Xerox ApeosPort-VII C7773, C6673, C5573, C4473, C3373, C3372 Printers

1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of your LSSF C4473 Waste Toner Container. Designed for use with compatible Xerox ApeosPort-VII series printers, this container is engineered to manage waste toner efficiently, ensuring optimal printer performance and print quality. Please read this manual thoroughly before using the product to ensure safe and effective operation.

2. COMPATIBLE PRINTER MODELS

The LSSF C4473 Waste Toner Container is compatible with the following Xerox ApeosPort-VII series printer models:

- Xerox ApeosPort-VII C7773
- Xerox ApeosPort-VII C6673
- Xerox ApeosPort-VII C5573
- Xerox ApeosPort-VII C4473
- Xerox ApeosPort-VII C3373
- Xerox ApeosPort-VII C3372

Compatible printer models

ApeosPort-VII
C7773/C6673/C5573/C4473
/C3373/C3372



Figure 2.1: Visual representation of compatible Xerox ApeosPort-VII printer models.

3. SETUP AND INSTALLATION

Follow these steps to properly install the LSSF C4473 Waste Toner Container into your compatible Xerox ApeosPort-VII printer.

1. **Unpack the Container:** Carefully remove the new waste toner container from its packaging. Ensure all protective materials are removed.
2. **Locate the Waste Toner Compartment:** Refer to your printer's specific user manual to locate the waste toner compartment. This is typically accessible from the front or side panel of the printer.
3. **Remove the Old Container:** Open the compartment door. Grasp the handle of the old waste toner container and pull it straight out. Place the old container in a sealed bag to prevent toner leakage.
4. **Insert the New Container:** Align the new LSSF C4473 Waste Toner Container with the slot in the printer. Gently push it in until it clicks securely into place. Do not force the container.
5. **Close the Compartment:** Close the printer's waste toner compartment door. The printer should recognize the new container automatically.

6. **Dispose of the Old Container:** Dispose of the old waste toner container according to local regulations for electronic waste or toner cartridges.



Figure 3.1: LSSF C4473 Waste Toner Container and its packaging.

Important Note: The LSSF C4473 Waste Toner Container includes an enhanced compatibility chip to ensure seamless communication with your printer. This chip allows the printer to accurately monitor toner levels and recognize the container.

4. OPERATION

Once installed, the LSSF C4473 Waste Toner Container operates automatically as part of your printer's toner management system. It collects excess toner that is not transferred to the paper during the printing process.

- **Automatic Function:** The container works in conjunction with your printer to ensure clean and efficient operation.

- **Page Yield:** This waste toner container offers an impressive page yield of approximately 50,000 pages for black printing. This extended capacity minimizes the frequency of replacements.



Figure 4.1: Indication of 50,000 page yield for black prints.

Exquisite Prints



Figure 4.2: Example of print quality achieved with proper toner management.

5. MAINTENANCE AND REPLACEMENT

The primary maintenance for the waste toner container involves its timely replacement when full.

- **Replacement Indicator:** Your Xerox ApeosPort-VII printer will display a message or indicator when the waste toner container is nearing full capacity or requires replacement.
- **Prompt Replacement:** It is crucial to replace the waste toner container promptly when indicated by the printer to prevent toner overflow and potential damage to the printer or print quality issues.
- **Storage:** Store new waste toner containers in a cool, dry place, away from direct sunlight and extreme temperatures. Keep them in their original sealed packaging until ready for use.

6. TROUBLESHOOTING

This section addresses common issues related to the waste toner container.

- **Printer Not Recognizing Container:**

- Ensure the container is fully inserted and clicked into place.
 - Remove and reinsert the container.
 - Verify that the container is the correct model (C4473) for your printer.
 - Restart the printer.
- **"Waste Toner Full" Message After Replacement:**
 - Confirm the old container was completely removed and the new one is correctly installed.
 - The printer's sensor might need a moment to reset. If the message persists, try restarting the printer.
 - Ensure the new container has a functional compatibility chip.
- **Toner Leakage:**
 - If toner leakage occurs from the old container, immediately place it in a sealed bag.
 - If leakage occurs from a new container, ensure it is not damaged. Contact support if the container appears faulty.

For further troubleshooting, refer to your Xerox ApeosPort-VII printer's official user manual or contact LSSF customer support.

7. PRODUCT SPECIFICATIONS

Specification	Detail
Model Number	C4473
Brand	LSSF
Compatible Devices	Xerox ApeosPort-VII C7773, C6673, C5573, C4473, C3373, C3372
Page Yield (Black)	Approximately 50,000 pages
Product Dimensions	10 x 5 x 5 inches
Item Weight	2.2 pounds
Color	Black (for waste toner collection)

8. PACKAGING AND PROTECTION

The LSSF C4473 Waste Toner Container is packaged with multiple layers of protection to ensure it arrives in optimal condition.

- **First Protection:** The product is sealed in a black plastic bag and placed within a pearl cotton protective sleeve.
- **Secondary Protection:** This is then packed into a brand-specific packaging box.
- **Third Protection:** Finally, the item is secured within a hard cardboard box to prevent damage during transit.

Triple Protection



First Protection

Product packed in black plastic bag

Put on a pearl cotton protective sleeve



Secondary Protection

Pack in brand packaging box



Third Protection

Pack in a hard cardboard box

Ensure that the goods are intact and undamaged

Figure 8.1: Triple protection packaging for the LSSF C4473 Waste Toner Container.

9. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact LSSF customer support. Refer to the product packaging or the retailer's website for contact information.