

Babilous YB-H22

Babilous Foldable High Chair Model YB-H22 Instruction Manual

Your guide to safe and effective use of your Babilous High Chair.

1. INTRODUCTION

Thank you for choosing the Babilous Foldable High Chair. This manual provides essential information for the safe assembly, operation, maintenance, and storage of your high chair. Please read all instructions carefully before use and keep this manual for future reference. Ensure all users are familiar with the operating procedures and safety warnings.

Important Safety Warnings:

- Always secure your child with the harness.
- Never leave your child unattended in the high chair.
- Ensure the high chair is fully open and locked before placing a child in it.
- Keep children away from the high chair during folding and unfolding to prevent injury.
- Do not use the high chair if any parts are broken, torn, or missing.
- Maximum weight recommendation: 35 pounds.

2. PRODUCT OVERVIEW

The Babilous Foldable High Chair is designed for comfort, safety, and convenience, featuring multiple adjustments to grow with your child.

Key Features:

- **Fully Adjustable Design:** 3-level footrest, 4-position reclinable backrest, and 3-position adjustable

tray.

- **Versatile Height Adjustments:** 8 height levels to fit various table heights.
- **Compact Foldable Convenience:** Folds for easy storage and includes a built-in tray holder.
- **Dual Layer Tray:** Removable, dishwasher-safe upper tray for eating, and a lower tray for playtime.
- **Smooth Mobility and Safety:** Equipped with lockable wheels for easy movement and secure positioning.
- **Comfortable Materials:** Soft cushion and PU leather for easy cleaning.



Figure 1: Babilous Foldable High Chair, Star Pink model, showcasing its full setup with tray and cushion.

3. SETUP AND ASSEMBLY

The Babilous High Chair is designed for straightforward assembly. Follow these general steps:

1. Unpack all components and verify against the parts list (refer to included manual for detailed list).
2. Attach the main frame components, ensuring all locking mechanisms click into place securely.
3. Install the wheels onto the base of the high chair. Ensure they are securely attached and can be locked/unlocked.
4. Place the seat unit onto the frame, aligning the attachment points.
5. Secure the seat cushion and harness system.
6. Attach the tray to the designated slots on the armrests.



Figure 2: Close-up of key components such as the thickened tube for stability, PU leather material, and removable wheels for convenience.

Assembly Demonstration:

Your browser does not support the video tag.

Video 1: Official Babilous demonstration of high chair features and assembly, highlighting its versatility for babies and toddlers.

4. OPERATING INSTRUCTIONS

Adjusting Seat Height:

To adjust the high chair's height, locate the adjustment buttons on the side of the main frame. Press these buttons simultaneously and slide the seat up or down to one of the 8 available height levels. Release the buttons to lock the seat in position. Ensure both sides are locked evenly.

Foldable High Chair

Easy to Storage

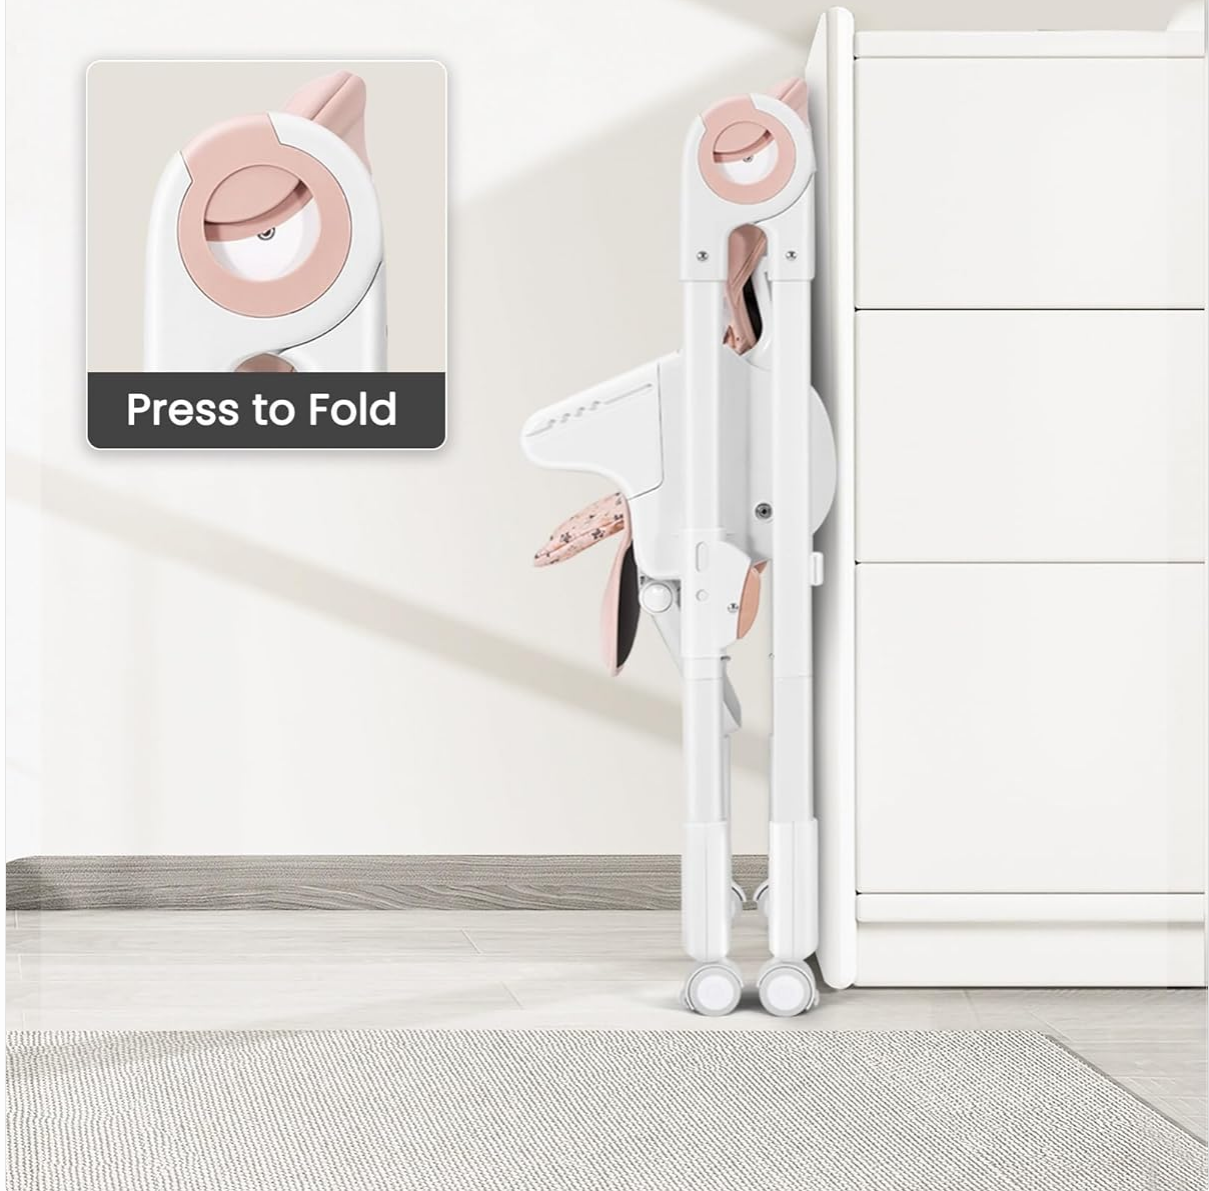


Figure 3: Visual guide for adjusting the footrest position and the chair's height, showing the 8 available levels.

Adjusting Backrest Recline:

The backrest offers 4 recline positions. Locate the recline adjustment lever behind the seat. Squeeze the lever and gently push or pull the backrest to your desired angle. Release the lever to secure the recline position.

Footrest Position Adjustment Chair Height Adjustment



Figure 4: Illustration of the adjustable backrest recline angles (120°, 125°, 155°, 170°) and three footrest positions.

Adjusting Footrest:

The footrest has 3 adjustable levels. Press the buttons on either side of the footrest and slide it to the appropriate height for your child's comfort. Release the buttons to lock.

Attaching and Adjusting the Tray:

To attach the tray, align the guides on the tray with the slots on the armrests and slide it forward until it clicks into place. The tray has 3 positions to accommodate your child's size. To adjust, press the release levers under the tray and slide it closer or further from your child. To remove the tray, press the release levers and pull the tray outwards.



Figure 5: The dual-layer removable dinner tray, with an upper section for meals and a lower section for play.

Using Lockable Wheels:

The high chair is equipped with lockable wheels for easy maneuverability. To move the chair, ensure the wheel locks are disengaged. To secure the chair in place, push down on the locking levers on each wheel until they click. Always lock the wheels when the child is in the high chair.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your Babilous High Chair.

- **Seat Cover:** The seat cover is removable and made of PU leather, which is easy to wipe clean with a damp cloth and mild soap. Allow to air dry completely. Do not machine wash or tumble dry unless specified by the care label.
- **Tray:** The upper tray is removable and dishwasher safe for thorough cleaning. The lower tray can be wiped clean with a damp cloth.
- **Frame:** Wipe down the frame with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Harness:** The 5-point harness straps can be wiped clean. Ensure they are dry before re-securing.
- **Wheels:** Periodically check wheels for debris and clean as needed to ensure smooth operation.



Figure 6: The removable tray is easy to clean, simply rinse under water or place in a dishwasher.

6. STORAGE

The Babilous High Chair features a compact folding design for convenient storage.

1. Remove the tray and store it using the built-in tray holder on the rear legs.
2. Ensure the seat is in its upright position.
3. Locate the folding buttons/levers on the sides of the frame (usually near the top of the legs).
4. Press the buttons/levers and push the legs together until the chair folds compactly.
5. Store the folded high chair in a dry, safe place away from direct sunlight.

Size of Children's Chair



Figure 7: The high chair folds compactly for easy storage, fitting into narrow spaces.

7. TROUBLESHOOTING

If you encounter any issues with your Babilous High Chair, please refer to the following common solutions:

- **Chair not locking securely:** Ensure all frame components are fully extended and the locking mechanisms are engaged. Check for any obstructions.
- **Wheels not rolling smoothly:** Check for debris (hair, lint) caught in the wheels. Clean as necessary. Ensure wheel locks are disengaged.

- **Tray difficult to attach/remove:** Ensure the release levers are fully pressed when attaching or removing the tray. Check for food residue or damage in the slots.
- **Harness difficult to adjust:** Ensure straps are not twisted or caught. Follow the adjustment instructions carefully.

For further assistance, please contact Babilous customer support.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	30 x 24 x 40 inches (76.2 x 60.96 x 101.6 cm)
Maximum Weight Recommendation	35 Pounds (15.88 kg)
Material Type	Faux Leather, Metal, Plastic
Material Composition	PU Leather, Metal, Plastic
Batteries Required	No
Is Portable	Yes
Item Weight	17.65 pounds (8.01 kg)
Color	Star Pink

9. WARRANTY AND SUPPORT

Babilous stands behind the quality of its products. For warranty information, product registration, or customer support, please refer to the contact details provided with your purchase or visit the official Babilous website. Please retain your proof of purchase for any warranty claims.