

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [ZWP](#) /

> [ZWP Projector Replacement Remote Control User Manual for AURZEN Boom 3 F503, GooDee YG600-Movin, NexiGo PJ30 Ultra, ELEPHAS 2023 2024, iSinbox YG381 Smart Projector](#)

ZWP PJ30 Ultra

ZWP Projector Replacement Remote Control User Manual

Model: PJ30 Ultra | Brand: ZWP

1. INTRODUCTION

This manual provides comprehensive instructions for the ZWP Projector Replacement Remote Control. It covers essential information regarding setup, operation, and maintenance to ensure optimal performance and longevity of your device.

2. COMPATIBLE PROJECTOR MODELS

This remote control is designed for compatibility with the following projector models:

- AURZEN Boom 3 F503
- GooDee YG600-Movin
- NexiGo PJ30 Ultra Outdoor Projector
- ELEPHAS 2023 2024 4K Outdoor Movie Projector
- iSinbox YG381 Smart Projector

3. PACKAGE CONTENTS

- 1 x ZWP Projector Replacement Remote Control
- (Batteries are not included)

4. SETUP

4.1. Battery Installation

The remote control requires two AAA batteries, which are not included in the package.

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

3. Close the battery compartment cover securely until it clicks into place.



Image: Back view of the remote control showing the battery compartment with two AAA batteries inserted.

4.2. Pairing Instructions

To establish a connection between the remote control and your projector:

1. Ensure your projector is powered on and ready for pairing.
2. Press and hold the **Vol +** (Volume Up) and **Vol -** (Volume Down) buttons on the remote control simultaneously.
3. Continue holding the buttons until the pairing mode is activated. Refer to your projector's on-screen instructions for specific pairing prompts or confirmation.
4. If your projector supports Bluetooth pairing, it is recommended to follow the on-screen instructions when initially turning on the projector. If you bypass the Bluetooth pairing step, ensure to point the remote control directly at the projector's IR sensor during use.

How To Pairing

Press and Hold the <Vol +> and <Vol -> buttons on the projector remote control at the same time to start Bluetooth pairing mode

Tips: We recommend pairing the remote control via Bluetooth by following the on-screen instructions when initially turning on the projector; If you skip the Bluetooth pairing step, make sure to point the remote control at the IR sensors on the projector when in use.



Image: Diagram illustrating the pairing process by holding the Volume Up and Volume Down buttons.

5. OPERATING INSTRUCTIONS

The remote control features various buttons designed for intuitive navigation and control of your projector's functions.



Image: Front view of the ZWP Projector Replacement Remote Control, displaying all buttons.

5.1. Button Functions

- **Power Button** (*Red Circle with Line*): Turns the projector on or off.

- **Mute Button** (*Speaker with X*): Mutes or unmutes the audio output.
- **Source/Input Button** (*Rectangle with Arrow*): Selects different input sources (e.g., HDMI, USB).
- **Settings Button** (*Gear Icon*): Accesses the projector's main settings menu.
- **Navigation Pad** (*Circular Pad with Center Button*): Used to navigate through menus and confirm selections.
- **Back Button** (*Curved Arrow*): Returns to the previous screen or menu.
- **Home Button** (*House Icon*): Returns to the main home screen or interface.
- **Menu/Options Button** (*Three Horizontal Lines*): Opens context-sensitive menus or additional options.
- **Volume Up (+) / Volume Down (-)**: Adjusts the audio volume level.
- **Netflix Button**: Provides direct access to the Netflix application.
- **YouTube Button**: Provides direct access to the YouTube application.
- **Prime Video Button**: Provides direct access to the Prime Video application.

6. MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to gently clean the surface of the remote control. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the finish or internal components.
- **Battery Replacement**: Replace batteries promptly when the remote's response becomes slow, inconsistent, or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage**: If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent potential leakage and damage to the device. Store the remote in a cool, dry place.

7. TROUBLESHOOTING

Problem	Solution
Remote control is not responding.	<ol style="list-style-type: none"> 1. Check battery polarity and ensure batteries are fresh. Replace if necessary. 2. Ensure there are no physical obstructions between the remote control and the projector's IR sensor. 3. Re-pair the remote control with the projector following the pairing instructions in Section 4.2.
Specific buttons are not working correctly.	<ol style="list-style-type: none"> 1. Clean the remote control surface to remove any dirt or debris that might be obstructing button presses. 2. Replace the batteries, as low power can sometimes affect button responsiveness.
Short operating range or intermittent connection.	<ol style="list-style-type: none"> 1. Replace the batteries with new ones. 2. Ensure a clear line of sight to the projector's IR sensor and minimize interference from other electronic devices.

8. SPECIFICATIONS

- **Brand**: ZWP
- **Model**: PJ30 Ultra (Replacement Remote)
- **Power Source**: 2 x AAA Batteries (not included)

- **Material:** High-quality ABS
- **Dimensions:** 6.3 x 1.61 x 0.79 inches
- **Weight:** 0.634 ounces
- **Color:** Black
- **Max Number of Supported Devices:** 1 (Projector)
- **Special Feature:** Ergonomic design

9. WARRANTY INFORMATION

Specific warranty details for this product are not provided within the available product information. For warranty inquiries, please refer to the seller's policy on your purchase platform or contact ZWP customer support directly.

10. CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your ZWP Projector Replacement Remote Control, please do not hesitate to contact the seller directly through your purchase platform.

You may also visit the [ZWP Store on Amazon](#) for additional product information and support resources.