



2658467

# User Manual: Ninja Deluxe Kitchen System

Model: 2658467

## INTRODUCTION

---

Welcome to the user manual for your new Generic Ninja Deluxe Kitchen System. This versatile appliance is designed to simplify your food preparation tasks, offering powerful blending and precise food processing capabilities. With its 88-oz. Total Crushing Pitcher, 9-cup Precision Processor Bowl, and 24-oz. Single-Serve Cups, you can effortlessly create smoothies, frozen drinks, chop ingredients, puree, and even mix dough.

This manual provides essential information on safety, assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your kitchen system. Please read all instructions carefully before first use.

## IMPORTANT SAFETY INFORMATION

---

**WARNING:** To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed.

- Read all instructions before operating the appliance.
- Do not immerse the motor base in water or other liquids.
- Always ensure the lid is securely locked before operating.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender.
- Do not blend hot liquids in the sealed containers as pressure buildup can cause burns.

## COMPONENTS AND ASSEMBLY

---

Your Ninja Deluxe Kitchen System comes with several components designed for various functions. Familiarize yourself with each part before assembly.



**Figure 1: Complete Ninja Deluxe Kitchen System.** This image displays the main motor base, the 88-oz. Total Crushing Pitcher with lid, two 24-oz. Single-Serve Cups with spout lids, the 9-cup Precision Processor Bowl with lid, and various blade assemblies including the Total Crushing Blades, Dough Blade, and reversible slicing/shredding and grating discs.

### What's Included:

- 1600-peak-watt Motor Base
- 88-oz. Total Crushing Pitcher with Lid (80-oz. max liquid capacity)
- Total Crushing Blade Assembly
- 9-cup Precision Processor Bowl with Lid
- Chopping Blade Assembly
- Dough Blade Assembly
- Reversible Slicing/Shredding Disc
- Grating Disc
- 24-oz. Single-Serve Cups (x2)
- Pro Extractor Blades Assembly
- Spout Lids (x2)

### Initial Setup and Cleaning:

1. Remove all packaging materials and promotional labels from the appliance.
2. Wash the pitcher, processor bowl, single-serve cups, lids, and blade assemblies in warm, soapy water using a mild dish detergent. Rinse thoroughly.
3. Wipe the motor base with a clean, damp cloth. Do not immerse the motor base in water.
4. Ensure all parts are completely dry before assembly and storage.

## OPERATING INSTRUCTIONS

---

The Ninja Deluxe Kitchen System features intuitive controls and Auto-iQ programs for various tasks.



**Figure 2: Control Panel.** This image shows the motor base's control panel with power button, pulse button, and a central dial for selecting Auto-iQ programs (Smoothie, Frozen, Extract, Dough, Chop, Disc) and manual speeds (Low, Medium, High).

### Using the 88-oz. Total Crushing Pitcher:



**Figure 3: Total Crushing Pitcher in use.** The 88-oz. pitcher is shown on the motor base, filled with various fruits for blending.

1. Place the motor base on a clean, dry, level surface.
2. Place the Total Crushing Blade Assembly onto the drive gear inside the pitcher.
3. Add ingredients to the pitcher. Do not exceed the 80-oz. MAX LIQUID fill line.

4. Place the lid on the pitcher and press down firmly until it clicks into place. The handle must be aligned with the arrow on the pitcher.
5. Place the assembled pitcher onto the motor base, aligning the arrow on the pitcher with the arrow on the base. Turn clockwise until it locks.
6. Plug in the power cord.
7. Select your desired Auto-iQ program (e.g., **SMOOTHIE**, **FROZEN**) or a manual speed (**LOW**, **MEDIUM**, **HIGH**). Press the **PULSE** button for short bursts of power.
8. Once blending is complete, wait for the blades to stop completely. Press the release button on the lid handle to open, then carefully remove the pitcher from the base.

### Using the 24-oz. Single-Serve Cups:



**Figure 4: Single-Serve Cup in use.** A 24-oz. single-serve cup is shown on the motor base with a green smoothie, alongside another cup with a spout lid.

1. Add ingredients to the 24-oz. Single-Serve Cup. Do not exceed the MAX FILL line.
2. Screw the Pro Extractor Blades Assembly onto the top of the cup until tightly sealed.
3. Invert the cup and place it onto the motor base, aligning the tabs on the cup with the slots on the base. Turn clockwise until it locks into place.
4. Plug in the power cord.
5. Select the **EXTRACT** Auto-iQ program or a manual speed.
6. Once blending is complete, wait for the blades to stop. Turn the cup counter-clockwise to unlock and lift it off the base.
7. Unscrew the blade assembly and replace with a spout lid for on-the-go consumption.

### Using the 9-cup Precision Processor Bowl:




**Figure 5: Precision Processor Bowl in use.** The 9-cup processor bowl is shown on the motor base, containing dough, with various discs and blades nearby.

1. Place the motor base on a clean, dry, level surface.
2. Place the 9-cup Precision Processor Bowl onto the motor base, aligning the arrow on the bowl with the arrow on the base. Turn clockwise until it locks.
3. Insert the desired blade assembly (Chopping Blade or Dough Blade) or disc (Slicing/Shredding or Grating) onto the drive gear in the bowl.
4. Add ingredients to the bowl. Do not exceed the MAX FILL line for solids or liquids. For dough, do not exceed 2.5 lbs.
5. Place the lid on the processor bowl and press down firmly until it clicks into place. The handle must be aligned with the arrow on the bowl.
6. Plug in the power cord.
7. Select your desired Auto-iQ program (e.g., **CHOP**, **DOUGH**, **DISC**) or a manual speed.
8. Once processing is complete, wait for the blades/disc to stop. Press the release button on the lid handle to open, then carefully remove the bowl from the base.

## MAINTENANCE AND CLEANING

---

Proper cleaning and maintenance will extend the life of your Ninja Deluxe Kitchen System.

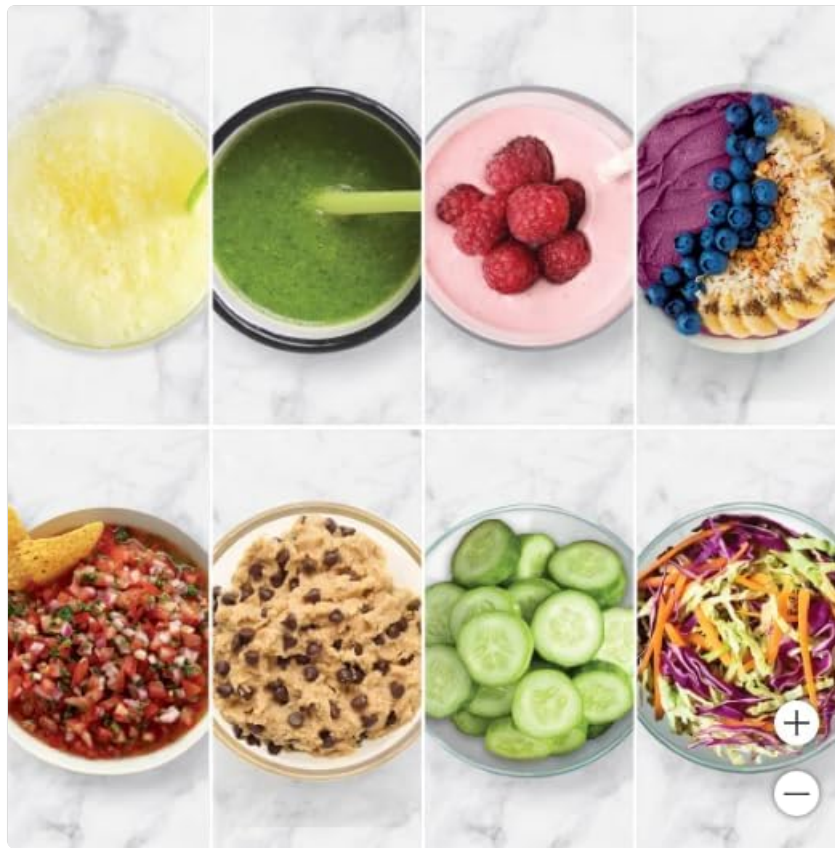

**Figure 6: Dishwasher Safe Components.** This image shows the pitcher, processor bowl, and lids placed in a dishwasher rack, indicating they are safe for machine washing.

## Cleaning:

- Always unplug the motor base before cleaning.
- **Motor Base:** Wipe clean with a damp cloth. Do not immerse in water.
- **Pitcher, Processor Bowl, Single-Serve Cups, Lids, and Blade Assemblies:** These components are dishwasher safe. Place them on the top rack of your dishwasher. For best results, separate all parts before washing.
- **Hand-Washing:** Wash in warm, soapy water. Use a dishwashing utensil with a handle to avoid direct contact with blades. Rinse thoroughly and air dry.
- For stubborn, sticky ingredients, fill the pitcher/bowl with warm water and a drop of dish soap, then run or **PULSE** for a few seconds. Rinse thoroughly.

## Storage:

- Store the appliance upright with the pitcher or processor bowl assembled on the motor base, or store components separately in a safe place where they won't be damaged.
- Store blade assemblies in a closed container or cabinet to prevent accidental contact.
- Do not store food in the pitcher or processor bowl.

## TROUBLESHOOTING

---

If you encounter issues with your Ninja Deluxe Kitchen System, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; container/lid not properly assembled; motor overload.	Ensure unit is plugged in. Check that the pitcher/bowl and lid are securely locked into place. If overloaded, remove some ingredients, unplug, wait 15 minutes, then plug back in.
Ingredients are not blending/processing.	Too many ingredients; not enough liquid; ingredients are too large.	Reduce ingredient quantity. Add more liquid if blending. Cut ingredients into smaller pieces. Use the PULSE function to break down larger chunks.
Lid is difficult to attach/remove.	Lid not aligned correctly; food stuck in seal.	Ensure the lid handle is aligned with the arrow on the pitcher/bowl. Press the lid release button firmly. Clean any food debris from the lid's sealing gasket.
Unit vibrates excessively.	Uneven load; unit not on a level surface.	Ensure ingredients are evenly distributed. Place the motor base on a stable, level surface.

## SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Name	Blander (Model Number: 2658467)
Special Feature	Dishwasher Safe Accessories
Product Dimensions	8"D x 18"W x 9"H
Color	Black
Bowl Capacity	9 Cups (Processor Bowl)
Recommended Uses	Blend, Chop, Puree, Mix Dough, Slice, Shred, Grate
Number of Speeds	3 (Low, Medium, High) + Auto-iQ Programs
Product Care Instructions	Dishwasher Safe (accessories)
Blade Material	Stainless Steel
Power Source	Corded Electric (BPA-free materials)
Item Weight	19.88 pounds

## WARRANTY AND SUPPORT

Specific warranty details for your Generic Ninja Deluxe Kitchen System are typically provided with the product packaging or can be found on the manufacturer's official website. Please refer to these resources for information regarding warranty coverage, terms, and conditions.

For customer support, service, or to order replacement parts, please contact the manufacturer's customer service department. Contact information can usually be found in the product packaging or on the manufacturer's website.

