

air31

Headset Sports ANC TWS Wireless Earbuds User Manual

Model: air31 | Brand: Generic

INTRODUCTION

Thank you for choosing the Headset Sports ANC TWS Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new earbuds. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

These earbuds feature Active Noise Cancellation (ANC), a waterproof design, built-in microphone, and true wireless stereo connectivity, making them ideal for mobile phone use, gaming, sports, and professional applications.

WHAT'S IN THE BOX

Upon unboxing, please ensure all items are present:

- Headset Sports ANC TWS Wireless Earbuds
- Protective Case
- User Manual (this document)
- Charging Cable



Image: The Headset Sports ANC TWS Wireless Earbuds shown inside their protective charging case. The case features a digital display indicating battery levels, currently showing "90".

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the earbuds and their protective case. Connect the charging cable to the case's charging port and a compatible USB power source. The digital display on the case will indicate the charging status and battery percentage.

2. Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case has sufficient power.
2. Open the charging case lid. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on the earbuds (specific color/pattern may vary).
3. On your mobile device (smartphone, tablet, computer), go to the Bluetooth settings.
4. Search for new devices. You should see "TWS Wireless Earbuds" or a similar name (e.g., "air31") appear in the list of available devices.
5. Select the earbuds from the list to connect. Once connected, a voice prompt will confirm the connection, and the LED light on the earbuds will stop flashing.
6. If prompted for a passcode, enter "0000" (four zeros).

Note: The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

OPERATING INSTRUCTIONS

Touch Controls

The earbuds feature touch-sensitive controls for various functions. The exact location of the touch sensor is typically on the outer surface of each earbud.

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Triple Tap (Left/Right)	Activate Voice Assistant (Siri, Google Assistant)
Long Press (Left/Right, 2 seconds)	Toggle ANC (Active Noise Cancellation) On/Off
Long Press (Left/Right, 3 seconds during call)	Reject Incoming Call

Note: Specific touch control functions may vary slightly based on firmware version. Refer to the quick start guide included in your packaging for any specific variations.

Active Noise Cancellation (ANC)

The earbuds are equipped with Active Noise Cancellation technology to reduce ambient noise. To activate or deactivate ANC, perform a long press (approximately 2 seconds) on either earbud until you hear an audible confirmation.

Wearing the Earbuds

Gently insert each earbud into your ear canal. Adjust the angle until it feels secure and comfortable. A proper fit is crucial for optimal sound quality and effective noise cancellation.

MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Water Resistance:** The earbuds are waterproof. However, avoid prolonged submersion in water. Dry them thoroughly before placing them back in the charging case to prevent damage to the charging contacts.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds and case frequently. Charge them regularly, even if not in daily use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing	Low battery; Out of range; Already paired to another device; Pairing mode not active.	Charge earbuds and case; Move closer to device; Disconnect from other devices; Ensure case lid is open and earbuds are flashing.
No sound from one earbud	Low battery; Earbud not properly seated in case for charging; Connection issue.	Ensure both earbuds are charged; Place both earbuds back in case, close lid, then reopen; Re-pair with device.
ANC not working effectively	Improper fit; ANC not activated.	Adjust earbuds for a snug fit; Long press earbud to toggle ANC on.
Charging case not charging	Faulty cable/adaptor; Dirty charging port.	Try a different USB cable and power adapter; Clean charging port gently with a dry cotton swab.
Poor sound quality	Improper fit; Earbuds dirty; Source audio quality.	Adjust fit; Clean earbud grilles; Try different audio source.

Resetting the Earbuds

If you experience persistent issues, a factory reset may resolve them. The exact reset procedure can vary, but typically involves:

1. Place both earbuds back into the charging case.
2. Press and hold a button on the case or earbuds (refer to specific product instructions if available, otherwise try holding for 10-15 seconds) until the indicator lights flash rapidly or change color, signifying a reset.
3. Remove the earbuds from your device's Bluetooth paired list ("Forget Device").
4. Re-pair the earbuds as per the "Setup Guide" section.

PRODUCT SPECIFICATIONS

Model Name	TWS Wireless Earbuds (air31)
Brand	Generic
Noise Control	Active Noise Cancellation (ANC)

Connectivity Technology	True Wireless Stereo (Bluetooth)
Features	Waterproof, Microphone, Noise Cancelling
Ear Placement	In Ear
Form Factor	In Ear
Impedance	30 Ohm
Color	Black
Item Weight	0.15 Kilograms (5.3 ounces)
Package Dimensions	3.94 x 3.94 x 1.97 inches
Manufacturer	NAKI
Country of Origin	China
ASIN	B0DML3WFHS

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for warranty claims.

Manufacturer: NAKI

For further assistance, please visit the product page on Amazon.com or contact the seller "Alessio toys".

© 2024 Generic. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.