

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Toshiba](#) /

› [Toshiba Drum-Type Washer Dryer TW-127XP4L-W Instruction Manual](#)

Toshiba TW-127XP4L

Toshiba Drum-Type Washer Dryer TW-127XP4L-W Instruction Manual

Model: TW-127XP4L

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Toshiba Drum-Type Washer Dryer, model TW-127XP4L-W. Please read these instructions thoroughly before operating the appliance and retain them for future reference. This top-tier model features antibacterial Ultra Fine Bubble Wash EX technology, designed for superior cleaning performance and user convenience.

SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the appliance is installed on a stable, level surface.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry items that have been soiled with flammable substances.
- Always unplug the appliance before cleaning or performing maintenance.
- Refer to the child lock feature for enhanced safety around children.

SETUP

Proper installation is crucial for the performance and longevity of your washer dryer. Due to the appliance's weight (approximately 89 kg), professional assistance for installation is highly recommended.

Dimensions and Placement

- **Overall Dimensions (W x D x H):** 645 mm x 720 mm x 1060 mm (including water supply/drain hoses).
- **Weight:** Approximately 89 kg.
- **Installable Waterproof Pan:** The inner depth of the waterproof pan must be 520 mm or more.



Front view of the Toshiba TW-127XP4L-W washer dryer in a modern laundry room, illustrating its sleek design and placement.



Side view of the Toshiba TW-127XP4L-W washer dryer, demonstrating its depth and how it fits within a typical laundry space.

Water and Power Connection

Connect the water supply hose to a cold water tap and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Plug the power cord into a grounded 100V outlet.

OPERATING INSTRUCTIONS

Your Toshiba washer dryer offers advanced features for optimal laundry care.

Loading Laundry

- **Wash/Spin Capacity:** Up to 12 kg.
- **Wash-to-Dry/Dry Capacity:** Up to 7 kg.
- Do not overload the drum. Ensure items are evenly distributed.

Automatic Detergent and Softener Dispensing

The appliance automatically dispenses the appropriate amount of liquid detergent and softener based on the laundry load. This eliminates the need for manual measurement, preventing overuse and simplifying the washing process. Simply press the start button to begin.

Ultra Fine Bubble Wash EX

This feature transforms tap water into Ultra Fine Bubble water, which penetrates deep into fabric fibers to remove dirt and prevent yellowing and blackening. Microbubbles further enhance cleaning by capturing loosened dirt.



Visual comparison of standard tap water versus Ultra Fine Bubble water, illustrating the advanced cleaning technology.



Diagram showing the action of microbubbles and ultrafine bubbles penetrating and cleaning deep within fabric.




Internal view of the washing machine drum during operation, demonstrating the water flow and washing action.

Wash and Dry Programs

Select the appropriate program based on fabric type and desired outcome. The machine offers various cycles including hot water wash options.

Estimated Operating Times and Noise Levels

- **Washing Time:** Approximately 35 minutes.
- **Wash-to-Dry Time:** Approximately 96 minutes.
- **Eco Dry Time:** Approximately 205 minutes.
- **Operating Sound (Wash):** Approximately 32 dB.
- **Operating Sound (Spin):** Approximately 37 dB.
- **Operating Sound (Dry):** Approximately 48 dB (Eco Dry: Approximately 42 dB).

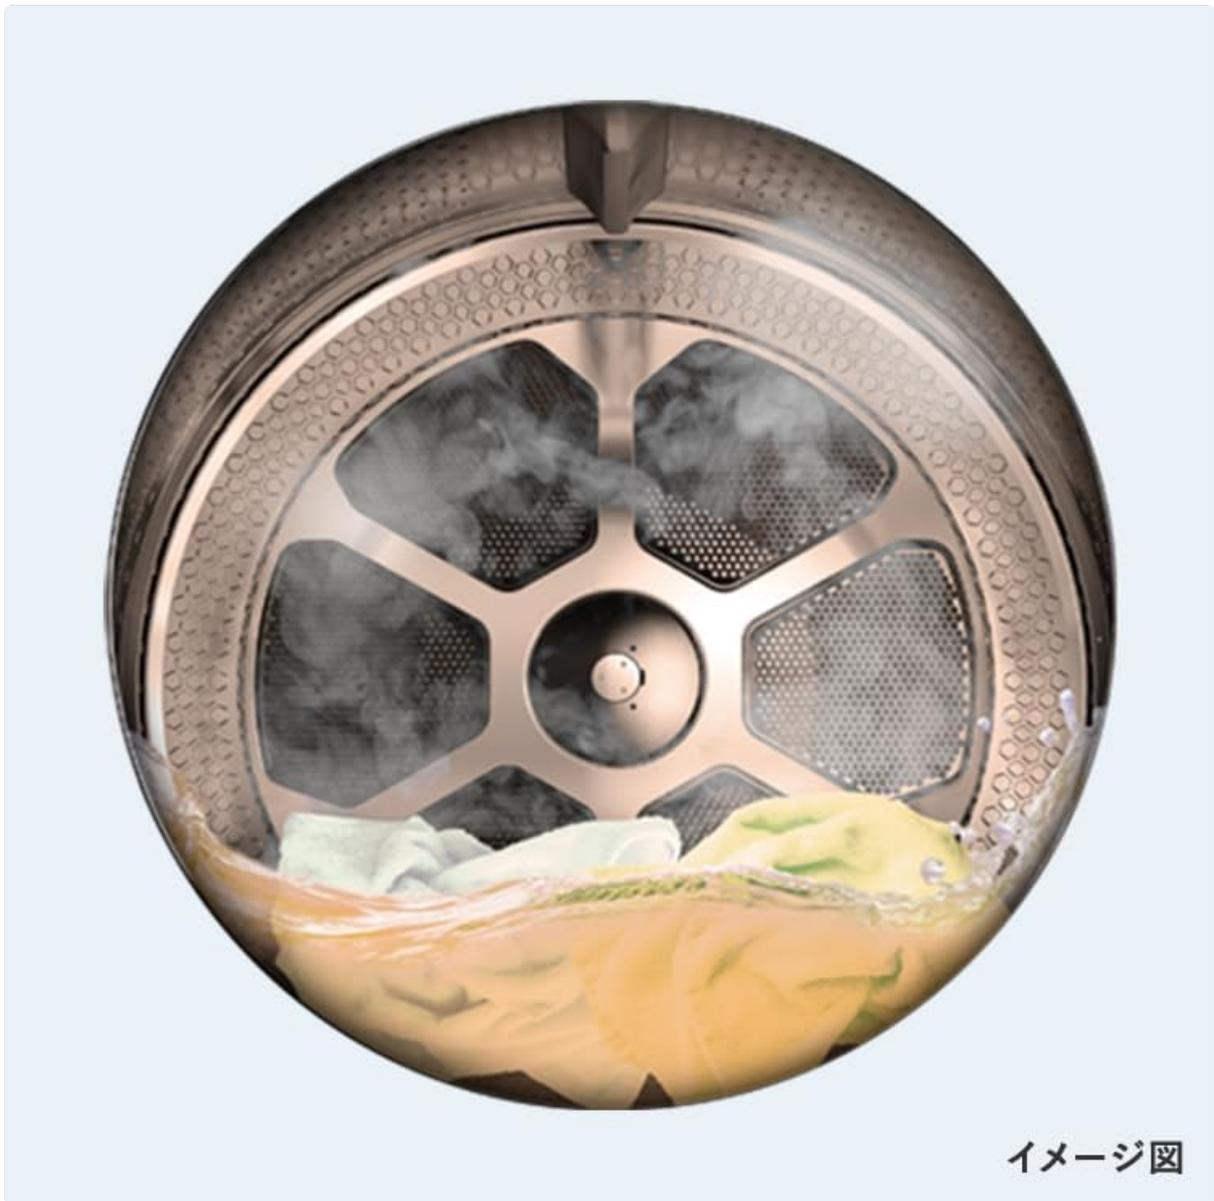

View inside the drum during the drying cycle, illustrating the steam and heat action for efficient drying.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

- **Drum Clean Function:** Utilize the built-in drum clean program regularly to prevent mold and odor buildup.
- **Filter Cleaning:** Clean the exhaust filter and drain filter periodically. The improved filter design simplifies this process.
- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Automatic Door Gasket Cleaning:** The door gasket is automatically cleaned to prevent dirt accumulation.



A stack of clean, fluffy towels, illustrating the soft finish achieved by the washer dryer.

TROUBLESHOOTING

If you encounter issues with your washer dryer, refer to the following common solutions:

- **Appliance does not start:** Check if the power cord is properly plugged in and the door is securely closed. Ensure the water supply is open.
- **Excessive vibration or noise:** Verify that the appliance is level and the transit bolts (if any) have been removed. Ensure the load is balanced.
- **Water leakage:** Check all hose connections for tightness. Ensure the drain hose is not kinked or blocked.
- **Clothes not drying properly:** Ensure the dryer filter is clean and the load size does not exceed the drying capacity.
- **Error codes:** Consult the full user manual for specific error code meanings and solutions. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Toshiba

Feature	Specification
Product Model Number	TW-127XP4L
Product Dimensions (W x D x H)	64.5 x 72 x 106 cm
Color	Grand White
Voltage	100 Volts
Operating Sound (Wash)	32 dB
Capacity (Wash)	12 kg
Capacity (Dry)	7 kg
Features	Inverter, Child Lock, Drum Clean, Vibration Reduction, Automatic Dispensing
Included Accessories	Water supply hose
Access Location	Front

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 1-year warranty from the date of delivery. The warranty is valid only for use within Japan.

Customer Support

For technical assistance, service requests, or further inquiries, please contact Toshiba customer support. Refer to the contact information provided in your purchase documentation or on the official Toshiba website.