

CATTOY

Generic Interactive Cat Toy Instruction Manual

MODEL: CATTOY

1. Product Overview

This manual provides instructions for the Generic Interactive Cat Toy, an automatic moving ball designed to engage indoor cats. It features USB recharging, two speed adjustments, and smart play modes to stimulate your cat's natural hunting instincts.

- Interactive movement with a replaceable tail for engaging play.
- Dual-speed adjustment (low/high) to match your cat's energy level.
- Smart and Normal play modes for customized interaction.
- USB rechargeable 150mAh battery for convenient power.
- Unique wave texture for unpredictable movement, enhancing curiosity.

2. Package Contents

Verify that all items are present in the package:

- 1 x Cat Toy Ball
- 1 x Type-C Charging Cable
- 1 x Replacement Tail

3. Product Specifications

Feature	Specification
Size	50mm diameter (approx. 2 x 2 x 2 inches)
Material	ABS, Silicone
Weight	40g (1.41 ounces)
Battery Capacity	150mAh Lithium Battery
Model Name	CATTOY6137
Item Model Number	CATTOY
Manufacturer	Generic

4. Initial Setup

4.1 Charging the Device

Before first use, fully charge the cat toy. Connect the included Type-C cable to the charging port on the toy and to a standard USB power source. The indicator light will show charging status and turn off when fully charged. A full charge provides approximately 90 minutes of playtime.

Type-C charging



Figure 4.1: Connect the Type-C cable to the charging port for power.

4.2 Attaching the Tail

Insert the provided tail into the designated slot on the toy. Ensure it is securely attached. The toy comes with a replaceable tail. Gently push the tail into the opening until it clicks into place.



Figure 4.2: The cat toy with its attached tail, ready for play.

5. Operating Your Cat Toy

5.1 Power On/Off

Press and hold the power button for approximately 3 seconds to turn the toy on or off.


5.2 Switching Modes (Normal/Smart)

In the startup state, long press the power button to switch between the two available play modes:

- **Normal Mode:** The green indicator light stays on for 3 seconds. The toy then runs for 5 minutes and automatically turns off.
- **Smart Mode:** The blue indicator light stays on for 3 seconds. The toy then enters standby mode for five minutes and activates when touched by a cat.

Two modes, one-button switch

In the startup state, long press the power button to switch modes

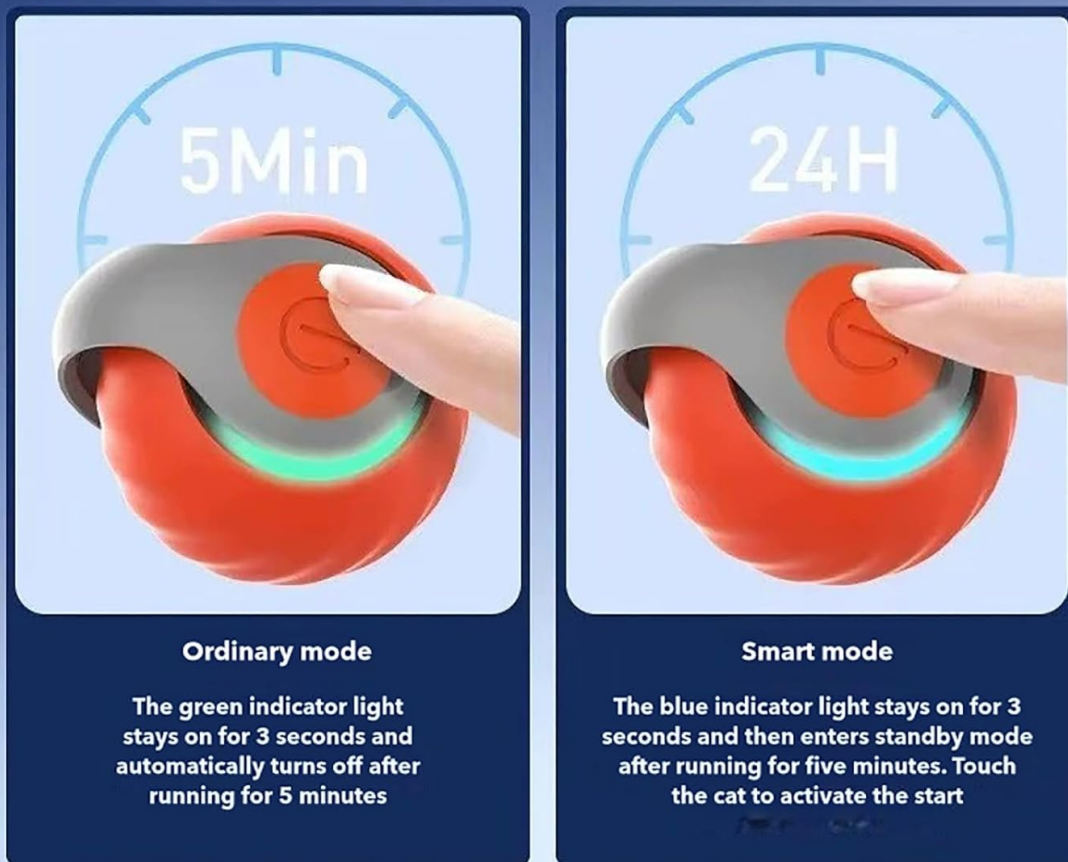

Shutdown: switch to standard mode short press the switch key to shut down

Figure 5.1: Understand the two operational modes: Normal for continuous play and Smart for interactive, touch-activated play.

5.3 Adjusting Speed

After turning the toy on, short press the power button to cycle between low and high speeds. This allows you to match the toy's movement to your cat's activity level.



Figure 5.2: Press the power button briefly to switch between low and high speed settings.

5.4 Playtime Engagement

The toy's wave texture and random movements are designed to keep your cat engaged by mimicking prey. It can operate on various surfaces, including carpets, providing versatile play environments.



Random running
Repeated pulling

A variety of motion states are randomly triggered
to continuously attract the cat's attention

Figure 5.3: The toy moves unpredictably, stimulating your cat's hunting instincts.

flexible rolling
Can also be played on carpet



Figure 5.4: Designed to roll flexibly, the toy can be used on both hard floors and carpets.

6. Care and Maintenance

- **Cleaning:** Wipe the toy with a dry or slightly damp cloth. Do not immerse the toy in water or use harsh cleaning agents.
- **Tail Replacement:** If the tail becomes worn or damaged, gently pull it out from the slot and insert a new one. Ensure the new tail is securely fastened.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.

7. Troubleshooting Guide

Problem	Possible Solution
Toy does not turn on.	Ensure the battery is charged. Connect to a Type-C charger and allow sufficient charging time.
Toy stops moving unexpectedly.	Check battery level. In Normal Mode, it automatically turns off after 5 minutes. In Smart Mode, it enters standby and requires a touch to reactivate.
Toy gets stuck frequently.	The toy's random movement may cause it to get stuck under furniture. Monitor playtime, especially in cluttered areas.
Tail detaches or breaks easily.	Ensure the tail is securely inserted. Replace with a new tail if damaged.

8. Important Safety Information

- This product is intended for pet use only.
- Supervise your pet during play to prevent ingestion of parts.
- Inspect the toy regularly for damage. Discontinue use if any part becomes loose or broken.
- Keep away from water and extreme temperatures.
- Do not attempt to disassemble or repair the toy yourself.
- Exercise caution with long-haired cats, as fur may become entangled in the spinning mechanism. Monitor closely during use.

9. Warranty and Customer Support

The product's warranty information is not explicitly provided in the specifications. For any issues or support, please contact the seller directly through the Amazon platform where the purchase was made.