



Manuals.plus /

› INFANS /

› INFANS Baby Activity Center User Manual - Model BC10264

INFANS BC10264

INFANS Baby Activity Center User Manual

Model: BC10264

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your INFANS Baby Activity Center. Please read all instructions carefully before use and retain this manual for future reference. This activity center is designed to provide a secure and stimulating environment for infants aged 6-12 months, with a maximum weight capacity of 26 lbs (11.79 kg) and a maximum height of 30 inches.



Image 1.1: The INFANS Baby Activity Center, providing a safe play space for infants.

2. PRODUCT FEATURES

- **3-in-1 Design:** Functions as a baby bouncer, activity center, and play table.
- **Interactive Toys:** Includes 10 diverse toys such as plush hanging toys (monkey, giraffe, leopard, cloud-shaped), a roller, teeter-totter, bead game, and a music tray with lights.
- **360° Rotating Seat:** Allows the baby to easily access all surrounding toys and activities.
- **3 Adjustable Heights:** Accommodates growing infants with seat positions at 17.5", 19.5", and 21" from the floor.
- **Bouncy Foot Mat:** Features a crinkly mat that produces sound when jumped on, stimulating tactile development.
- **Safety & Stability:** Constructed with a sturdy metal frame, strong springs for gentle bouncing, and anti-slip footpads.
- **Easy to Clean:** Removable and machine-washable seat pad and footpad for convenient maintenance.
- **Certified Safe:** Compliant with US CPSIA and ASTM requirements, made from non-toxic materials (BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde-free).

VARIOUS TOYS ATTRACT BABY'S ATTENTION

Safe & non-toxic materials, baby can play with peace of mind.



Image 2.1: Detail of the various interactive toys designed to engage infants.

360° ROTATING SEAT

Allow baby to play with all toys easily



Soft & Breathable Seat

Image 2.2: The 360-degree rotating seat allows full access to all activities.

3. PARTS LIST

Before assembly, ensure all components are present and undamaged. If any parts are missing or damaged, do not use the product and contact customer support.

- Main Activity Center Frame (Base and Upper Tray)
- Adjustable Height Legs (3 sections per leg)
- 360° Rotating Seat with Fabric Seat Pad
- Bouncy Foot Mat
- Hanging Toy Arches (3 pieces)
- Plush Hanging Toys (e.g., monkey, giraffe, leopard, cloud-shaped)
- Activity Table Toys (e.g., roller, teeter-totter, bead game, music tray with lights, mirror)
- User Guide

4. SETUP INSTRUCTIONS

Follow these steps for proper assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts against the Parts List.
2. **Assemble the Frame:** Connect the adjustable height legs to the main activity center base and upper tray. Ensure all connections click securely into place.
3. **Attach the Foot Mat:** Secure the bouncy foot mat to the designated area on the base.
4. **Install the Seat:** Place the 360° rotating seat into the central opening of the upper tray. Ensure it is properly seated and can rotate freely. Attach the fabric seat pad to the seat.
5. **Attach Toy Arches:** Insert the three hanging toy arches into their respective slots on the upper tray.
6. **Place Interactive Toys:** Securely attach the plush hanging toys to the arches and place the activity table toys onto the tray. Ensure the music tray is correctly positioned.
7. **Install Batteries (Music Tray):** The music tray requires 3 AAA batteries (not included). Open the battery compartment, insert the batteries with correct polarity, and close the compartment securely.



Image 4.1: The activity center can be used as a bouncer or an infant activity center.

5. OPERATING INSTRUCTIONS

1. **Placing Your Baby:** Gently place your baby into the 360° rotating seat. Ensure their feet can comfortably touch the bouncy foot mat.
2. **Adjusting Height:** To adjust the height, locate the buckle under the play table (as shown in Image 5.1). Press the release buttons and slide the legs to one of the three available height positions (17.5", 19.5", 21"). Ensure all legs are locked into the same height position before placing your baby in the activity center.
3. **Using the Rotating Seat:** The seat is designed to rotate 360 degrees, allowing your baby to turn and interact with all the toys around the activity tray.
4. **Engaging with Toys:** Encourage your baby to reach, grasp, and play with the various interactive toys. The music tray will play sounds and light up when activated.
5. **Bouncing Action:** The sturdy frame and springs allow for safe bouncing, which helps develop leg muscles.



Image 5.1: The height adjustment buckle located beneath the seat.

BOUNCY CRINKLY MAT ADDS FUN



The mat makes a 'rustling' sound when jumped on, developing a child's sense of touch.



Image 5.2: The bouncy crinkly mat adds an auditory element to playtime.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and hygiene of your activity center.

- **Seat Pad & Foot Mat:** The fabric seat pad and bouncy foot mat are removable and machine washable. Use a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.
- **Plastic Components:** Wipe down all plastic surfaces, including the tray, frame, and toys, with a damp cloth and mild soap. Rinse thoroughly and dry completely.
- **Hanging Toys:** The plush hanging toys can be removed and wiped clean with a damp cloth.
- **Battery Compartment:** Periodically check the music tray's battery compartment for corrosion. Replace batteries as needed.
- **Inspection:** Regularly inspect the activity center for any loose screws, worn parts, or damage. Do not use the product if any part is compromised.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Music tray not working.	Dead or incorrectly installed batteries.	Check battery polarity and replace with new AAA batteries.
Seat not rotating smoothly.	Obstruction under the seat or improper installation.	Remove baby, inspect for obstructions, and re-install the seat ensuring it clicks into place.
Height adjustment is difficult or not locking.	Buckle not fully engaged or mechanism is dirty.	Ensure the buckle is pressed firmly until it locks. Clean the adjustment mechanism if necessary.
Toys fall off easily.	Toys not securely attached.	Ensure all toys are firmly clipped or inserted into their designated slots.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	34.5" x 34.5" x 37" (87.63 x 87.63 x 93.98 cm)
Net Weight	13 Lbs (5.9 kg)
Weight Capacity	26 Lbs (11.79 kg)
Height Limit	Under 30 inches
Applicable Age	6-12 Months
Height from Table to Floor	17.5", 19.5", 21" (Adjustable)
Material	Metal, PP, Lint (Fabric), Springs, Foam
Batteries Required	3 x AAA (for music tray, not included)
Color	Blue
Manufacturer Reference	BC10264

PRODUCT DIMENSION

Weight Capacity: 26 Lbs

Height Limit: Under 30"

Applicable Age: 6-12 Monthes

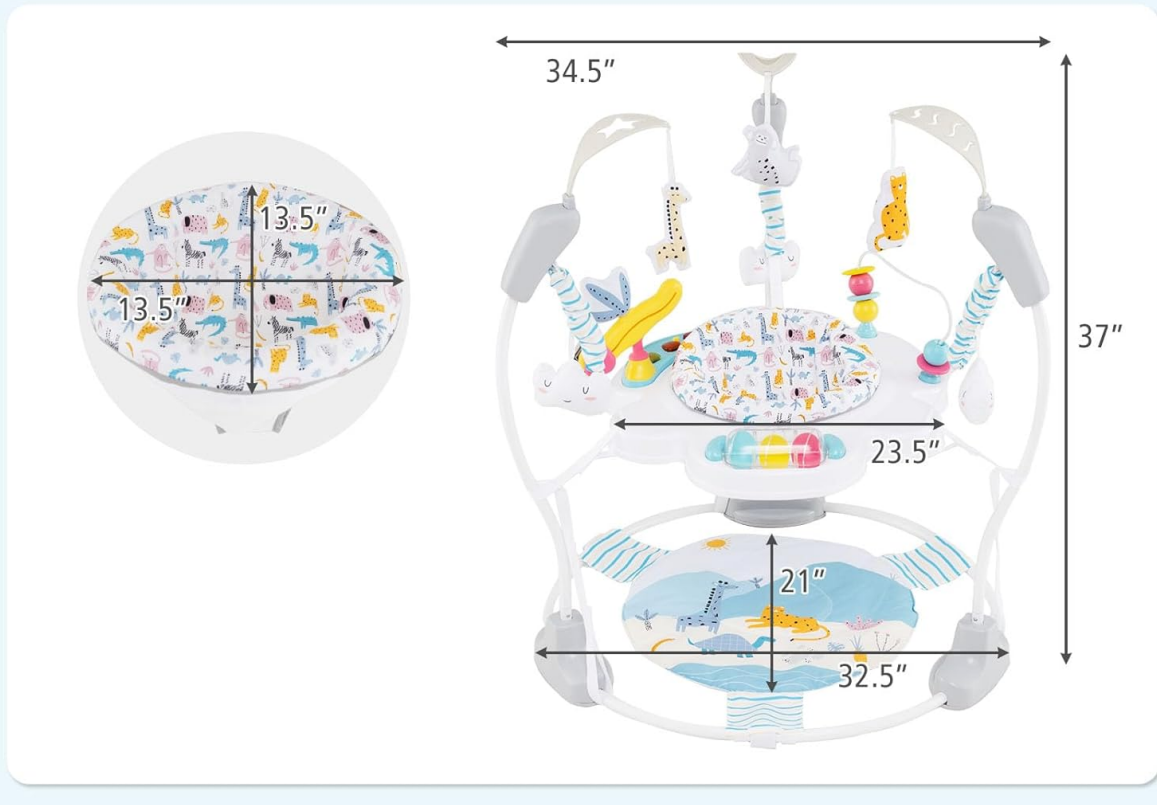


Image 8.1: Key product dimensions and specifications.

9. SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always keep the child in view while in the product.
- Never leave child unattended.
- Discontinue use when child can walk unassisted, climb out, or reaches 30 inches in height or 26 lbs in weight, whichever comes first.
- Place the activity center on a flat, level surface. Never use on elevated surfaces.
- Keep the product away from stairs, steps, uneven surfaces, and heat sources.
- Ensure all parts are correctly assembled and securely fastened before each use.
- Do not use the product if it is damaged or broken.
- Adult assembly required.
- This product is not intended for prolonged periods of sleep.
- Batteries should be kept out of reach of children. Do not mix old and new batteries.

SAFETY DESIGN



Anti-slip Bottom Pads



Stable Base Connectors



Premium Metal Frame



Hook & Loop Fasten

Image 9.1: Key safety design elements of the activity center.

10. WARRANTY AND SUPPORT

INFANS products are manufactured to high-quality standards. For warranty information, product support, or to report any issues, please refer to the contact details provided with your purchase documentation or visit the official INFANS website. Please have your model number (BC10264) and purchase date available when contacting support.