

vidaXL 860459

vidaXL Gray Sonoma Engineered Wood Rectangular Desk Instruction Manual

Model: 860459

[Introduction](#) [Safety Information](#) [Setup & Assembly](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your vidaXL Gray Sonoma Engineered Wood Rectangular Desk (Model 860459). Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product. This desk is designed to be a practical addition to your living or working space, offering a stable and spacious surface for various activities.



Image 1.1: The vidaXL Gray Sonoma Engineered Wood Rectangular Desk in a modern room setting, showcasing its design and functionality with a laptop placed on top.

2. SAFETY INFORMATION

Important Safety Warning: To prevent tipping over, this product **must** be used with the provided wall fixture. Failure to secure the desk to a wall can result in serious injury or damage. Always ensure the desk is placed on a flat, stable surface.

- Keep all assembly hardware out of reach of children.
- Do not stand or sit on the desk.
- Do not overload the desk with excessive weight.
- Regularly check all connections and fasteners to ensure they remain tight.

3. SETUP & ASSEMBLY

Assembly is required for this desk. Please follow these general steps. Refer to the included assembly diagram for specific part identification and sequence.

3.1. Package Contents

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desk Top Panel
- Side Panels (2)
- Support Bar
- Assembly Hardware (screws, dowels, wall fixture kit)
- Assembly Instructions (this document)

3.2. Assembly Steps

1. **Prepare Workspace:** Clear a spacious, clean, and flat area for assembly. Lay out all components and hardware.
2. **Attach Side Panels:** Secure the side panels to the desk top panel using the provided hardware. Ensure all connections are snug but do not overtighten.
3. **Install Support Bar:** Attach the horizontal support bar between the two side panels at the designated height. This provides additional stability.
4. **Final Checks:** Once assembled, gently lift and move the desk to its desired location. Ensure it is stable and level.
5. **Secure with Wall Fixture:** *This step is crucial for safety.* Using the provided wall fixture kit, secure the desk to a sturdy wall. Follow the specific instructions included with the wall fixture for proper installation based on your wall type.

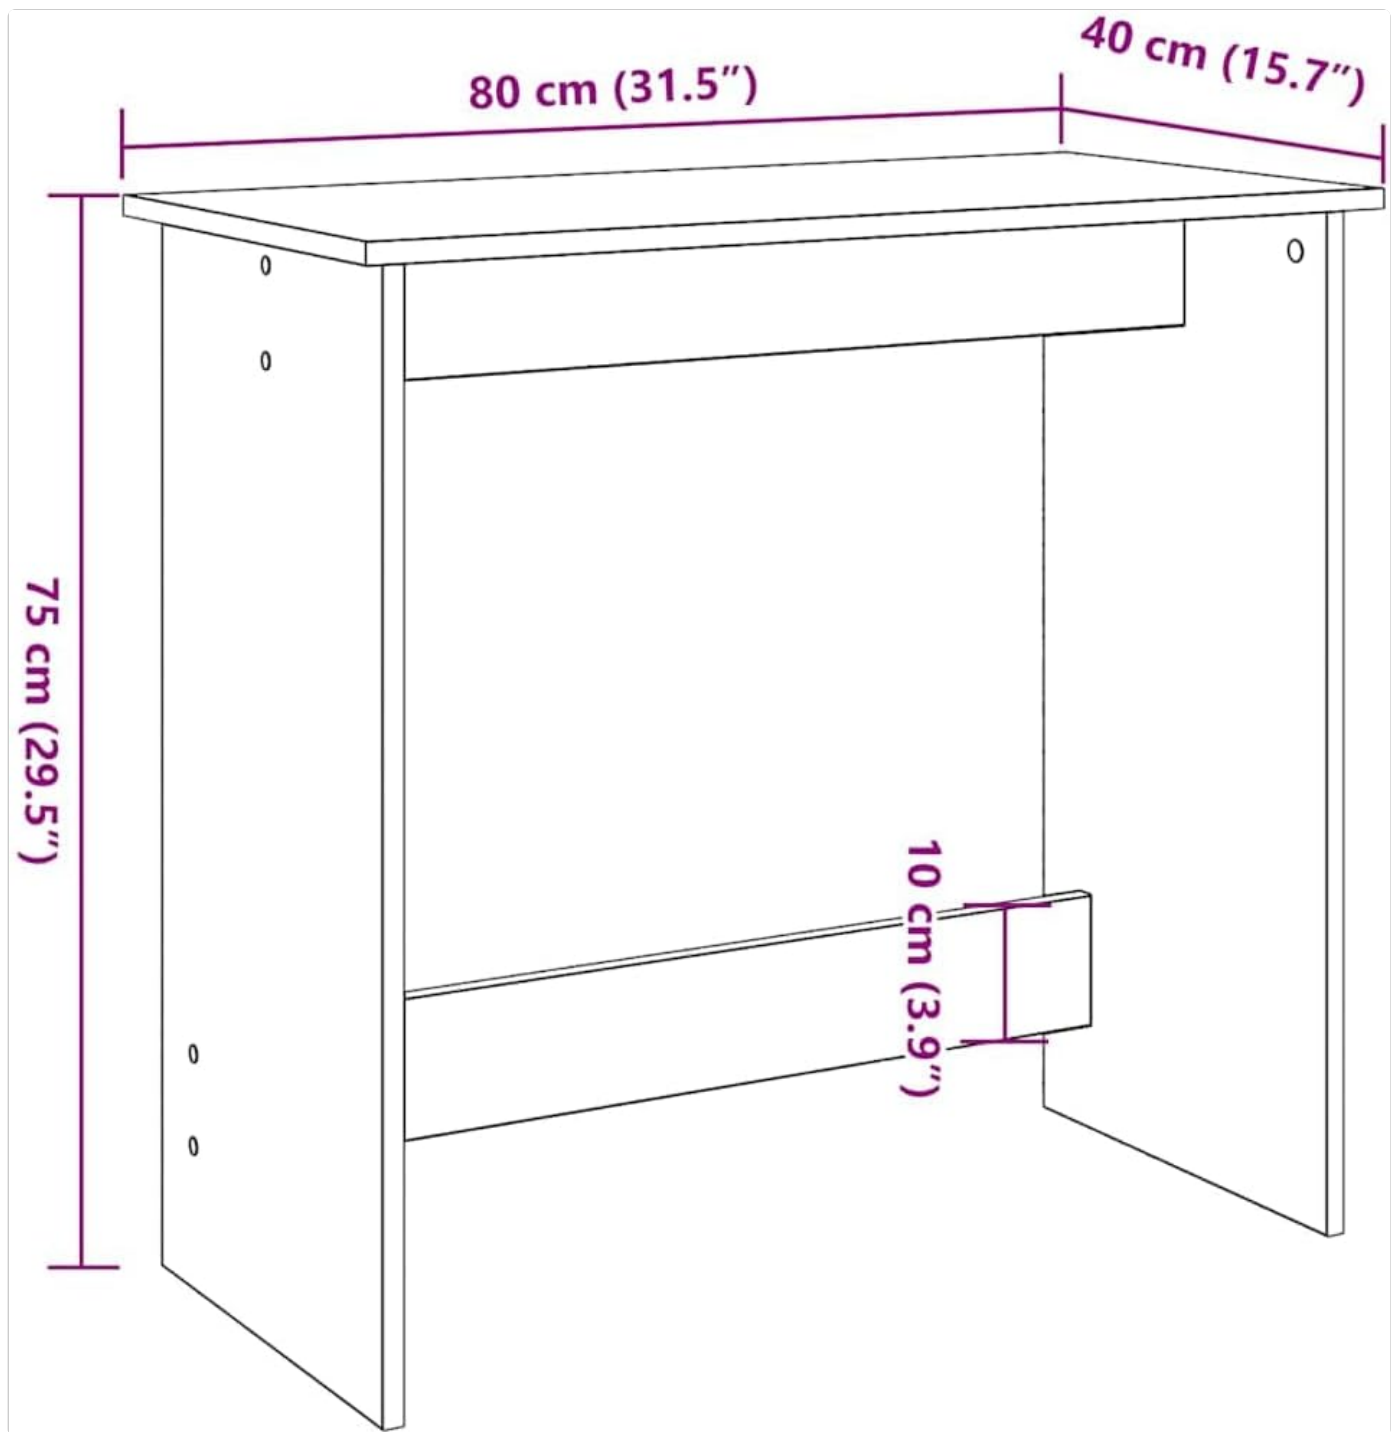


Image 3.1: Dimensional diagram of the desk, illustrating its length (80 cm / 31.5"), width (40 cm / 15.7"), and height (75 cm / 29.5").

4. OPERATING INSTRUCTIONS

The vidaXL Rectangular Desk is designed for general use as a workspace. Place your computer, writing materials, and other necessities on the spacious tabletop. Ensure weight is distributed evenly to maintain stability.

- Use coasters under drinks to prevent moisture damage.
- Avoid placing hot items directly on the surface without protection.
- Do not drag heavy objects across the desk surface to prevent scratches.

5. MAINTENANCE

Proper care will extend the life and appearance of your desk.

5.1. Cleaning

Thanks to its smooth surface, the desk is easy to clean. Wipe the surface with a damp cloth. For stubborn marks, a mild, non-abrasive cleaner can be used, followed by wiping with a dry cloth. Avoid harsh chemicals or abrasive cleaning materials, as these can damage the engineered wood finish.

5.2. General Care

- Periodically check all screws and fasteners and tighten them if necessary to maintain structural integrity.
- Avoid prolonged exposure to direct sunlight or extreme temperature changes, which can cause material degradation.
- Protect the surface from sharp objects to prevent scratches.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose fasteners; uneven floor; not secured to wall.	Check and tighten all screws. Ensure the desk is on a level surface. Verify the wall fixture is properly installed and secured.
Parts do not fit during assembly.	Incorrect orientation of parts; wrong hardware used.	Review the assembly instructions and diagrams carefully. Ensure parts are oriented correctly. Use the correct hardware for each step.
Surface scratches or damage.	Sharp objects; abrasive cleaning.	Use protective mats or coasters. Avoid dragging items. Use only soft cloths and mild cleaners.

7. SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model Number	860459
Color	Sonoma Grey
Material	Engineered Wood (Chipboard)
Overall Dimensions (L x W x H)	80 x 40 x 75 cm (31.5" x 15.75" x 29.53")
Weight	11.3 Kilograms
Assembly Required	Yes
Finish Type	Varnished
Recommended Uses	Working, Writing, Study



Image 7.1: Front view of the vidaXL desk, highlighting its simple and functional design.

8. WARRANTY & SUPPORT

8.1. Warranty Information

vidaXL products are manufactured to high-quality standards. For specific warranty details regarding your vidaXL Gray Sonoma Engineered Wood Rectangular Desk, please refer to the warranty card included with your purchase or visit the official vidaXL website. Keep your proof of purchase for any warranty claims.

8.2. Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact vidaXL customer support. You can typically find contact information on the vidaXL website or on your purchase documentation.

- **Online Support:** Visit the official [vidaXL website](#) for FAQs and contact forms.
- **Brand Store:** Explore more products and information at the [vidaXL Amazon Store](#).

