

INFANS B0DMN41YT6

INFANS Baby Activity Center User Manual

Model: B0DMN41YT6

Brand: INFANS

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your INFANS Baby Activity Center. This multi-functional activity center offers a secure and engaging environment for babies aged 6-12 months, supporting their development through interactive play.



Image 1.1: The INFANS Baby Activity Center, featuring a pink color scheme, a central rotating seat, and multiple interactive toys suspended around the perimeter.

The activity center is designed to encourage hand-eye coordination and motor skills development through a variety of toys and a 360-degree rotating seat. It features adjustable heights to accommodate growing infants and is constructed with easy-to-clean materials for convenient maintenance.

FREE PARENTS' HANDS

Let the baby immerse in their own little world!



Image 1.2: A baby seated in the activity center, engaging with the toys, demonstrating how the product provides an engaging play space for infants.

2. SAFETY INFORMATION

WARNING: Please read and understand all instructions before assembly and use. Failure to follow these instructions could result in serious injury.

- Always use under direct parental supervision. Never leave a child unattended in the activity center.
- Ensure the child can hold their head up unassisted before placing them in the activity center.
- Do not use for children under 6 months or over 12 months of age.
- Do not exceed the maximum weight capacity of 26 lbs (11.8 kg) or a height of 30 inches (76 cm).
- Regularly inspect the activity center for loose parts, damaged components, or sharp edges. Discontinue use if any damage is found.
- Keep the activity center away from stairs, heat sources, and electrical cords.
- This product complies with US CPSIA and ASTM Requirements, made from non-toxic materials, free from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- 1 x Baby Bouncer Activity Center (main frame, seat, footpad, activity table)
- Interactive Toys (6 plush hanging toys, roller, teeter-totter, bead game, music tray with lights)
- 1 x User Guide

4. FEATURES

- **Multi-functional Design:** Provides a secure space for jumping and interactive play, suitable for babies 6-12 months.
- **360° Rotating Seat:** Allows the infant to easily access all surrounding toys and observe the environment from various angles.
- **10 Interactive Toys:** Includes 6 plush hanging toys (monkey, giraffe, leopard, 3 cloud-shaped) that make sounds when squeezed, a roller, a teeter-totter, a bead game, a music tray with lights, and a rustling footpad.
- **3 Adjustable Heights:** Seat positions at 17.5", 19.5", and 21" from the ground to accommodate babies under 30" in height.
- **Stable & Safe Bouncing Structure:** Features a sturdy metal frame, strong springs for gentle bouncing, and anti-slip footpads for enhanced safety.
- **Easy to Disassemble & Clean:** Removable plush toys for wiping, and machine washable seat pad and footpad.

MULTIFUNCTIONAL BABY ACTIVITY CENTER



Image 4.1: The multi-functional design of the activity center, shown with two infants demonstrating its use as both a bouncer and an infant activity center.

5. SETUP AND ASSEMBLY

The INFANS Baby Activity Center is designed for straightforward assembly. Refer to the included User Guide for detailed, step-by-step instructions and diagrams. Ensure all parts are securely fastened before use.

1. Unpack all components and verify against the package contents list.
2. Assemble the main frame according to the instructions, ensuring all connections are firm.
3. Attach the activity table and secure the seat into position.
4. Install the interactive toys onto the designated areas.
5. Insert 3 AAA batteries (not included) into the music tray if desired.

6. OPERATING INSTRUCTIONS

6.1 Placing Your Baby

Gently place your baby into the fabric seat, ensuring their feet can comfortably touch the footpad or the

floor, depending on the height setting.

6.2 Adjusting Height

The activity center features 3 adjustable height positions. To adjust, locate the buckle under the play table. Press the buckle and slide the seat mechanism to the desired height level (17.5", 19.5", or 21" from the floor). Ensure both sides are adjusted evenly and securely locked into place.



Image 6.1: Illustration of the three adjustable height settings (17.5", 19.5", 21") and the buckle mechanism for adjustment, ensuring proper leg positioning for the baby.

6.3 Using the 360° Rotating Seat

The seat is designed to rotate freely, allowing your baby to turn and interact with all the toys around the activity table. Encourage your baby to explore by gently rotating the seat or letting them turn themselves.

360° ROTATING SEAT

Allow baby to play with all toys easily



Soft & Breathable Seat

Image 6.2: An overhead view highlighting the 360-degree rotating seat and its soft, breathable fabric, designed for easy access to all toys.

6.4 Engaging with Interactive Toys

The activity center includes various toys to stimulate your baby:

- **Hanging Plush Toys:** Encourage reaching and grasping. Some toys make sounds when squeezed.
- **Music Tray with Lights:** Requires 3 AAA batteries (not included). Press buttons to activate music and lights.
- **Roller, Teeter-Totter, Bead Game:** Provide tactile and visual stimulation.
- **Rustling Footpad:** The mat makes a crinkly sound when jumped on, developing a child's sense of touch.

VARIOUS TOYS ATTRACT BABY'S ATTENTION

Safe & non-toxic materials, baby can play with peace of mind.



Image 6.3: A detailed view of the various interactive toys, including hanging plush animals, a music tray, and other sensory elements, designed to attract a baby's attention.

BOUNCY CRINKLY MAT ADDS FUN



The mat makes a 'rustling' sound when jumped on, developing a child's sense of touch.



Image 6.4: A close-up of a baby's feet on the bouncy crinkly mat, illustrating how the mat produces a 'rustling' sound to engage the baby's sense of touch.

7. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and hygiene of your activity center.

- **Seat Pad and Footpad:** These are removable and machine washable. Use a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.
- **Plastic Components:** Wipe down plastic surfaces, including the activity table and toy attachments, with a damp cloth and mild soap. Rinse thoroughly and dry completely.
- **Plush Toys:** The 3 plush toys at the top of the hanging bars can be removed for wiping with a damp cloth.
- **Frame:** Wipe the metal frame with a damp cloth as needed.

EASY TO CLEAN



Image 7.1: Visual guide demonstrating how to wipe clean the activity table and machine wash the removable seat cushion, highlighting the ease of maintenance.

8. TROUBLESHOOTING

If you encounter any issues with your INFANS Baby Activity Center, please refer to the following common solutions:

- **Music Tray Not Working:** Ensure 3 new AAA batteries are correctly installed. Check for proper battery orientation.
- **Seat Not Rotating Smoothly:** Check for any obstructions under the seat. Ensure the seat is correctly installed and not misaligned.
- **Height Adjustment Issues:** Verify that the buckle mechanism is fully disengaged before attempting to adjust. Ensure both sides are adjusted simultaneously and lock into place.
- **Unstable Frame:** Recheck all assembly connections to ensure they are tight and secure. Ensure the activity center is placed on a flat, level surface.

For issues not covered here, please contact INFANS customer support.

9. SPECIFICATIONS

Attribute	Specification
Product Dimensions (L x W x H)	34.5" x 34.5" x 37"
Height Limit	30"
Weight Capacity	26 Lbs (11.8 kg)
Applicable Age	6-12 Months
Height from Table to Floor	17.5", 19.5", 21" (3 adjustable levels)
Foot Pad Diameter	21"
Table Diameter	23.5"
Seat Diameter	13.5"
Base Diameter	31.5"
Materials	Metal, PP, Lint, Cloth, Iron
Item Weight	13 pounds (5.9 kg)

PRODUCT DIMENSION

Weight Capacity: 26 Lbs

Height Limit: Under 30"

Applicable Age: 6-12 Monthes

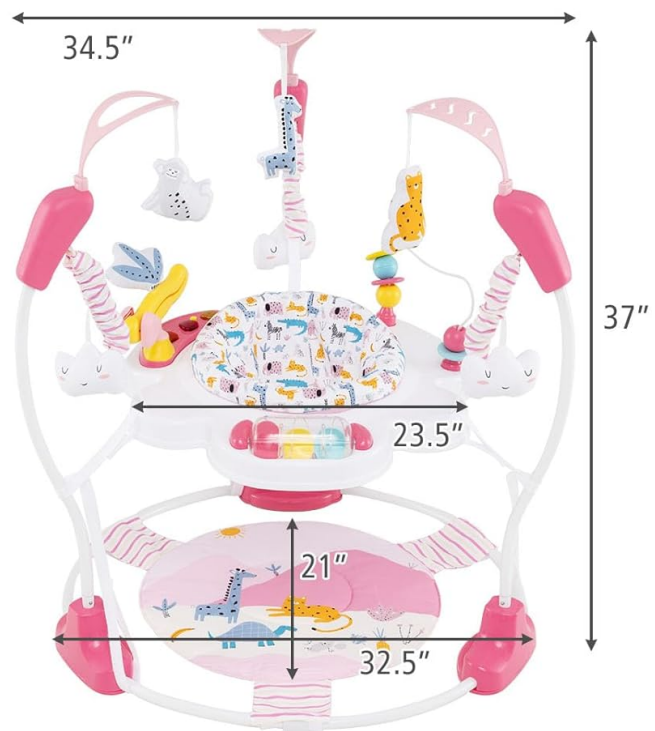


Image 9.1: A detailed diagram illustrating the key dimensions of the INFANS Baby Activity Center, including height, width, and various component diameters.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official INFANS website. Keep your proof of purchase for any warranty claims.

© 2025 INFANS. All rights reserved.