

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ROBUD](#) /

› [ROBUD Wooden Play Kitchen Set User Manual](#)

## ROBUD RB-VC3-WCF09

# ROBUD Wooden Play Kitchen Set User Manual

Model: RB-VC3-WCF09

Brand: ROBUD

## 1. INTRODUCTION

Thank you for choosing the ROBUD Wooden Play Kitchen Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Designed for imaginative play, this set encourages creativity and learning in children aged 3 and up.

### Safety Information

Suitable for children ages 3 and up. Assembly and use under adult supervision recommended to avoid choking hazards. Ensure all parts are securely fastened before play. Regularly inspect the toy for any loose or damaged components.

### What's in the Box

- Wooden Play Kitchen Set components
- Assembly hardware (screws, dowels, etc.)
- Instruction manual (this document)
- Various play accessories (e.g., spice jars, eggplant, carrot, radish, spoon, pasta fork, spatula, pot, pan, fruit basket, lid)

## 2. PRODUCT OVERVIEW AND COMPONENTS

The ROBUD Wooden Play Kitchen Set is designed to mimic a real kitchen, providing a rich environment for pretend play. It includes a variety of interactive features and accessories.



Figure 2.1: Full view of the ROBUD Wooden Play Kitchen Set, showcasing its vintage style and golden faucet.



Figure 2.2: Key components of the play kitchen, including the storage shelf, sink, roaster oven, kitchen utensils, stove, and storage cabinet.

# Kitchen accessories



Spice jar \*2




Eggplant \*1



Carrot \*1



Radish \*1

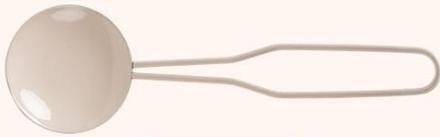

Spoon \*1



Pot \*1



Pan \*1



Pasta Fork \*1



Fruit Basket \*1




Spatula \*1



Lid \*1

Figure 2.3: A display of the various kitchen accessories included with the set, such as spice jars, play vegetables, pots, pans, and utensils.

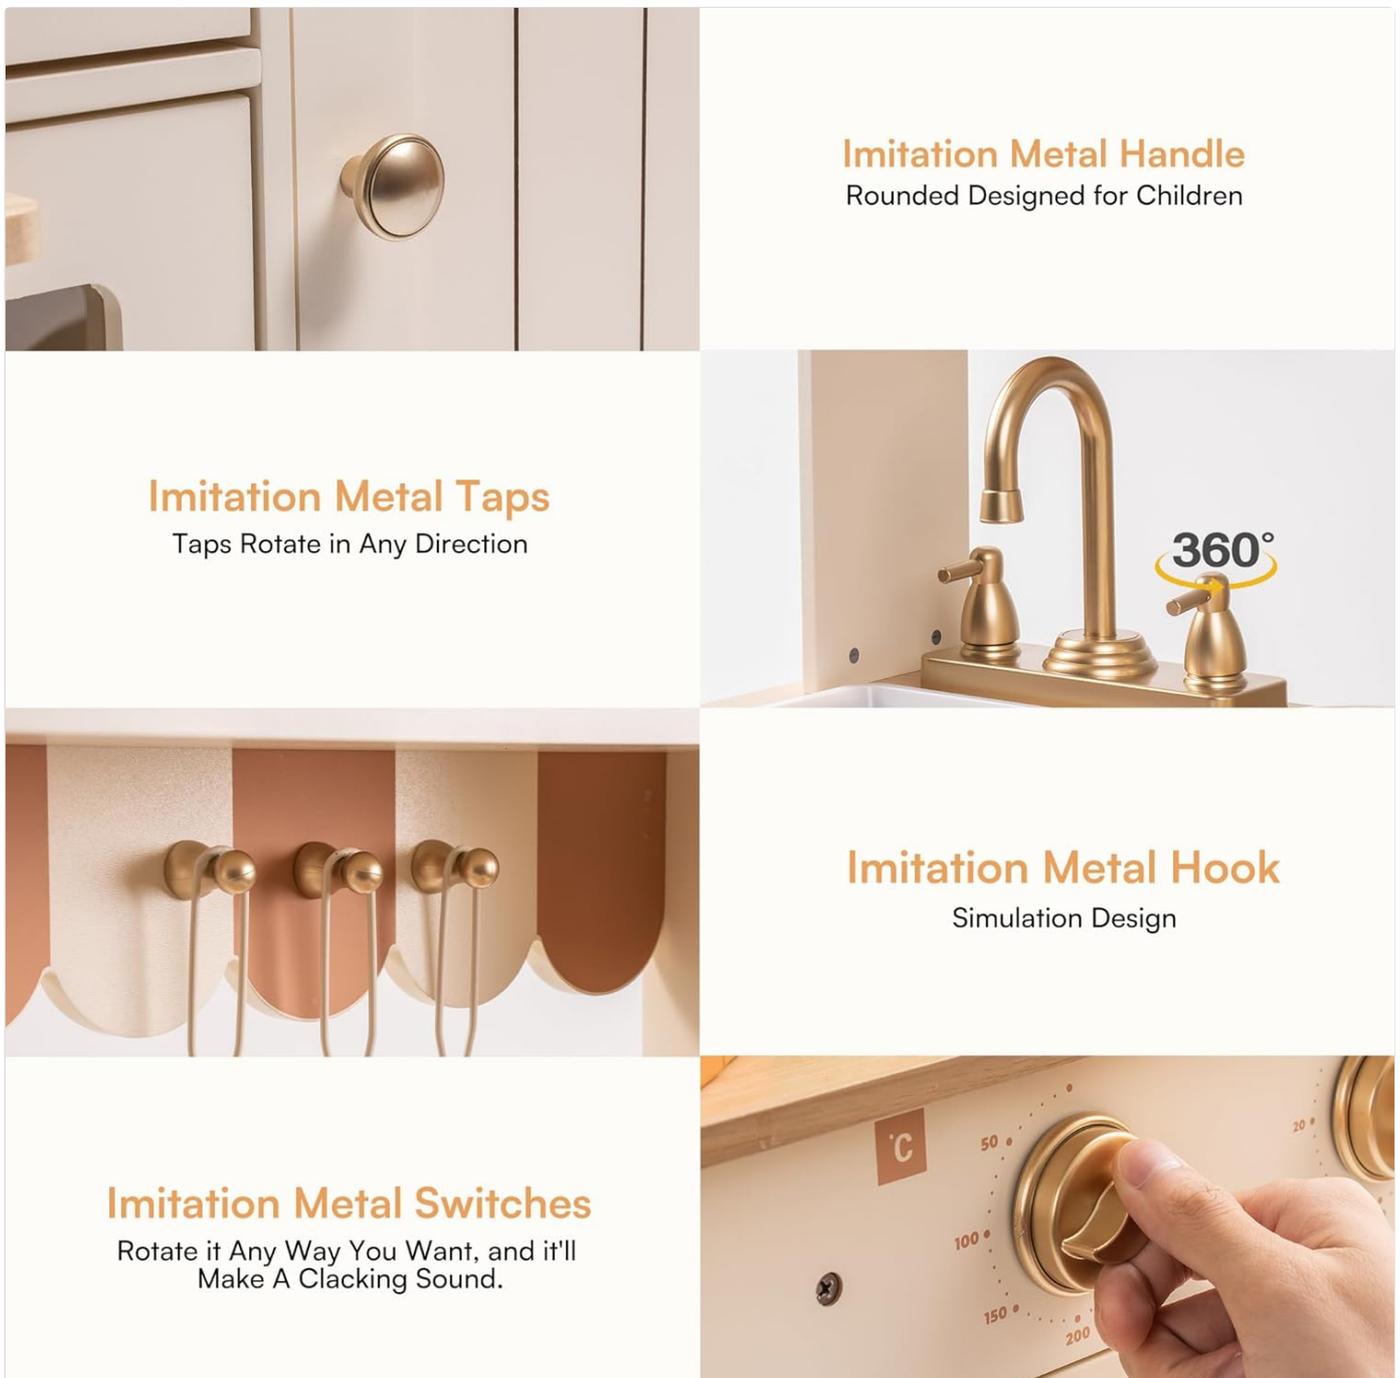

### Imitation Metal Handle

Rounded Designed for Children

### Imitation Metal Taps

Taps Rotate in Any Direction

### Imitation Metal Hook

Simulation Design

### Imitation Metal Switches

Rotate it Any Way You Want, and it'll Make A Clacking Sound.

Figure 2.4: Detailed view of interactive elements like imitation metal handles, taps that rotate, metal hooks for utensils, and switches that make a clacking sound.

The play kitchen features a realistic sink with a golden faucet, an oven with a clear window, a stove with rotating knobs, and ample storage cabinets. It also comes with a variety of wooden play food and utensils to enhance the play experience.

## 3. SETUP AND ASSEMBLY

Assembly of the ROBUD Wooden Play Kitchen Set is required. Please follow the step-by-step instructions provided in the separate assembly manual included in the packaging. Ensure you have all components listed in the "What's in the Box" section before beginning assembly.

- **Tools Required:** A Phillips head screwdriver is typically needed for assembly.
- **Assembly Area:** Choose a clear, spacious area for assembly to prevent loss of small parts.
- **Adult Supervision:** Assembly should be performed by an adult. Keep small parts away from young children during assembly.
- **Secure Fasteners:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the

wood.

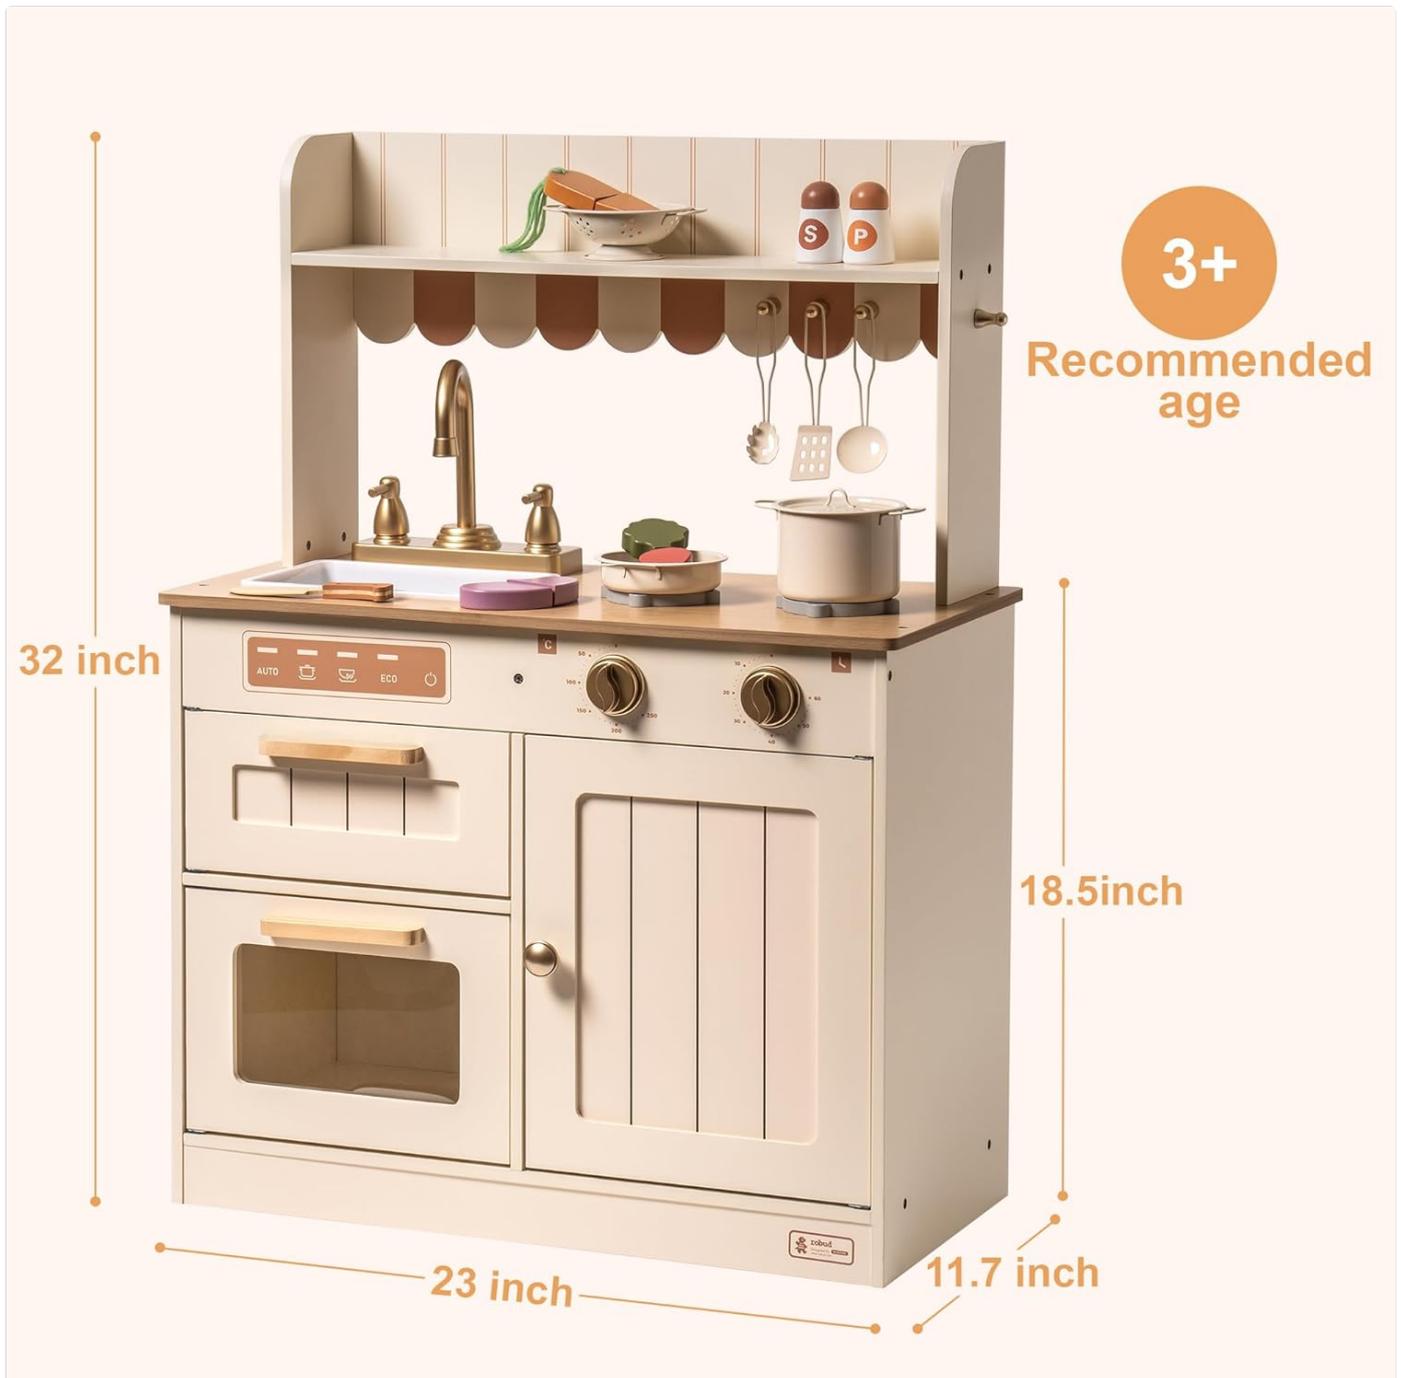


Figure 3.1: Dimensions of the assembled play kitchen, showing height (32 inches), width (23 inches), and depth (11.7 inches).

Once assembled, place the kitchen on a flat, stable surface. Its compact design makes it suitable for various room sizes.

#### 4. OPERATING INSTRUCTIONS

The ROBUD Play Kitchen is designed for open-ended imaginative play. Encourage children to explore its various features:

- **Sink and Faucet:** The golden faucet can be rotated, and the sink basin can be used for pretend washing of dishes or play food.
- **Stove and Oven:** The stove knobs rotate and produce a satisfying "click" sound, simulating real appliance operation. The oven door opens and closes, allowing for pretend baking and cooking.
- **Storage:** Utilize the cabinets and shelves to organize play food, pots, pans, and utensils, promoting tidiness and organization skills.
- **Accessories:** Use the included play food and utensils to create various culinary scenarios. The hooks are perfect for hanging spatulas and spoons.



Figure 4.1: A child engaging in pretend play with the ROBUD kitchen set, demonstrating interaction with the faucet and other features.

This play kitchen fosters independence and teaches basic concepts of responsibility and food safety through play.

## 5. MAINTENANCE AND CARE

Proper care will ensure the longevity of your ROBUD Wooden Play Kitchen Set.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as they may damage the wood or non-toxic paint finish.
- **Drying:** Ensure the kitchen is thoroughly dry after cleaning to prevent warping or damage to the wood.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperature changes, which can affect the wood.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Damage:** If any part becomes damaged, discontinue use immediately and contact customer support for replacement parts or guidance.

## 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your play kitchen.

Problem	Possible Cause	Solution
Loose parts or wobbly structure	Screws or fasteners have loosened over time.	Carefully re-tighten all assembly screws. Do not overtighten.
Stove knobs not clicking	Internal mechanism may be misaligned or worn.	Ensure the knob is fully seated. If issue persists, contact customer support.
Scratches or minor paint chips	Normal wear and tear from play.	Minor cosmetic issues do not affect functionality. For significant damage, contact support.

If you encounter an issue not listed here, or if the suggested solutions do not resolve the problem, please contact ROBUD customer support.

## 7. SPECIFICATIONS

---

- **Product Dimensions:** 11.7 x 23 x 32 inches (Depth x Width x Height)
- **Item Weight:** 19 pounds
- **Model Number:** RB-VC3-WCF09
- **Recommended Age:** 3 years and up
- **Materials:** Premium wood, non-toxic paint
- **Manufacturer:** ROBUD

## 8. WARRANTY AND SUPPORT

---

ROBUD is committed to providing high-quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims or support inquiries.

For customer support, replacement parts, or further assistance, please visit the official ROBUD store or contact their customer service department. You can find more information and contact details at the [ROBUD Store on Amazon](#).

