



[Manuals.plus](#) /

> [HOMCOM](#) /

> HOMCOM Electric Massage Recliner with Footrest, Storage, and Remote Control (Model 700-111V93BK) - User Manual

HOMCOM 700-111V93BK

HOMCOM Electric Massage Recliner with Footrest

Model: 700-111V93BK - User Manual

1. INTRODUCTION

Thank you for choosing the HOMCOM Electric Massage Recliner with Footrest. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read it thoroughly before use and retain it for future reference.



Image 1: The HOMCOM Electric Massage Recliner with Footrest in a living room setting.

This recliner is designed for relaxation, featuring a comfortable upholstered seat, a reclining backrest, a 360-degree swivel function, and an integrated electric massage system. The accompanying footrest includes a convenient storage compartment.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prolong the life of your recliner, please observe the following safety guidelines:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 120 kg (264 lbs) for the chair and 100 kg (220 lbs) for the footrest. Overloading can cause damage or injury.
- **Electrical Safety:** Ensure the power cord and adapter for the massage function are not damaged. Do not use if any electrical components are frayed or exposed. Keep liquids away from electrical parts.
- **Assembly:** Assemble the recliner strictly according to the instructions. Ensure all screws and fasteners are securely tightened before use.
- **Placement:** Place the recliner on a flat, stable surface. Avoid placing it near heat sources or in direct sunlight for prolonged periods.

- **Children and Pets:** Keep children and pets away from the recliner during assembly and operation to prevent accidents.
- **Movement:** Do not stand on the chair or footrest. Avoid sudden, forceful movements when reclining or swiveling.
- **Cleaning:** Disconnect the power supply before cleaning. Use only recommended cleaning methods.

3. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any parts are missing or damaged, contact customer service immediately.



Image 2: The HOMCOM recliner and footrest are typically shipped in one package.

- Recliner Chair (1x)
- Footrest/Ottoman (1x)
- Remote Control for Massage Function (1x)
- Power Adapter (1x)
- Assembly Hardware Kit (1x)
- Instruction Manual (1x)

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the steps below. It is recommended to have two people for assembly.

1. **Unpack Components:** Remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.

2. **Attach Base to Chair:** Secure the wooden base to the bottom of the recliner chair using the provided screws and tools. Ensure it is firmly attached.
3. **Assemble Footrest:** Attach the wooden base to the footrest cushion using the provided hardware.
4. **Connect Electrical Components:** Connect the power adapter to the recliner's massage unit and then plug it into a standard electrical outlet. Ensure the remote control is properly connected to the massage unit.
5. **Final Check:** Verify that all connections are secure and all screws are tightened. Test the reclining and swivel functions before full use.



Image 3: Detail of the stable wooden base for the recliner and footrest.

5. OPERATING INSTRUCTIONS

5.1. Reclining Function

The recliner features an adjustable backrest that can recline up to 145 degrees. To recline, lean back gently while pushing on the armrests. To return to an upright position, lean forward. A knob located on the side allows you to adjust the tension of the reclining mechanism, making it easier or harder to recline based on your preference.

LIEGEFUNKTION

145°



Drehen zum Einstellen
der Dichtigkeit

Image 4: Illustration of the recliner's 145-degree reclining capability and the tension adjustment knob.

5.2. Massage Function

The recliner is equipped with an electric massage system featuring ten vibration massage points: six in the backrest, two in the seat, and two in the footrest. Use the wired remote control to operate the massage function.

VIBRATIONSMASSAGE

6 Rückenmassagepunkte
2 Sitzmassagepunkte
2 Fußstützenpunkte



Fernbedienungen

Image 5: Diagram showing the location of the 10 massage points (6 back, 2 seat, 2 footrest) and the remote control for operation.

- **Power On/Off:** Press the power button on the remote to activate or deactivate the massage function.
- **Mode Selection:** Cycle through various massage modes using the 'Mode' button.
- **Intensity Adjustment:** Adjust the massage intensity (if available) using the dedicated intensity buttons.
- **Targeted Massage:** Some remotes allow you to select specific massage zones (back, seat, footrest).

5.3. Swivel Function

The chair can swivel 360 degrees, allowing for easy rotation without moving the entire base. Simply rotate the chair to your desired position.

5.4. Storage Compartment

The accompanying footrest features a hidden storage compartment. To access it, lift the top cushion of the footrest. This space is ideal for storing remote controls, magazines, or small blankets.

VERSTECKTER STAURAUM



Image 6: The footrest with its top cushion lifted, revealing the internal storage compartment.

6. MAINTENANCE

Proper maintenance ensures the longevity and appearance of your recliner.

- **Cleaning:** For general cleaning, wipe the polyester fabric with a clean, damp cloth. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Wood Care:** The wooden base can be cleaned with a soft, dry cloth. Avoid excessive moisture.
- **Electrical Components:** Keep the power cord and remote control clean and dry. Regularly check for any signs of damage.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.



Image 7: Close-up of the breathable polyester linen-look fabric, highlighting its texture.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Massage function not working	Power cord disconnected; Remote control faulty; Massage unit malfunction.	Check if the power cord is securely plugged into the outlet and the recliner. Ensure the remote control cable is properly connected. If the issue persists, contact customer support.
Recliner does not recline smoothly	Tension knob too tight; Mechanism obstructed; Loose fasteners.	Adjust the tension knob to a looser setting. Check for any obstructions under or around the reclining mechanism. Ensure all assembly fasteners are tight.

Problem	Possible Cause	Solution
Chair feels unstable or wobbly	Loose base fasteners; Uneven floor.	Check and tighten all screws connecting the base to the chair. Ensure the chair is placed on a level surface.

8. SPECIFICATIONS

Detailed specifications for the HOMCOM Electric Massage Recliner with Footrest:



Image 8: Detailed dimensions of the recliner chair and the accompanying footrest.

Feature	Detail
Model Number	700-111V93BK

Feature	Detail
Overall Dimensions (Seated)	80 cm (L) x 86 cm (W) x 99 cm (H)
Overall Dimensions (Reclined)	80 cm (L) x 118 cm (W) x 83 cm (H)
Footrest Dimensions	47 cm (L) x 42 cm (W) x 45 cm (H)
Seat Height	43 cm
Seat Depth	52 cm
Backrest Height (from seat)	71 cm
Armrest Height	56 cm
Weight Capacity (Chair)	120 kg
Weight Capacity (Footrest)	100 kg
Product Weight	20.7 kg
Material	Polyester fabric, Wood frame, Foam filling
Reclining Angle	Up to 145°
Swivel	360°
Massage Points	10 (6 back, 2 seat, 2 footrest)
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact HOMCOM customer service. Keep your purchase receipt and model number (700-111V93BK) handy when contacting support. You can typically find contact information on the HOMCOM official website or through your retailer.