

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Rainbow High](#) /
- › [Rainbow High Color & Create Fashion DIY Doll Instruction Manual - Model 594123-C3](#)

Rainbow High 594123-C3

Rainbow High Color & Create Fashion DIY Doll Instruction Manual

Model: 594123-C3

Brand: Rainbow High

INTRODUCTION

The Rainbow High Color & Create Fashion DIY Doll provides a unique creative experience, allowing users to customize their doll's appearance using washable markers. This manual provides instructions for setup, operation, maintenance, and product specifications to ensure proper use and enjoyment of your doll.



Image: The Rainbow High Color & Create doll, demonstrating its initial all-white state and its potential for colorful customization with the included washable markers and accessories.

SETUP

Your Rainbow High Color & Create doll comes ready for immediate use. No assembly or batteries are required.

1. Carefully remove the doll and all accessories from the packaging.
2. Verify that all components are present: one doll, six washable rainbow markers, one comb, one bonus white top, one pair of white sneakers, and one scrunchie.

OPERATING INSTRUCTIONS

The primary function of the Color & Create doll is customization using the provided washable markers. Follow these steps to personalize your doll.

1. Coloring the Doll's Hair and Outfits

- Select a washable marker from the set.
- Apply the marker directly to the doll's white hair to add streaks or full color.

- Use the markers to draw designs, patterns, or color blocks on the doll's white clothing (top, pants, shoes) and scrunchie. Common designs include hearts, stripes, polka dots, or more complex patterns like tie-dye.
- Experiment with different colors and techniques to achieve desired effects.



Image: A hand applying a red washable marker to the doll's white hair.



Image: A hand applying a washable marker to the doll's white pants, which already feature various colorful designs.

2. Playing with Your Customized Doll

Once the coloring and design process is complete, the doll is ready for imaginative play. The unique designs created will inspire new stories and interactions.



Image: Two children engaging in play with their uniquely customized Rainbow High dolls.

MAINTENANCE

The washable markers allow for repeated customization. Follow these steps to clean the doll and accessories.

Rinsing and Repeating Designs

- To remove the marker designs from the doll's hair and fabric clothing, rinse them thoroughly under water.
- For best results, use lukewarm water. Mild soap can be used if needed for stubborn marks.
- Allow the doll's hair and clothing to air dry completely before applying new designs.
- Ensure marker caps are securely placed after each use to prevent drying out.



COLOR IT!



DESIGN IT!



DESIGN IT!



RINSE & REPEAT!

Image: A visual guide demonstrating the process of coloring hair, designing clothing and shoes, and rinsing the doll's clothes for repeated customization.

TROUBLESHOOTING

This product is designed for simple operation. Should you encounter any issues, consider the following:

- **Markers not coloring effectively:** Ensure the marker tips are clean and not dried out. If a marker seems dry, try gently pressing the tip on a piece of paper to reactivate the ink flow.
- **Designs not washing off completely:** Rinse the affected area more thoroughly with lukewarm water. For persistent marks, a small amount of mild soap can be used, followed by a complete rinse.

SPECIFICATIONS

Model Number	594123-C3
Number of Pieces	2 (Doll + Accessories)
Assembly Required	No
Batteries Required	No
Batteries Included	No

Material Type(s)	Plastic, Polyester, Nylon, Polyvinyl Chloride
Color	Blue, Green, Orange, Purple, Rainbow, Red, White
Manufacturer Recommended Age	4 - 12 years
Product Dimensions	30.48 x 25.4 x 8.13 cm; 503.49 g

WARRANTY INFORMATION

Specific warranty details for the Rainbow High Color & Create Fashion DIY Doll are typically provided within the product packaging or can be found on the official Rainbow High website. Please refer to these resources for comprehensive warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance, questions, or concerns regarding your Rainbow High Color & Create Fashion DIY Doll, please visit the official Rainbow High customer support website or contact their designated customer service channels. Contact information is usually available on the product packaging or the brand's official online presence.