

[Manuals.plus](#) /

> [FUDTYSVC](#) /

> FUDTYSVC Replacement Mixer Whisk Instruction Manual for Braun Hand Blenders

FUDTYSVC daishengbaihuo524gs

FUDTYSVC Replacement Mixer Whisk Instruction Manual

For Braun Hand Blenders (Models 4165, 4191, 4199, 4130)

1. PRODUCT OVERVIEW

This document provides instructions for the FUDTYSVC replacement stainless steel mixer whisk, designed for use with specific Braun hand blender models. This whisk is intended to replace an existing or damaged whisk attachment, restoring the full functionality of your appliance for various mixing tasks.



Image 1: FUDTYSVC Replacement Mixer Whisk. This image shows the stainless steel whisk attachment, featuring multiple wire loops connected to a central shaft, designed for aeration and mixing.

2. COMPATIBILITY

This replacement mixer whisk is compatible with the following Braun hand blender host models and their associated mixer models. Please verify your appliance's model number before installation to ensure proper fit and function.

Compatible Braun Host Models:

- Braun 4165
- Braun 4191
- Braun 4199
- Braun 4130

Compatible Mixer Models:

- MQ500, MQ505, MQ525, MQ3025, MQ545, MQ530, MQ535, MQ5025, MQ5035
- MQ700, MQ705, MQ725, MQ735, MQ745, MQ775, MQ787
- MR5550, MR6550, MR740CC

Important: Always confirm your specific model number to ensure compatibility.

3. SETUP AND INSTALLATION

The FUDTYSVC replacement whisk is designed for easy and convenient installation and removal. Follow these steps to attach the whisk to your compatible Braun hand blender host:

1. **Ensure Power Off:** Before handling any parts, ensure your Braun hand blender is unplugged from the power outlet to prevent accidental activation.
2. **Identify Connection Point:** Locate the attachment point on your hand blender's motor unit. This is typically a gear-driven socket.
3. **Align Whisk:** Carefully align the top shaft of the replacement whisk with the connection point on the motor unit. The whisk shaft usually has a specific shape (e.g., hexagonal or notched) that matches the socket.
4. **Insert and Secure:** Gently push the whisk shaft into the socket until it clicks or locks securely into place. Do not force the attachment. A proper connection will feel firm.
5. **Verify Installation:** Lightly tug on the whisk to ensure it is firmly attached and does not wobble excessively.

To remove the whisk, reverse the installation process, typically by pressing a release button (if present on your blender model) and pulling the whisk straight out.

4. OPERATING INSTRUCTIONS

Once the whisk is securely attached to your Braun hand blender, it is ready for use. Always refer to your specific Braun hand blender's user manual for detailed operating instructions, safety precautions, and recommended speed settings for various tasks.

- **Mixing:** Use the whisk for aerating ingredients, whipping cream, beating eggs, or mixing batters.
- **Speed Control:** Start with a low speed and gradually increase as needed to prevent splashing and achieve desired consistency.
- **Container Size:** Use a sufficiently deep container to prevent ingredients from splashing out during operation.
- **Do Not Overfill:** Avoid overfilling the container to allow for proper mixing and aeration.

Safety Note: Never immerse the motor unit of your hand blender in water. Only the whisk attachment is designed for contact with food and liquids.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygienic use of your FUDTYSVC replacement whisk.

Cleaning:

- **Immediate Cleaning:** Clean the whisk immediately after each use to prevent food residue from drying on the stainless steel.
- **Hand Washing:** Wash the whisk attachment by hand using warm, soapy water and a soft sponge or brush. Rinse thoroughly under running water.
- **Dishwasher Safe:** The stainless steel whisk is generally dishwasher safe. Place it on the top rack for best results. Avoid harsh abrasive cleaners or scouring pads, which can scratch the surface.

- **Drying:** Dry the whisk completely before storing to prevent water spots or mineral buildup.

Storage:

- Store the clean and dry whisk in a safe place where it will not be bent or damaged.
- Avoid storing with other metal objects that could cause scratches.

6. TROUBLESHOOTING

If you encounter issues with your FUDTYSVC replacement whisk, consider the following common troubleshooting steps:

- **Whisk Not Attaching Securely:**
 - Ensure the whisk is fully aligned with the motor unit's socket.
 - Verify that your hand blender model is listed in the compatibility section (Section 2).
 - Check for any obstructions in the socket or on the whisk shaft.
- **Poor Mixing Performance:**
 - Ensure the whisk is clean and free of dried food residue.
 - Confirm the whisk is securely attached and not loose.
 - Refer to your Braun hand blender's manual for recommended speed settings for your specific task.
- **Unusual Noise During Operation:**
 - Immediately unplug the hand blender.
 - Check if the whisk is properly installed and not bent or damaged.
 - If the noise persists after re-installation, discontinue use and contact the seller or manufacturer.

If these steps do not resolve the issue, please contact the seller for further assistance.

7. SPECIFICATIONS

Product Name	Mixer Whisk Replacement Part
Brand	FUDTYSVC
Model Number	daishengbaihuo524gs
Material	Stainless Steel
Item Weight	1.76 ounces (approx. 50 grams)
Package Dimensions	1.18 x 0.79 x 0.39 inches (approx. 3 x 2 x 1 cm)
Quantity	1 Whisk

Note: All products are measured manually, and the size may have a 1-3cm error. Specifications are subject to change without notice.

8. WARRANTY AND SUPPORT

Warranty information for this specific replacement part is not provided in this manual. For details regarding warranty coverage, return policies, or technical support, please contact the seller directly through your purchase platform.

When contacting support, please have your purchase details, including the order number and product model number (daishengbaihuo524gs), readily available.