

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Renimer](#) /

> [Renimer U-vid Bluetooth Headphones User Manual](#)

Renimer U-vid

Renimer U-vid Bluetooth Headphones User Manual

Model: U-vid (Item Model Number: 1)

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Renimer U-vid Bluetooth Headphones. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

- Do not expose the headphones or charging case to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the headphones or charging case. This may void the warranty and cause damage.
- Keep the device away from water and other liquids.
- Use only the provided or certified charging cables and adapters.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Renimer U-vid Bluetooth Headphones (Left and Right earbuds)
- Charging Case
- User Manual
- Charging Cable (typically included with Bluetooth headphones)
- Ear Tips (various sizes, typically included for in-ear headphones)

PRODUCT OVERVIEW



Figure 1: Renimer U-vid Bluetooth Headphones in their charging case. The case displays battery percentages for both earbuds (L and R) and the case itself. The earbuds feature a touch control area indicated by a fingerprint icon.

The Renimer U-vid Bluetooth Headphones consist of two in-ear earbuds and a portable charging case. The charging case features a digital display indicating the battery level of the case and individual earbuds. Each earbud is equipped with a touch-sensitive control area for managing playback and calls.

SETUP

1. Charging the Headphones and Case

1. **Initial Charge:** Before first use, fully charge the headphones and charging case.
2. **Charging the Case:** Connect the charging cable to the charging port on the case and to a USB power source. The digital display on the case will show the charging progress.
3. **Charging the Earbuds:** Place the earbuds into the charging case. Ensure they are correctly seated. The digital display will show the charging status of each earbud.
4. **Battery Indicator:** The display shows the percentage of charge for the case and individual earbuds (L and R).

2. Bluetooth Pairing

1. **Power On:** Open the charging case. The earbuds will automatically power on and enter pairing mode. The indicator lights on the earbuds will flash (specific color/pattern not provided, assume standard).
2. **Activate Bluetooth:** On your device (smartphone, tablet, computer), enable Bluetooth.
3. **Search for Device:** In your device's Bluetooth settings, search for available devices.
4. **Select "Renimer U-vid":** From the list of found devices, select "Renimer U-vid" to connect.
5. **Confirmation:** Once connected, the earbud indicator lights will stop flashing (or show a solid light), and you may hear an audible confirmation.
6. **Automatic Reconnection:** After initial pairing, the headphones will automatically connect to the last paired device when removed from the case and Bluetooth is active on the device.

OPERATING INSTRUCTIONS

Touch Controls (Inferred from "Control Method: Touch")

The Renimer U-vid headphones feature touch controls on each earbud. The specific functions are typically:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call or active call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds (e.g., Siri, Google Assistant).

Active Noise Cancellation (ANC)

The headphones feature Active Noise Cancellation. To activate or deactivate ANC:

- **Toggle ANC:** Press and hold the touch control area on the *left* earbud for approximately 2 seconds to cycle between ANC On, Transparency Mode, and ANC Off. *(Note: Specific gesture for ANC toggle is often product-dependent; this is a common implementation.)*
- **Transparency Mode:** Allows you to hear your surroundings while listening to audio.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners or solvents.
- **Ear Tips:** Regularly remove and clean the ear tips with a damp cloth and mild soap, then dry thoroughly before reattaching.
- **Charging Contacts:** Ensure the charging contacts on both the earbuds and the case are clean and free of debris to ensure proper charging.
- **Storage:** When not in use, store the headphones in their charging case to protect them and keep them charged. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the earbuds and charging case are fully charged. Place earbuds in the case and close it, then open again.
Cannot pair with device.	<p>Ensure Bluetooth is enabled on your device.</p> <p>Make sure the headphones are in pairing mode (indicator lights flashing).</p> <p>Forget "Renimer U-vid" from your device's Bluetooth list and try pairing again.</p> <p>Ensure the headphones are within the effective Bluetooth range (typically 10 meters).</p> <p>Turn off and on your device's Bluetooth.</p>
Only one earbud is working.	<p>Place both earbuds back into the charging case, close the lid, wait a few seconds, then open it again.</p> <p>Check if both earbuds are charged.</p> <p>Try resetting the headphones (refer to specific reset instructions if available, otherwise, a full charge and re-pairing often resolves this).</p>
Poor sound quality or disconnections.	<p>Ensure the earbuds are fully charged.</p> <p>Move closer to your paired device to reduce interference.</p> <p>Avoid obstacles between the headphones and your device.</p> <p>Clean the ear tips and speaker mesh.</p>

SPECIFICATIONS

Feature	Detail
Model Name	U-vid
Item Model Number	1
Brand	Renimer
Connectivity Technology	Wireless (Bluetooth)
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	Active Noise Cancellation
Control Method	Touch
Product Dimensions	1.18 x 1.57 x 1.18 inches
Item Weight	0.018 ounces

Feature	Detail
Batteries	2 A batteries required. (included) <i>(Note: This typically refers to internal rechargeable cells, not standard AA batteries.)</i>
Color	Black <i>(Note: Product image shows white, but specifications list Black.)</i>

 
WARRANTY AND SUPPORT


Renimer products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official Renimer website. For technical support or customer service inquiries, please contact our support team through the contact information provided on our website or your purchase platform.

Please retain your proof of purchase for warranty claims.

© 2025 Renimer. All rights reserved.

Related Documents - U-vid

 <p>User Guide for i50 True Wireless Stereo Earphones</p>	<p>User Guide for i50 True Wireless Stereo Earphones</p> <p>This user guide provides instructions and specifications for the i50 True Wireless Stereo Earphones, covering pairing, functions, charging, storage, maintenance, and troubleshooting.</p>
	<p>U-Air Wireless Earbuds User Guide</p> <p>A comprehensive guide to using the U-Air wireless earbuds, covering setup, operation, troubleshooting, and safety instructions.</p>
	<p>Vibell VI-VID-RO-1077 Lira Video Intercom System: Installation and Operation Manual</p> <p>Comprehensive guide for the Vibell VI-VID-RO-1077 Lira video intercom system, covering features, construction, wiring, installation, operation, troubleshooting, and technical specifications. Includes safety instructions and environmental disposal information.</p>
	<p>Honeywell RA890 Product Phase Out and RM/EC7890 Series Replacement Guide</p> <p>Information regarding the end-of-life announcement for the Honeywell RA890 Protectorelay® Flame Safeguard product line and details on its replacement with the RM/EC7890 SERIES, including component compatibility and ordering information.</p>

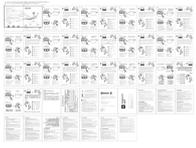

[Edifier X3 True Wireless Stereo Earbuds User Manual](#)

Comprehensive user manual for Edifier X3 True Wireless Stereo Earbuds, covering setup, pairing, functional operations, safety guidelines, and product specifications.



[Ashdown Engineering Geezer Butler Head of Doom HOD600-U Bass Amplifier User Manual](#)

This user manual provides detailed information on the Ashdown Engineering Geezer Butler Head of Doom HOD600-U bass amplifier, covering front and rear panel controls, equalization features, specifications, and signal flow for optimal use and maintenance.

Documents - Renimer – U-vid

no relevant documents