



Manuals.plus /

› chartustriable /

› chartustriable Black 12-Drawer Dresser with Power Outlet and LED Lights User Manual

chartustriable 12-Drawer Dresser with Power Outlet and LED Lights

chartustriable Black 12-Drawer Dresser User Manual

Model: 12-Drawer Dresser with Power Outlet and LED Lights

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your chartustriable Black 12-Drawer Dresser with Power Outlet and LED Lights. Please read this manual thoroughly before assembly and use to ensure safe and proper operation of the product. Keep this manual for future reference.



Image: The chartustriable Black 12-Drawer Dresser, showcasing its sleek design, integrated LED lighting, and top surface with a charging station.

SAFETY INFORMATION

To prevent serious injury, always follow these safety precautions:


- **Anti-Tip Kit:** This dresser is equipped with an anti-tip kit. It is crucial to install this device securely to a wall to prevent the dresser from tipping over, especially in households with children. Failure to install the anti-tip device can result in serious injury or death.
- **Weight Distribution:** Distribute weight evenly across drawers. Avoid placing heavy items on top of the dresser that could cause instability.
- **Drawer Safety:** Do not allow children to climb on or hang from drawers. Close drawers completely after use.
- **Power Outlet Safety:** Ensure the power cord is not pinched or damaged. Do not overload the power outlets. Use only in dry indoor environments.
- **Assembly:** Follow all assembly instructions carefully. Do not use power tools for assembly unless specifically instructed, as this may damage components.

Protecting Your Children and Furniture

The Dresser with Wall Anchor Kit Which Can Keep Your Home and Family Safe



With Anti-toppling Device

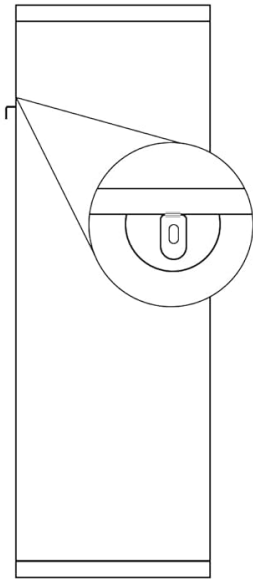

Without Anti-toppling Device



Anti-toppling Device

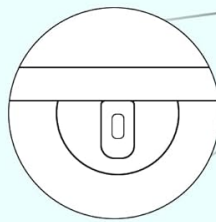 


Image: A diagram illustrating the importance and proper installation of the anti-tip device to secure the dresser to a wall, preventing accidental tipping.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present. Refer to the packaging list provided with your product for a complete inventory. If any parts are missing or damaged, contact customer support immediately.

- Dresser panels (top, bottom, sides, back)
- Drawer components (fronts, sides, backs, bottoms)
- Drawer slides (metal rails)
- Hardware kit (screws, dowels, cam locks, etc.)
- Power outlet unit with power cord
- LED light strip with remote control
- Anti-tip kit
- Assembly instructions manual

ASSEMBLY INSTRUCTIONS

Assembly of the chartustriable 12-Drawer Dresser requires careful attention to detail. Each part is marked with a serial number to assist in identification. It is recommended to have two people for assembly.

1. **Prepare Workspace:** Clear a spacious area and lay out all components on a soft, clean surface to prevent scratches.
2. **Assemble Frame:** Follow the step-by-step diagrams in the included instruction booklet to assemble the main frame of the dresser. Ensure all connections are secure.
3. **Install Drawer Slides:** Attach the metal drawer slides to the dresser frame and to the drawer sides as indicated in the instructions. Ensure they are aligned correctly for smooth operation.
4. **Assemble Drawers:** Construct each of the 12 drawers. Pay attention to the different sizes (9 large, 3 medium) and ensure the drawer bottoms are inserted correctly.
5. **Install Power Outlet:** Integrate the power outlet unit into the designated slot on the dresser top. Route the power cord safely.
6. **Attach LED Light Strip:** Adhere the LED light strip to the underside of the dresser as per the instructions.
7. **Insert Drawers:** Carefully slide all assembled drawers into their respective slots.
8. **Install Anti-Tip Kit:** Securely attach the anti-tip device to the back of the dresser and to a wall stud using appropriate hardware.

An additional assembly video is available to guide you through the process. Please refer to the video for visual assistance.

Your browser does not support the video tag.

Video: An assembly guide demonstrating the step-by-step process of constructing the dresser, including frame assembly, drawer installation, and securing the anti-tip device.



Silent And Rust-proof Bottom Rails Make Drawers Easier To Use

Image: A close-up view of a dresser drawer, highlighting the silent and rust-proof bottom rails designed for smooth and durable operation.

OPERATING INSTRUCTIONS

A. Power Outlet Usage

The dresser is equipped with a convenient charging station:

- **Connect Power:** Plug the dresser's 4.92-foot power cord into a standard wall outlet.
- **AC Outlets:** Use the two AC power outlets for devices such as lamps or laptops.
- **USB Ports:** Utilize the 1 Type-C (5V/3A) and 1 USB (5V/2A) ports for charging mobile phones, headphones, smartwatches, and other compatible USB-powered devices.
- **Safety:** Do not exceed the maximum power rating of the outlets. Unplug the dresser from the wall outlet when not in use or during electrical storms.



Image: A detailed view of the integrated power outlet on the dresser top, showing two AC outlets, one USB port, and one Type-C port, along with a connected power cord.

B. LED Light System

The integrated LED light strip offers customizable ambient lighting:

- **Power On/Off:** Use the provided wireless remote control or the mobile phone application to turn the LED lights on or off.
- **Color Selection:** Choose from 60,000 RGB colors to match your preference or room decor.
- **Brightness Adjustment:** Adjust the brightness level of the lights using the remote or app.
- **Mode Selection:** Select from various flashing modes or dynamic lighting effects.
- **Music Synchronization:** Activate the music synchronization function to make the lights react to sound.
- **Timing Function:** Set a timer for the lights to automatically turn off.



Image: The dresser illuminated by its LED lights, demonstrating different color options and highlighting the remote control and app interface for light customization.

MAINTENANCE

Proper care will extend the life and appearance of your dresser:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish. The dresser is designed to be waterproof and scratch-resistant for easy maintenance.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Drawer Care:** Periodically check drawer slides for smooth operation. If drawers become stiff, a small amount of silicone lubricant can be applied to the metal rails.
- **Hardware:** Periodically check and tighten any loose hardware to maintain stability.



Image: Visual representation of the dresser's key features: water-resistant surface, anti-tipping mechanism, cold rust-proof handles, and ease of cleaning.

TROUBLESHOOTING

If you encounter issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	Power cord unplugged, remote battery dead, light strip disconnected.	Ensure power cord is securely plugged in. Check remote battery and replace if necessary. Verify LED strip connection.
Drawers are difficult to open/close.	Drawer slides misaligned, debris in slides, overloaded drawer.	Check alignment of drawer slides. Clean any debris from the rails. Reduce weight in the drawer.
Power outlets are not working.	Dresser power cord unplugged, circuit breaker tripped, device not compatible.	Ensure dresser is plugged into a live wall outlet. Check your home's circuit breaker. Verify device compatibility and functionality.
Dresser feels unstable.	Anti-tip kit not installed, uneven floor, loose hardware.	Install the anti-tip kit as instructed. Place the dresser on a level surface. Tighten all assembly hardware.

SPECIFICATIONS

Feature	Detail
Brand	chartustriable
Model Name	12-Drawer Dresser with Power Outlet and LED Lights
Overall Dimensions (L x W x H)	63" x 15.4" x 32.2" (160cm x 39.1cm x 81.8cm)
Large Drawer Dimensions (L x W x H)	20" x 14.6" x 7" (50.8cm x 37.1cm x 17.8cm)
Medium Drawer Dimensions (L x W x H)	20" x 14.6" x 4.8" (50.8cm x 37.1cm x 12.2cm)
Number of Drawers	12 (9 large, 3 medium)
Color	Black
Material	Thick, high-density engineered wood
Item Weight	136 Pounds (61.7 kg)
Power Outlet	2 AC outlets, 1 Type-C (5V/3A), 1 USB (5V/2A)
Power Cord Length	4.92 feet (1.5 meters)
LED Lights	60,000 RGB colors, adjustable brightness/mode, music sync, timing function
Control Method	Wireless remote control, Mobile phone APP
Assembly Required	Yes

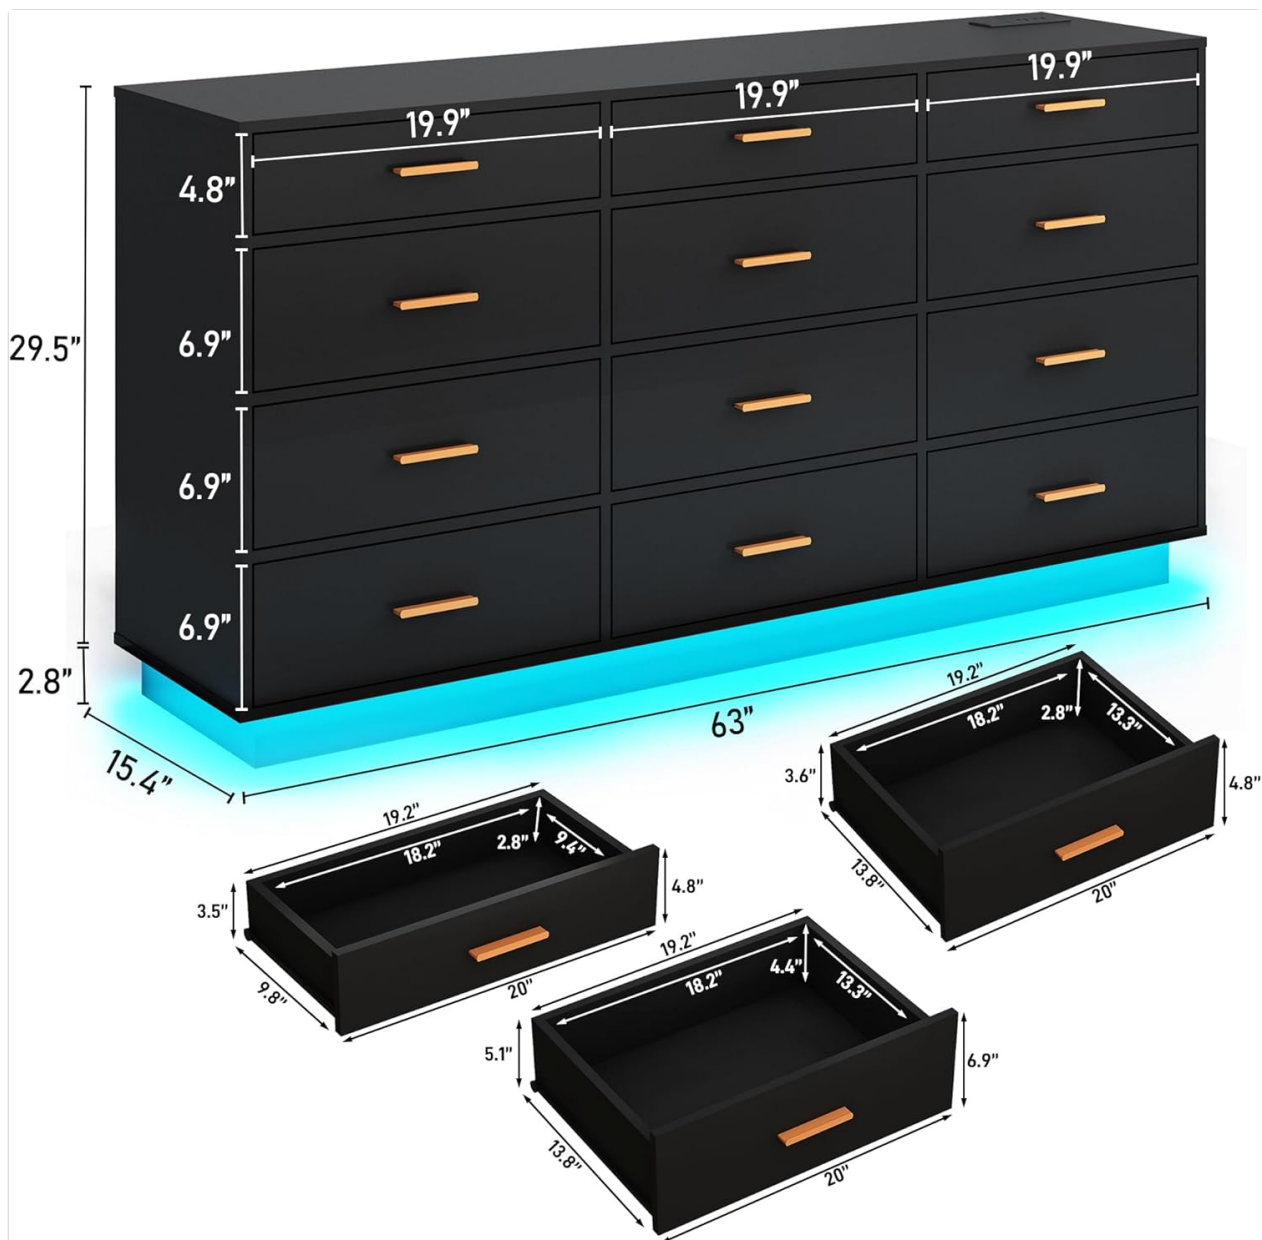 


Image: A comprehensive diagram displaying the overall dimensions of the dresser and the specific measurements for both the large and medium drawers.



12 Large Drawers Provide Ample Storage Space To Keep Your Room Organized



Underwear



T-Shirts



Mask



Bag



Shirt



Toy

Image: The dresser with multiple drawers open, demonstrating its ample storage capacity for various items like clothes, books, and toys.

WARRANTY INFORMATION

For specific warranty details, please refer to the warranty card included with your product or contact chartustriable customer service. Generally, products are covered against manufacturing defects for a limited period from the date of purchase. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact chartustriable customer service. Our team is available to provide support.

- **Online Support:** Visit the official chartustriable website for FAQs and support resources.
- **Email Support:** Refer to your product packaging or warranty card for the customer service email address.
- **Phone Support:** Contact numbers may be available on the official website or product documentation.



Image: A customer service representative wearing a headset, symbolizing readily available 24-hour customer support for any product inquiries or issues.