

## SOBERNA M10

# SOBERNA M10 Portable Bluetooth Speaker User Manual

Model: M10

## 1. INTRODUCTION

Thank you for purchasing the SOBERNA M10 Portable Bluetooth Speaker. This manual provides important information regarding the setup, operation, and maintenance of your speaker. Please read it thoroughly before use and retain it for future reference.

The SOBERNA M10 is a powerful and versatile portable Bluetooth speaker designed for various environments, including outdoor activities, parties, beach trips, and travel. It features IPX7 waterproofing, colorful flashing lights, and TWS wireless pairing capabilities.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Despite being IPX7 waterproof, avoid submerging the speaker for extended durations or in saltwater. Ensure the charging port cover is securely closed before exposure to water.
- Do not attempt to disassemble, repair, or modify the speaker. This will void the warranty and may cause damage or injury.
- Keep the speaker away from medical devices, as its magnetic field may interfere with their operation.
- Use only the provided charging cable or a certified equivalent.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

## 3. WHAT'S IN THE BOX

Verify that all items are present upon unboxing:

- SOBERNA M10 Portable Bluetooth Speaker
- Charging Cable (USB-C)

- User Manual
- Earbuds

## 4. PRODUCT OVERVIEW



**Figure 4.1:** SOBERNA M10 Portable Bluetooth Speaker. The image shows the speaker with its control panel featuring power, EQ, volume, play/pause, and mode buttons, surrounded by water splashes, highlighting its waterproof feature.

### 4.1. Control Panel Layout

Button/Port	Function
Power Button ( )	Press and hold to power ON/OFF. Short press to play/pause (in Bluetooth mode).
EQ Button (EQ)	Short press to cycle through equalizer modes (e.g., Bass Boost, Vocal, 3D Sound).

Button/Port	Function
Volume Up (+)	Short press to increase volume. Long press for next track.
Volume Down (-)	Short press to decrease volume. Long press for previous track.
Mode Button (TF / AUX)	Short press to switch between Bluetooth, TF Card, and AUX input modes.
Charging Port	USB-C port for charging the speaker.
LED Indicator	Indicates power status, charging status, and Bluetooth pairing status.

## 5. SETUP

---

### 5.1. Charging the Speaker

1. Connect the provided USB-C charging cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., solid red while charging, off when fully charged).
4. A full charge takes approximately 3-4 hours.

### 5.2. Powering On/Off

- **Power On:** Press and hold the Power button for 2-3 seconds until the LED indicator lights up and you hear an audible prompt.
- **Power Off:** Press and hold the Power button for 2-3 seconds until the LED indicator turns off and you hear an audible prompt.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (the LED indicator will flash blue, indicating it's ready for pairing).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "SOBERNA M10" from the list of devices.
4. Once paired, the LED indicator will turn solid blue, and you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

### 6.2. TWS (True Wireless Stereo) Pairing

TWS allows you to pair two SOBERNA M10 speakers together for a stereo sound experience.

1. Ensure both SOBERNA M10 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), double-press the Power button. The speaker will enter TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. You will hear a confirmation tone once connected.
4. Once TWS paired, connect your device to the primary speaker via Bluetooth as described in Section 6.1.
5. To disconnect TWS, double-press the Power button on either speaker.

### 6.3. Using TF Card Mode

1. Insert a TF (microSD) card with MP3 audio files into the TF card slot.
2. Press the Mode button to switch to TF Card mode. The speaker will automatically begin playing music from the card.
3. Use the Volume Up/Down buttons for track navigation (long press) and volume control (short press).

### 6.4. Using AUX Mode

1. Connect one end of a 3.5mm audio cable (not included) to the speaker's AUX input port.
2. Connect the other end to the audio output of your device.
3. Press the Mode button to switch to AUX mode.
4. Audio will now play through the speaker. Control playback from your connected device.

### 6.5. Light Modes

The speaker features colorful flashing lights. The lights typically synchronize with the music or can be cycled through different modes. Refer to the specific product packaging or a quick start guide for detailed light control instructions, as this functionality is often integrated with a dedicated button or a long press of an existing button (e.g., EQ or Mode button).

## 7. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use, to maintain battery health.
- **Water Protection:** Always ensure the charging port cover is sealed tightly when near water to maintain IPX7 waterproof integrity.

## 8. TROUBLESHOOTING

Problem	Possible Solution
Speaker won't turn on.	Ensure the speaker is charged. Connect it to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing blue LED). Turn off and on Bluetooth on your device. Forget "SOBERNA M10" from your device's Bluetooth list and try pairing again. Ensure no other devices are connected to the speaker.
No sound.	Check speaker volume and device volume. Ensure the correct input mode (Bluetooth, TF, AUX) is selected. If using AUX, ensure the cable is fully inserted.
Sound distortion.	Reduce the volume on both the speaker and your device. Ensure the speaker is not too far from the connected device (Bluetooth range).
TWS pairing fails.	Ensure both speakers are M10 models and are not connected to any other Bluetooth devices. Try powering both speakers off and on, then attempt TWS pairing again.

Problem	Possible Solution
---------	-------------------

## 9. SPECIFICATIONS

Feature	Detail
Model Name	M10
Brand	SOBERNA
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Speaker Type	3D
Speaker Maximum Output Power	180 Watts
Battery Life	40 Hours
Is Waterproof	Yes (IPX7)
Product Dimensions	3"D x 3"W x 5"H
Power Source	Battery Powered
Audio Output Mode	Mono
Included Components	Earbuds
Recommended Uses	Outdoor Activities, Parties, Beach, Travel, Smartphones or Tablets

## 10. WARRANTY AND SUPPORT

The SOBERNA M10 Portable Bluetooth Speaker comes with a **Limited Warranty**. Please refer to the warranty card included in your package for specific terms and conditions, including coverage duration and what is covered.

For technical support, troubleshooting assistance, or warranty claims, please contact SOBERNA customer service through the retailer where you purchased the product or visit the official SOBERNA website for contact information.

**Manufacturer:** soberna

**Date First Available:** November 10, 2024