

Manuals.plus /

› Gumney /

› Gumney Aluminum Foil Translucent Zip Lock Bags 5.9x8.66 inch - User Manual

Gumney U15314094

Gumney Aluminum Foil Translucent Zip Lock Bags (5.9x8.66 inch) - User Manual

Model: U15314094

1. INTRODUCTION

These Gumney aluminum foil translucent zip lock bags are designed for convenient and secure storage of various items, particularly food products. Their resealable design ensures freshness and reusability, making them suitable for a wide range of applications from pantry organization to packaging small goods.



Image 1.1: A stack of Gumney aluminum foil translucent zip lock bags, showcasing their reflective back and clear front.

2. FEATURES

The Gumney Aluminum Foil Translucent Zip Lock Bags offer several key features for effective storage:

- **Resealable Zip Lock Closure:** Provides an airtight seal to maintain freshness and allows for repeated opening and closing.
- **Durable Construction:** Made from a combination of plastic and aluminum foil, offering strength and protection against moisture and odors.
- **Translucent Front Panel:** Allows for easy identification of contents without needing to open the bag.

- **Versatile Application:** Ideal for storing dry goods such as candy, cookies, coffee beans, tea, dried fruit, herbs, snack foods, nuts, peanuts, and grains.
- **Vacuum Seal Compatible:** Can be used with most standard vacuum sealing machines for extended preservation.



Image 2.1: A collage illustrating key features including the transparent side, open top design, flat edge sealing, and the ability to be vacuumed.

3. USAGE INSTRUCTIONS

Follow these steps for optimal use of your Gumney zip lock bags:

1. **Opening the Bag:** Gently pull apart the top edges of the bag above the zip lock seal to open it.
2. **Filling:** Place your desired contents into the bag. Ensure that the contents do not overfill the bag or interfere with the zip lock mechanism. Leave sufficient space at the top for sealing.
3. **Sealing:** Align the two sides of the zip lock closure. Press firmly from one end to the other, running your fingers along the entire seal to ensure it is completely closed and airtight.
4. **Vacuum Sealing (Optional):** If using a vacuum sealer, follow the instructions provided with your vacuum sealing machine for use with zip lock bags. Ensure the zip lock is fully closed before vacuuming.



Image 3.1: Various Gumney bags filled with different food items, demonstrating their practical use for storage.

4. CARE AND MAINTENANCE

To maximize the lifespan and reusability of your bags:

- **Cleaning:** For reusable purposes, wash bags with mild soap and water. Rinse thoroughly.
- **Drying:** Allow bags to air dry completely before reuse to prevent moisture retention, which can affect the freshness of stored items.
- **Avoid Damage:** Do not use abrasive cleaners, sharp objects, or excessive force that could puncture or tear the bag material or compromise the zip lock seal.

5. STORAGE RECOMMENDATIONS

These bags are suitable for storing a variety of dry goods. Examples include:

- Candy and Cookies
- Coffee Beans and Tea Leaves
- Dried Fruits and Herbs
- Snack Foods, Nuts, and Peanuts
- Grains and Seeds

Store filled bags in a cool, dry place away from direct sunlight to help preserve the quality of the contents.



Image 5.1: A clear illustration of the bag's translucent front and opaque aluminum foil back, highlighting its design for content visibility and protection.

6. SPECIFICATIONS

Item Type	Aluminum Foil Translucent Bag
Material	Plastic (Aluminum Foil and Translucent Front)
Dimensions (Width x Length)	5.9 inches x 8.66 inches (15 cm x 22 cm)
Quantity	100 pieces per package
Model Number	U15314094



Image 6.1: A visual representation of the bag's dimensions, indicating 15cm/5.9 inches in width and 22cm/8.66 inches in length.

7. TROUBLESHOOTING

If you encounter issues with your bags, consider the following:

- **Issue: Bag does not seal properly.**
Solution: Ensure no food particles, dust, or debris are caught within the zip lock mechanism. Clean the seal thoroughly with a dry cloth and re-attempt sealing. Check the bag for any visible tears or damage that might prevent a proper seal.
- **Issue: Contents are not staying fresh.**
Solution: Verify that the zip lock seal is completely closed along its entire length. Ensure the bag is not overfilled, which can strain the seal. For highly perishable items, consider using a vacuum sealer if compatible.

8. SAFETY INFORMATION

- Keep bags out of reach of small children and infants to prevent suffocation hazards.
- Do not use these bags for storing liquids unless specifically designed and sealed for such use.
- Do not microwave or expose bags to extreme heat, as this can damage the material and potentially release harmful substances.
- Avoid storing sharp objects that could puncture the bag.

9. WARRANTY AND SUPPORT

Due to the nature of this product, a specific warranty may not be applicable. For any product inquiries, concerns, or support, please contact the retailer from whom you purchased the Gumney Aluminum Foil Translucent Zip Lock Bags or refer to the manufacturer's official contact information if available.