

MEDION MD18420

MEDION MD18420 1200W Kitchen Machine User Manual

Model: MD18420 | Brand: MEDION

1. INTRODUCTION

Thank you for choosing the MEDION MD18420 Kitchen Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Never operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only original accessories and parts provided by the manufacturer.
- Do not use the appliance outdoors.
- Place the appliance on a stable, flat, and dry surface.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking:

- MEDION MD18420 Kitchen Machine (Main Unit)
- 5-liter Stainless Steel Mixing Bowl
- Splash Guard
- Ice Cream Bowl (700 ml capacity)

- Accessory Kit:
 - Flat Beater
 - Kneading Hook
 - Whisk
- Quick Start Guide (This manual)

Praktisches Zubehör für mühelose Zubereitung

Essentielles Zubehör eröffnet vielseitige Einsatzmöglichkeiten und unterstützt bei jeder Zubereitung



Image: All included accessories for the MEDION MD18420 Kitchen Machine.

4. PRODUCT FEATURES

The MEDION MD18420 Kitchen Machine is designed for versatile and efficient food preparation:

- **Powerful 1200W Motor:** Handles demanding tasks like kneading heavy doughs.
- **5-Liter Stainless Steel Bowl:** Large capacity for various recipes.
- **700ml Ice Cream Bowl:** For preparing homemade ice cream.
- **Digital Display:** Shows operating time and speed level for precise control.
- **8 Speed Settings + Pulse Function:** Offers flexibility for different ingredients and preparations.
- **Tilt-Head Design:** Allows for easy attachment and removal of the bowl and accessories.
- **Dishwasher-Safe Accessories:** Flat beater, kneading hook, whisk, and bowls are easy to clean.
- **Non-Slip Feet:** Ensures stability during operation.

Hochwertige Verarbeitung für Langlebigkeit und Eleganz

Stilvolle Metallakzente vereinen Design und Funktionalität
für einen modernen Look und langlebige Qualität.



Image: High-Quality Workmanship for Durability and Elegance.

Maximale Vielfalt für jede Teig- und Speisekreation



Für Rührkuchen,
Hackfleisch und Füllungen



Für Eier, Eiweiß
und Schlagsahne



Für Brot-, Pizza-
und Nudelteig



Für individuelle
Eiskreationen

Image: Maximum Variety for Every Dough and Food Creation.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Remove any protective films or packaging materials.
2. **Clean:** Before first use, wash the stainless steel bowl, ice cream bowl, splash guard, flat beater, kneading hook, and whisk in warm soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.
3. **Placement:** Place the kitchen machine on a clean, dry, stable, and level surface. Ensure there is enough space around the appliance for ventilation and operation.
4. **Attach Bowl:** Lift the motor head by pressing the release button. Place the stainless steel mixing bowl into its base and turn it clockwise until it locks securely.
5. **Attach Accessory:** Select the desired accessory (flat beater, kneading hook, or whisk). Insert the accessory into the shaft and turn it slightly until it locks into place.
6. **Lower Head:** Gently lower the motor head until it clicks into position.
7. **Connect Power:** Plug the power cord into a suitable electrical outlet (220V).

Vielseitigkeit trifft auf Leistung

Umfangreiche Funktionen, kraftvolle Leistung und durchdachtes Design für kreative und effiziente Kochmomente



Image: Versatility meets Performance - MEDION MD18420 Kitchen Machine ready for use.

6. OPERATING INSTRUCTIONS

General Operation

1. **Add Ingredients:** With the motor head raised, add your ingredients to the mixing bowl.
2. **Lower Head:** Lower the motor head until it locks. You may attach the splash guard if desired.
3. **Power On:** The digital display will illuminate.
4. **Select Speed:** Turn the rotary knob to select one of the 8 speed settings. The display will show the current speed and operating time.
5. **Pulse Function:** For short bursts of high power, press and hold the pulse button.
6. **Stop:** Turn the rotary knob to the '0' position or press the power button to stop the machine.

Benutzerfreundliche Steuerung dank digitalem Sensor-Touch-Display

Komfortable Bedienung und präzise Kontrolle
aller Funktionen auf einen Blick



Image: User-Friendly Control Thanks to Digital Sensor-Touch Display.

Using the Ice Cream Maker

1. **Pre-freeze the Ice Cream Bowl:** Place the ice cream bowl in the freezer for at least 8-12 hours, or until completely frozen.
2. **Prepare Mixture:** Prepare your ice cream mixture according to your recipe.
3. **Assemble:** Place the frozen ice cream bowl into the main unit. Insert the ice cream paddle attachment.
4. **Add Mixture:** Pour the prepared ice cream mixture into the frozen bowl.
5. **Churn:** Select a low speed setting and allow the machine to churn until the desired consistency is reached (typically 20-40 minutes).
6. **Serve:** Remove the ice cream and serve immediately or transfer to an airtight container for further freezing.

Selbstgemachtes Eis leicht gemacht

Vielfältige Eiskreationen in kürzester Zeit zubereiten – unkompliziert und kreativ dank der Eisschüssel.



Image: Homemade Ice Cream Made Easy with the dedicated ice cream bowl.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your kitchen machine.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Remove the mixing bowl, splash guard, and all attachments.
3. **Wash Accessories:** The stainless steel mixing bowl, ice cream bowl, splash guard, flat beater, kneading hook, and whisk are dishwasher-safe. Alternatively, wash them by hand in warm soapy water, rinse thoroughly, and dry immediately.
4. **Clean Main Unit:** Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
5. **Dry:** Ensure all parts are completely dry before reassembling or storing.
6. **Storage:** Store the kitchen machine and its accessories in a clean, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power switch off; motor head not locked.	Check power connection; ensure power switch is on; ensure motor head is fully lowered and locked.
Attachments not mixing properly.	Attachment not correctly installed; too much or too little mixture.	Ensure attachment is securely locked; adjust ingredient quantities according to recipe.
Unusual noise during operation.	Overload; improper assembly of bowl or attachment.	Reduce load; check if bowl and attachment are correctly installed and locked.
Motor stops during operation.	Overload protection activated.	Turn off and unplug the machine. Reduce the load. Let it cool down for 15-20 minutes before restarting.

9. SPECIFICATIONS

Feature	Detail
Brand	MEDION
Model Number	MD18420
Color	Anthracite
Dimensions (L x W x H)	23 x 39 x 33.4 cm
Weight	4.31 Kilograms
Main Bowl Capacity	5 Liters
Ice Cream Bowl Capacity	700 ml
Power	1200 Watts
Voltage	220 Volts
Material	Plastic (housing)
Number of Speeds	8 + Pulse function
Special Features	Splash guard, Digital display
Controls Type	Touch

5 L Fassungsvermögen



Image: MEDION MD18420 Kitchen Machine with 5L Capacity and dimensions.

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. MEDION offers customer support for product inquiries and assistance. Please visit the official MEDION website or consult your purchase receipt for contact details.