

Replacement IR Remote Control

Generic Replacement IR Remote Control User Manual

For Zebrronics 2X15L3 Monster Pro X15 & Ridgewa QS-82105BL, QS-82103BL, QS-3315BR, QS-J1203 Partybox Large Battery PA Speaker Systems

1. INTRODUCTION

This manual provides instructions for the Generic Replacement IR Remote Control, designed for specific Zebrronics and Ridgewa Partybox PA Speaker Systems. This remote control is a direct replacement for the original remote and is not a universal remote.

Please ensure your original remote control matches the appearance of this replacement remote for full compatibility and functionality. Some functions may differ from the original remote.

2. COMPATIBILITY

This replacement remote control is compatible with the following speaker systems:

- Zebrronics 2X15L3 Monster Pro X15
- Ridgewa QS-82105BL
- Ridgewa QS-82103BL
- Ridgewa QS-3315BR
- Ridgewa QS-J1203 Partybox Large Battery PA Speaker System

Important: This is not a universal remote control. It is crucial to verify that your speaker system model is listed above and that your original remote control visually matches this replacement unit.

3. SETUP AND BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included) for operation. No programming or pairing is required; simply insert the batteries, and the remote is ready for use with compatible devices.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



Figure 1: Top-down view of the remote control. This image displays the layout of all buttons, including power, number pad, mode, volume, and track controls.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared (IR) receiver on your speaker system. Ensure there are no obstructions between the remote and the speaker system.

Button Functions:

- **POWER:** Turns the speaker system on or off.
- **Number Pad (0-9):** Used for direct track selection or inputting numerical values.
- **MODE:** Cycles through input modes (e.g., Bluetooth, AUX, USB, FM).
- **U/SD:** Selects USB or SD card input mode.
- **AUX:** Selects Auxiliary input mode.
- **FM:** Selects FM radio mode.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **EQ / TUN+:** Adjusts equalizer settings or tunes up in FM mode.
- **TUN-:** Tunes down in FM mode.
- **Previous Track / CH-:** Skips to the previous track or changes to the previous FM channel.
- **Play/Pause:** Plays or pauses audio playback.
- **Next Track / CH+:** Skips to the next track or changes to the next FM channel.
- **FOLDER SCAN:** Scans and navigates through folders on USB/SD media.



Figure 2: Angled view of the remote control, showing the ergonomic design and button placement for easy access.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, humidity, or direct sunlight.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|--|---|
| Remote not responding. | Dead or incorrectly inserted batteries. | Replace batteries with new AAA batteries, ensuring correct polarity. |
| Remote has limited range or intermittent response. | Weak batteries; Obstruction between remote and speaker; Remote not pointed correctly. | Replace batteries; Remove obstructions; Point remote directly at the speaker's IR receiver. |
| Some functions do not work. | Remote is not fully compatible with all original functions; Speaker model not supported. | Refer to the "Compatibility" section. This replacement remote may not support all functions of the original. Ensure your speaker model is listed as compatible. |

7. SPECIFICATIONS

- **Product Type:** IR Replacement Remote Control
- **Brand:** Generic

- **Manufacturer:** Easytry
- **Color:** Black
- **Power Source:** 2 x AAA Batteries (not included)
- **Max Number of Supported Devices:** 1
- **Compatibility:** Specific Zebronics and Ridgewa Partybox PA Speaker Systems (refer to Compatibility section)



Figure 3: Side-angled view of the remote control, illustrating its slim profile and button ergonomics.

8. WARRANTY AND SUPPORT

This product is a replacement remote control. Specific warranty information is not provided. For any issues or support, please refer to the seller or the original manufacturer of your speaker system. Ensure to retain your purchase receipt for any potential support inquiries.