

REATHLETE RE-HYPERSWEEP

REATHLETE Hypersweep Cordless Vacuum Cleaner User Manual

Model: RE-HYPERSWEEP

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the REATHLETE Hypersweep Cordless Vacuum Cleaner. Retain this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter in place.
- Turn off the appliance before connecting or disconnecting the charging cable.
- Use only the charging cable and accessories provided by the manufacturer.
- Do not handle the charging cable or appliance with wet hands.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

2. PRODUCT OVERVIEW

The REATHLETE Hypersweep is a cordless vacuum cleaner designed for efficient and convenient cleaning. It features powerful suction, a built-in flashlight, and a compact design for versatile use.

Key Features:

- **Double the Suction Power:** Provides enhanced cleaning performance on various surfaces.
- **Convenient Storage Tray:** Keeps the vacuum and accessories organized.
- **Bright LED Flashlight:** Illuminates dark areas for thorough cleaning.
- **Large Dirt Capacity:** Reduces the frequency of emptying the dust canister.

- **One-Button Operation:** Simplifies power control and mode selection.



Image: Overview of the REATHLETE HyperSweep vacuum cleaner with its key components labeled, including the power switch, indicator lights, dustbin removal button, washable HEPA filter, USB-C charging port, and suction inlet.



Washable
high-quality filter



Easy to remove dust
from dark spots



USB C charge



Suction power:
7000PA



Usage time:
30 minutes



Battery capacity:
2800mAh



Easy to clean

Regular cleaning helps maintain optimal product performance, we suggest that you regularly clean the product.



Image: Detailed view of the REATHLETE Hypersweep highlighting its washable high-quality filter, easy-to-remove dust from dark spots using the flashlight, and the USB-C charging port. Also shows suction power (7000PA), usage time (30 minutes), and battery capacity (2800mAh).

3. WHAT'S INCLUDED

Verify that all components are present in the package:

- Hypersweep Vacuum Cleaner
- Storage Tray
- Extender Brush with Dust Brush
- Flat Brush
- USB-C Charging Cable
- User Manual
- Warranty Card



What's included?

- ① Hypersweep vacuum cleaner
- ② Storage tray
- ③ Extender brush with dust brush
- ④ Flat brush
- ⑤ User Manual
- ⑥ Warranty
- ⑦ USC-C charging cable

Image: All included items for the REATHLETE Hypersweep: the vacuum cleaner, storage tray, extender brush with dust brush, flat brush, USB-C charging cable, user manual, and warranty card.

4. ASSEMBLY

The REATHLETE Hypersweep is designed for quick and easy assembly.

1. **Attaching Accessories:** Select the desired attachment (extender brush or flat brush). Align the attachment with the suction inlet of the vacuum cleaner and push firmly until it clicks into place.
2. **Using the Storage Tray:** Place the vacuum cleaner and its attachments into the designated slots on the storage tray for organized keeping.



**Effective in
cleaning
tight spaces**

Can clean narrow gaps

**Suitable for
extensive
cleaning**

Can be cleaned on a large scale



**For
convenient
and easy
organization**

Convenient storage

Image: The REATHLETE Hypersweep with its attachments (crevice tool with brush, flat brush) and the convenient storage tray for organization.

5. CHARGING THE VACUUM

Before first use, fully charge the vacuum cleaner. A full charge can take up to 3 hours.

1. Connect the USB-C charging cable to the charging port on the vacuum cleaner.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a USB port.
3. The indicator lights on the vacuum will show the charging status. Once fully charged, the lights will indicate completion.
4. Disconnect the charging cable once charging is complete.

Battery Life: Expect approximately 30 minutes of usage time in regular mode and 15 minutes in high power mode on a full charge.

6. OPERATION

The Hypersweep features simple one-button operation.

1. **Power On/Off:** Press the power button once to turn on the vacuum in standard suction mode. Press again to switch

to high suction mode. Press a third time to turn off the vacuum.

2. **Using the Flashlight:** The integrated LED flashlight automatically activates when the vacuum is turned on, illuminating dark areas for improved visibility during cleaning.
3. **Cleaning Surfaces:** Use the vacuum with or without attachments depending on the cleaning task. The extender brush is suitable for tight spaces and corners, while the flat brush is ideal for larger surfaces or upholstery.



Image: The REATHLETE Hypersweep being used to clean a rug in a home setting and to vacuum the interior of a car, demonstrating its versatility.



Image: A collage showing the REATHLETE Hypersweep being used in various scenarios, including cleaning a sofa, car interior, and a rug, highlighting its adaptability for different cleaning needs.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dustbin:

1. Ensure the vacuum is turned off.
2. Press the one-click dustbin removal button to detach the dust cup.
3. Empty the contents of the dust cup into a waste bin.

Cleaning the HEPA Filter:

The REATHLETE Hypersweep features a washable HEPA filter.

1. After emptying the dustbin, carefully remove the HEPA filter from the dust cup.
2. Tap the filter gently to dislodge any loose dust.
3. Rinse the filter under running water. Ensure it is completely dry before reinserting it into the dust cup. Do not use the vacuum with a wet filter.
4. It is recommended to rinse the filter every three months, or more frequently with heavy use.



Washable high-quality filter



Easy to remove dust from dark spots



USB C charge



Suction power: **7000PA**



Usage time: **30 minutes**



Battery capacity: **2800mAh**



Easy to clean

Regular cleaning helps maintain optimal product performance, we suggest that you regularly clean the product.



Image: A close-up of the washable high-quality filter being rinsed under running water, demonstrating the cleaning process.

General Cleaning:

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

8. TROUBLESHOOTING

If you encounter issues with your REATHLETE Hypersweep, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted	Charge the vacuum cleaner fully.
Low suction power	Dustbin is full	Empty the dustbin.
	Filter is clogged	Clean or replace the HEPA filter.
	Suction inlet is blocked	Remove any obstructions from the suction inlet.
Vacuum not charging	Charging cable not connected properly	Ensure the USB-C cable is securely connected to both the vacuum and the power source.

Problem	Possible Cause	Solution
	Faulty power adapter or cable	Try a different USB power adapter or charging cable.

9. SPECIFICATIONS

Feature	Specification
Brand	REATHLETE
Model Name	RE-HYPERSWEEP
Power Source	Battery Powered
Battery Type	Lithium-Ion
Battery Capacity	2800mAh
Battery Charge Time	3 Hours
Usage Time	Up to 30 minutes (regular mode)
Suction Power	7000PA
Filter Type	HEPA Filter (Washable)
Dirt Capacity	1 Liter
Item Weight	1.5 Pounds
Dimensions (L x W x H)	3"L x 3"W x 16.1"H
Connectivity Technology	USB-C
Special Features	Cordless, Lightweight, Rechargeable, Built-in Flashlight, Storage Tray
Recommended Surfaces	All floors (Bare Floor, Car, Carpet, Desk, Furniture, Hard Floor, Hardwood, Home, Office, Tile Floor)

10. WARRANTY AND SUPPORT

The REATHLETE Hypersweep Cordless Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your package for detailed terms and conditions, including warranty period and coverage.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact REATHLETE customer service. Contact information can typically be found on the warranty card or the official REATHLETE website.