

[Manuals.plus](#) /

› [Nikon](#) /

› Nikon Z 50II Mirrorless Camera Body Instruction Manual

Nikon Z 50II

Nikon Z 50II Mirrorless Camera Body Instruction Manual

Model: Z 50II

1. PRODUCT OVERVIEW

The Nikon Z 50II is a compact mirrorless camera body designed for both photography and videography. It features a 20.9-megapixel APS-C CMOS sensor and the powerful EXPEED 7 image processor, delivering high-quality images and 4K UHD video capabilities. Its ergonomic design, tilting touchscreen, and bright electronic viewfinder make it versatile for various shooting scenarios.



Figure 1.1: Front view of the Nikon Z 50II camera body.

Key Features:

- 20.9 MP DX-format CMOS sensor for detailed images and videos.
- EXPEED 7 image processor for fast performance and advanced autofocus.
- 4K UHD video recording at up to 30 frames per second, and Full HD at 120 fps.
- Tilting 8 cm (3.2-inch) touchscreen with 1,040,000 dots for flexible shooting angles, including vlogging.
- Creative Picture Control modes and access to Nikon Imaging Cloud for enhanced creativity.
- Integrated Wi-Fi and Bluetooth connectivity for easy sharing and remote control.

2. SETUP GUIDE

2.1 Unboxing and Initial Inspection

Carefully unpack all components from the box. The package should include the Nikon Z 50II camera body and accessories. Inspect all items for any signs of damage.

2.2 Charging the Battery

The camera uses an EN-EL25a battery. Before first use, fully charge the battery using the supplied charger (MH-32) or via the camera's USB-C port. The battery weighs approximately 30 grams.

2.3 Inserting the Battery and Memory Card

1. Open the battery chamber cover located at the bottom of the camera.
2. Insert the charged EN-EL25a battery, ensuring it clicks into place.

3. Locate the memory card slot (compatible with SD cards). Insert an SD card until it clicks. The camera has 1 memory card slot and supports up to 256 GB capacity.
4. Close both covers securely.

2.4 Attaching a Lens

The Nikon Z 50II uses the Nikon Z mount. Align the mounting mark on the lens with the mounting mark on the camera body, then rotate the lens counter-clockwise until it clicks into place. Ensure the camera is powered off before attaching or detaching lenses.



Figure 2.1: Side view of the Nikon Z 50II, highlighting the microphone, headphone, HDMI, and USB-C ports.

2.5 Initial Power On and Basic Settings

Turn on the camera using the power switch. Follow the on-screen prompts to set the date, time, and language. Adjust the tilting touchscreen to your preferred viewing angle.



3. OPERATING INSTRUCTIONS

3.1 Photography Modes

The Z 50II offers various shooting modes, including:

- **Simply Automatic:** For quick, hassle-free shooting where the camera selects optimal settings.
- **Manual (M):** Full control over aperture, shutter speed, and ISO.
- **Aperture-Priority (A):** Control aperture, camera sets shutter speed.
- **Shutter-Priority (S):** Control shutter speed, camera sets aperture.
- **Program Auto (P):** Camera sets both aperture and shutter speed, with shift function.

The camera features a 20.9 MP DX CMOS sensor and an EXPEED 7 processor, ensuring high definition and detailed images with excellent dynamic range and color fidelity.

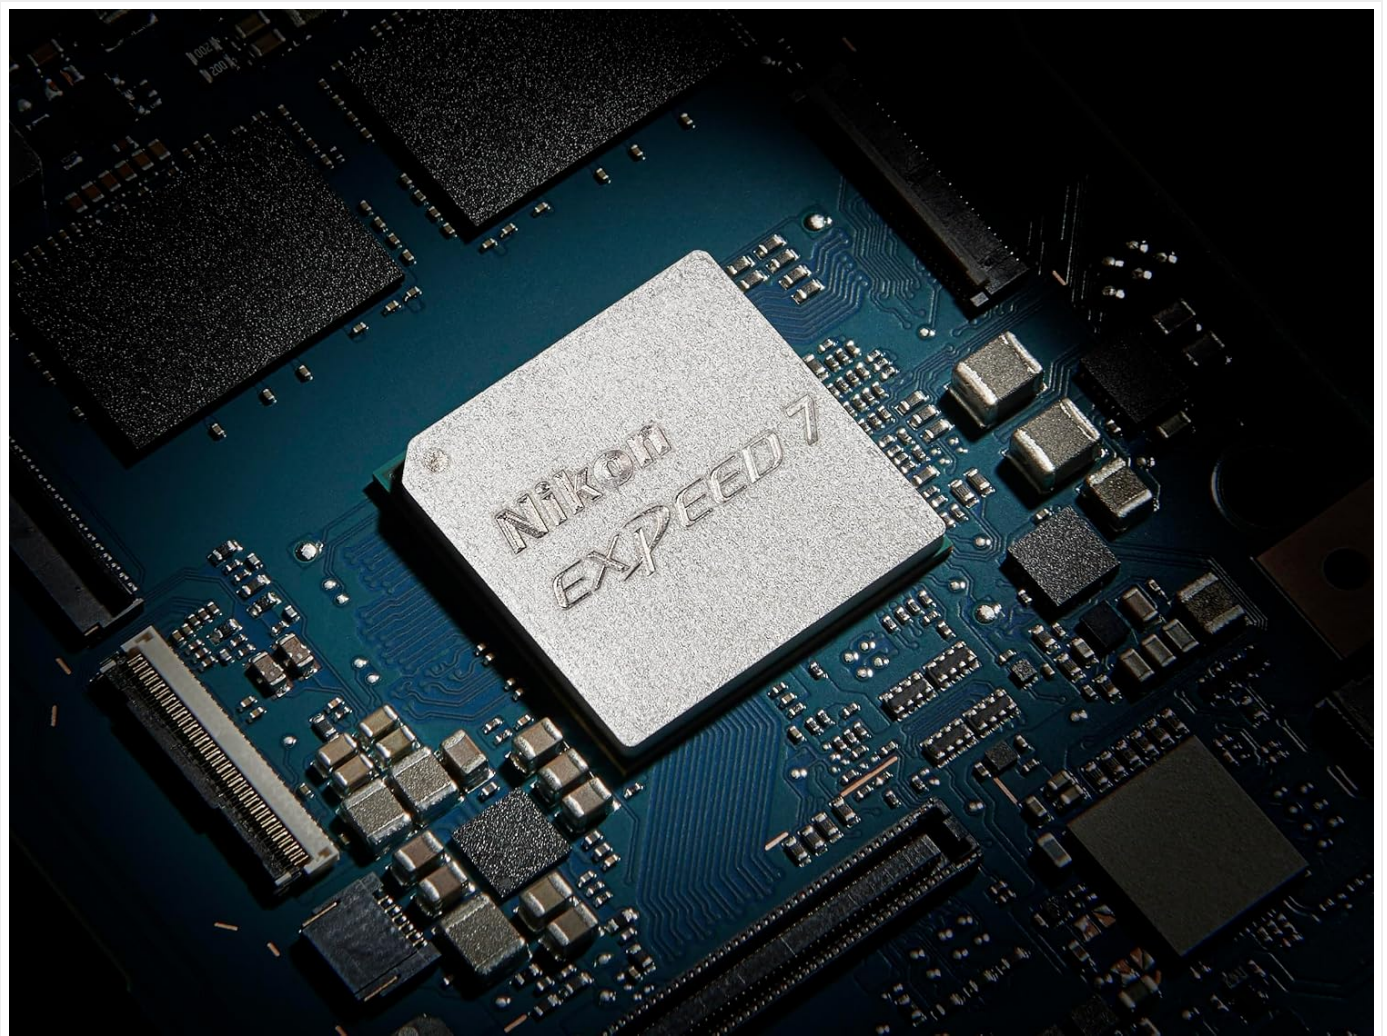


Figure 3.1: The EXPEED 7 processor powers the camera's advanced features.

3.2 Autofocus System

The Z 50II features a highly responsive autofocus system with 209 autofocus zones, continuous autofocus (AF-C), and phase detection points. It includes advanced subject recognition for people, dogs, and cats, ensuring sharp focus even in challenging conditions.

3.3 Video Recording

Record stunning videos with the Z 50II:

- **4K UHD:** Up to 30 frames per second (3840p resolution).
- **Full HD:** Up to 120 frames per second for slow-motion effects (1920x1080 resolution).
- **Product Presentation Mode:** Optimized for vlogging and product reviews, allowing the camera to quickly shift focus between the presenter and objects.



Figure 3.2: The Z 50II is ideal for vlogging with its tilting screen and video capabilities.

3.4 Creative Controls and Connectivity

Access creative Picture Control filters directly or via the Nikon Imaging Cloud to enhance your photos and videos. The camera supports Wi-Fi and Bluetooth for seamless transfer of images and remote control via a smart device.

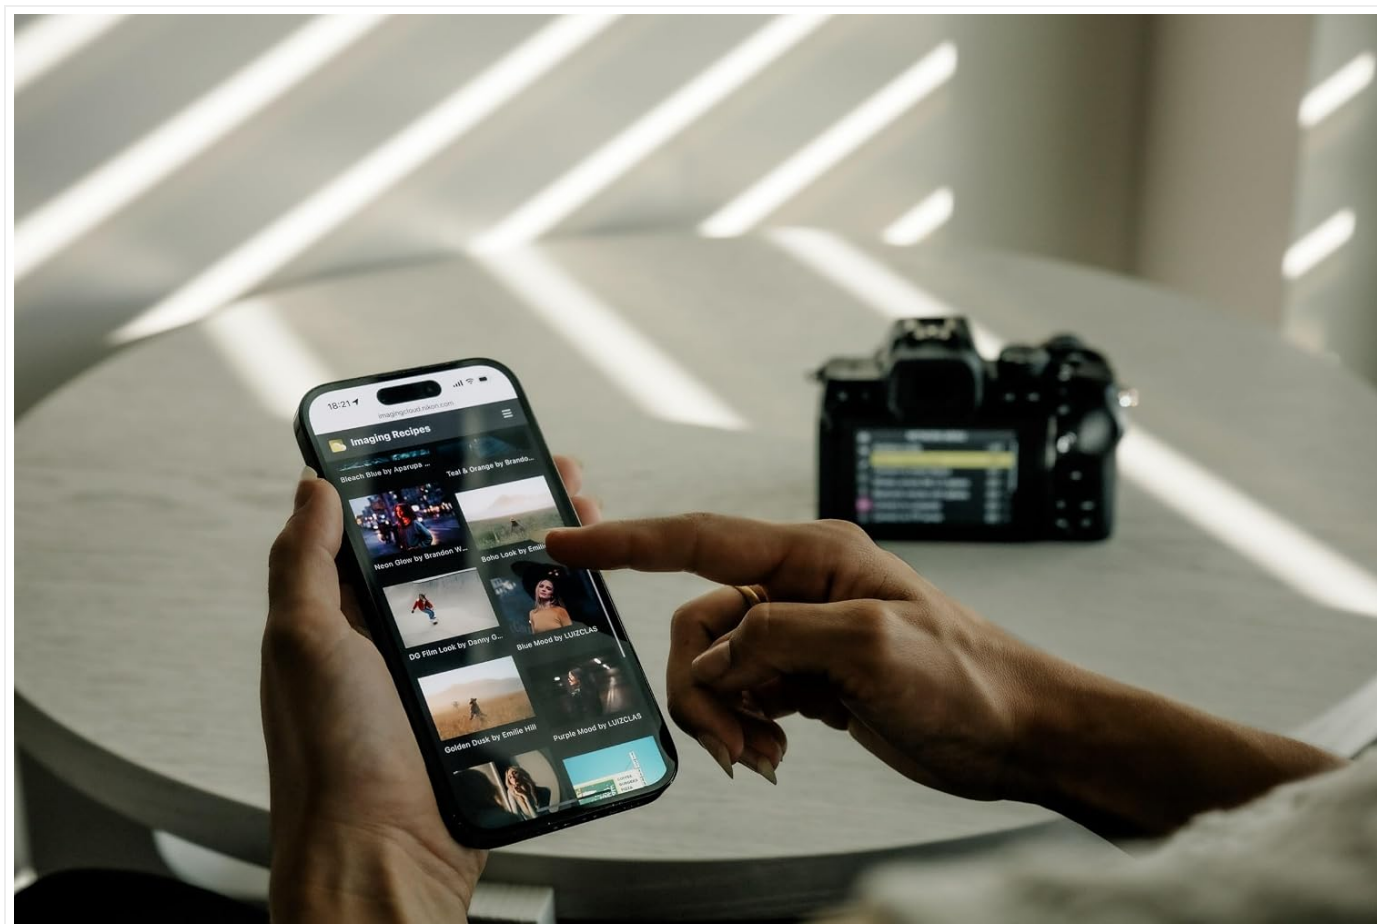


Figure 3.3: Explore creative options and connect wirelessly with your Z 50II.

3.5 Video Overview



Video 3.1: A summary video providing an overview of the Nikon Z 50II camera's features and capabilities.



Video 3.2: A 360-degree view of the Nikon Z 50II camera, showcasing its design and physical attributes.

4. MAINTENANCE

4.1 Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and sensor, use specialized cleaning tools and solutions to avoid damage. Refer to Nikon's official cleaning guidelines.
- Avoid using harsh chemicals or solvents.

4.2 Battery Care

To prolong battery life:

- Charge the battery regularly, but avoid overcharging.
- Store batteries in a cool, dry place when not in use.
- Remove the battery from the camera if it will not be used for an extended period.

4.3 Firmware Updates

Periodically check the Nikon support website for firmware updates. Updates can improve camera performance, add new features, and fix bugs. Follow the instructions provided by Nikon carefully when performing firmware updates.

5. TROUBLESHOOTING

This section addresses common issues. For comprehensive troubleshooting, please refer to the official user manual (PDF) available for download.

Common Issues and Solutions:

Problem	Possible Cause / Solution
Camera does not power on	Ensure battery is charged and correctly inserted. Check battery contacts for cleanliness.
Images are blurry	Check focus mode and ensure lens is clean. Use a faster shutter speed or increase ISO in low light. Verify image stabilization settings.
Memory card error	Reinsert the memory card. Try a different compatible SD card. Format the card (this will erase all data).
Video recording stops unexpectedly	Ensure sufficient battery charge and memory card space. Use a high-speed memory card suitable for 4K video.
Wireless connection issues	Ensure Wi-Fi/Bluetooth is enabled on both camera and smart device. Restart both devices. Check network settings.

6. SPECIFICATIONS

Feature	Detail
Brand	Nikon
Model Name	Nikon Hybride Z 50II, boitier nu (Z 50II Body)
Sensor Type	DX CMOS
Effective Pixels	20.9 Megapixels
Image Processor	EXPEED 7
Lens Mount	Nikon Z
Image Stabilization	Digital
Video Resolution	4K UHD (2160p, 3840p), Full HD (1920x1080)
Max Video Frame Rate	30 fps (4K), 120 fps (Full HD)
ISO Range (Extended)	100 - 51200
Shutter Speed	1/4000 to 0.001 seconds
Continuous Shooting Speed	11 FPS

Feature	Detail
Autofocus Points	209
Display Type	Articulated OLED Touchscreen
Display Size	8 cm (3.2 inches)
Display Resolution	1,040,000 Pixels
Viewfinder Type	Electronic
Memory Card Slot	1 (SD compatible, up to 256 GB)
Connectivity	Bluetooth, Wi-Fi, USB, HDMI
Weight	495 Grams
Battery Included	Yes
Country of Origin	Thailand

7. WARRANTY INFORMATION

The Nikon Z 50II camera body comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included in your product packaging or visit the official Nikon support website.

8. SUPPORT AND DOWNLOADS

For further assistance, detailed operating instructions, and software downloads, please visit the official Nikon support website. You can also download the complete user manual in PDF format:

[Download Official User Manual
\(PDF\)](#)

For customer service inquiries, please contact Nikon customer support through their official channels.